 


Form 18507
August, 1931
PRINTED IN U. S. A.

LIST OF PARTS

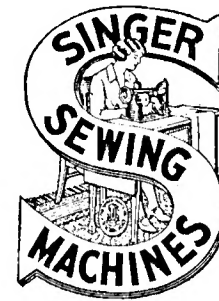

MACHINES

Nos. 57-2 to 57-4
and 57-14

THE SINGER MANUFACTURING COMPANY

COPYRIGHT, U. S. A., 1918, 1922 and 1931,
BY THE SINGER MANUFACTURING CO.
ALL RIGHTS RESERVED FOR ALL COUNTRIES

INDEX

| | PAGE |
|---|------|
| ATTACHMENTS AND ACCESSORIES..... | 30 |
| BOBBIN WINDER..... | 34 |
| DRIVING ATTACHMENT..... | 34 |
| FOOT LIFTER PARTS..... | 36 |
| IRON BASE..... | 30 |
| KNEE LIFTER PARTS..... | 37 |
| LAP SEAM FELLER PARTS..... | 31 |
| MACHINE No. 57-2 | 7 |
| " " 57-3 | 15 |
| " " 57-4 | 21 |
| " " 57-14..... | 26 |
| NUMERICAL LIST OF PARTS..... | 41 |
| OBSOLETE PARTS..... | 39 |
| SHIRT CLOSING PARTS (FOR MACHINE No. 57-2)..... | 33 |
| STAYING PARTS (FOR MACHINE No. 57-2)..... | 33 |
| THREAD UNWINDER..... | 38 |

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the part **NUMBER** in the **FIRST** column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A—Hardened, Polished, Nickel Plated and Buffed
- B—Polished, Nickel Plated and Buffed
- C—Hardened Only
- D—Polished Only
- E—Soft, Not Polished
- F—Hardened and Polished
- H—Blued
- J—Nickel Plated Only
- K—Hardened and Nickel Plated
- L—Brass Plated
- M—Oxidized
- N—Japanned, Dull
- P—Japanned, Bright
- R—Merlized
- T—Copper Plated
- T. A.—Hardened, Polished, Copper and Nickel Plated and Buffed
- T. B.—Copper and Nickel Plated and Polished
- T. J.—Copper and Nickel Plated Only
- T. K.—Hardened, Copper and Nickel Plated
- T. M.—Copper Plated and Oxidized
- T. L.—Copper and Brass Plated
- U—Zinc Plated
- V—Silver Plated
- W—Polished and Nickel Plated
- Z—Chromium Plated
- Z. B.—Polished, Nickel Plated, Buffed and Chromium Plated
- Z. J.—Nickel and Chromium Plated

These letters **MUST BE USED** when they appear in the list; and **AFTER** the number **as** in the list.

In this series:

- 1 to 1500 and 50001 to 51500 are Screw Numbers
- 1501 to 1800 and 51501 to 51800 are Nut Numbers
- 1801 to 2000 and 51801 to 52000 are Roller Numbers
- 2001 to 50000 and 52001 and upward are numbers of Machine Parts

 
The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

When ordering parts which differ as to **Gauge** (the distance between seams) the Gauge, as well as the **Number must be given** on order.

LIST OF PARTS COMPLETE

FOR

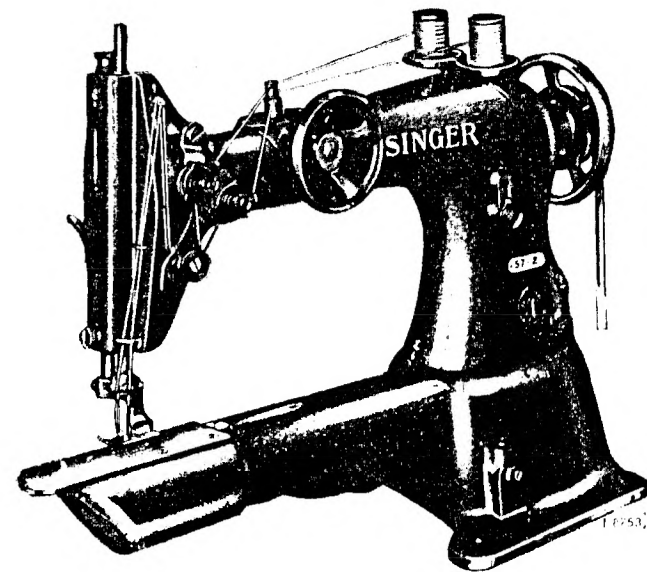

MACHINE No. 57-2

FOR CLOTH. TWO NEEDLES, TWO SHUTTLES; WIDEST GAUGE $\frac{1}{8}$ INCH, NARROWEST GAUGE $\frac{1}{32}$ INCH. DROP FEED UP THE ARM.

| NO. | PLATE | NAME |
|--------|-------|---|
| *21001 | — | Arm with 11101..... |
| 8582 | 1150 | " Dowel Pin..... |
| 12453 | 1150 | " Oil Tube for intermediate bearing.... |
| 12454 | 1150 | " " " " with 52045, for oiling 12409 |
| 11119 | 1150 | " " " " 52045, for oiling 19156 |
| 20502 | 1150 | " " " " 29599, for oiling 12496 |
| 29599 | 7429 | " " " Packing (felt) for 20502.... |
| 52045 | 7438 | " " " " (braided cotton) for 11119 and 12454..... |
| 748E | 1157 | Arm Screw (back)..... |
| 854E | 1159 | " " (front)..... |

| NO. | PLATE | NAME |
|--------|-------|--|
| 21002 | 1167 | Arm Shaft..... |
| *11104 | — | “ “ Bushing (front)..... |
| 12357 | 1142 | “ “ Flanged Bushing (back)..... |
| 448c | 1158 | “ “ “ “ “ Set Screw..... |
| 21026 | 1166 | “ “ Gear with 453c and 451c..... |
| 23724 | 7429 | “ “ “ Pin..... |
| 453c | 1158 | “ “ “ Position Screw..... |
| 454c | 1158 | “ “ “ Set Screw..... |
| 144b | 1157 | “ “ “ Screw..... |
| 12480 | 1143 | “ Side Cap..... |
| 219j | 1157 | “ “ “ Screw..... |
| 12193 | 1143 | “ “ Cover..... |
| 286b | 1158 | “ “ “ Thumb Screw..... |
| 21004 | 1140 | “ “ Wheel with two 450c..... |
| 23724 | 7429 | “ “ “ Pin..... |
| 450c | 1158 | “ “ “ Set Screw..... |
| 21005 | 1166 | “ “ “ Shaft..... |
| 21006 | 1166 | “ “ “ “ Collar with 449c..... |
| 23724 | 7429 | “ “ “ “ “ Pin..... |
| 449c | 1158 | “ “ “ “ “ Set Screw..... |
| 21027 | 1166 | “ “ “ “ “ Gear with 453c and 454c..... |
| 23724 | 7429 | Arm Side Wheel Shaft Gear Pin..... |
| 453c | 1158 | “ “ “ “ “ Position Screw..... |
| 454c | 1158 | “ “ “ “ “ Set Screw..... |
| 21008 | 1166 | “ “ “ “ “ Cover..... |
| 21009 | — | “ “ “ “ “ “ 21008 with 460c and 21019..... |
| 21010 | 1166 | Arm Side Wheel Shaft Gear Cover complete, Nos. 21009 and 21038..... |
| 219j | 1157 | Arm Side Wheel Shaft Gear Cover Screw..... |
| 2415 | 1140 | “ Spool Bracket..... |
| 15063 | 1140 | “ “ “ “ 2415 with two 12403..... |
| 145b | 7430 | “ “ “ “ Screw..... |
| 12403 | 1150 | “ “ “ “ Spool Pin and Thread Eyelet..... |
| 11241 | 1142 | Arm Spool Bracket Spool Pin Washer (cloth)..... |
| 12358 | 1140 | Balance Wheel (power) light rim, 2 $\frac{3}{16}$ in. pulley, with two 448c..... |
| 448c | 1158 | Balance Wheel Set Screw..... |
| 20197 | 1141 | Crank Connecting Rod with 20198 and two 896E..... |
| *20198 | — | Crank Connecting Rod Cap..... |
| 896E | 1157 | “ “ “ “ “ Screw..... |
| 908c | 1158 | “ “ “ “ “ Hinge Screw..... |
| 1619E | 1159 | “ “ “ “ “ Nut..... |

| NO. | PLATE | NAME |
|--------|-------|--|
| *21011 | — | Cylinder, 2 $\frac{3}{16}$ in. diam..... |
| 20644 | 1143 | “ “ Cover..... |
| 20505 | 1142 | “ “ Feed Cover..... |
| 219j | 1157 | “ “ “ “ Screw..... |
| 19301 | — | Face Plate..... |
| 19305 | 1143 | Face Plate complete, Nos. 19155, 19301 and 19327..... |
| 190b | 1157 | Face Plate Screw..... |
| 19327 | 7428 | “ “ Thread Guard (lower) with 12152..... |
| 12152 | 1150 | Face Plate Thread Guard (lower) Rivet..... |
| 19155 | 1150 | “ “ “ “ “ (upper) with 12152..... |
| 12152 | 1150 | Face Plate Thread Guard (upper) Rivet..... |
| 286b | 1158 | “ “ “ Thumb Screw..... |
| 3033 | 1145 | Feed Connecting Link..... |
| 375c | 1158 | “ “ “ “ “ Hinge Screw..... |
| 1518E | 1159 | “ “ “ “ “ “ Nut..... |
| 20630 | 1179 | “ Dog, 22 teeth (16 teeth to the inch) for $\frac{1}{16}$ in. to $\frac{3}{32}$ in. gauges..... |
| 20508 | 1152 | Feed Dog, 13 teeth (12 teeth to the inch) for $\frac{3}{32}$ in. to $\frac{5}{32}$ in. gauges..... |
| 20515 | 1152 | Feed Dog, 23 teeth (22 teeth to the inch) for $\frac{3}{32}$ in. to $\frac{5}{32}$ in. gauges..... |
| 20510 | 1152 | Feed Dog, 13 teeth (12 teeth to the inch) for $\frac{3}{32}$ in. to $\frac{5}{32}$ in. gauges (spiked teeth) for heavy work on duck, overalls, etc.... |
| 20509 | 1153 | Feed Dog, 13 teeth (12 teeth to the inch) for $\frac{1}{4}$ in. to $\frac{5}{16}$ in. gauges..... |
| 20511 | 1153 | Feed Dog, 13 teeth (12 teeth to the inch) for $\frac{1}{4}$ in. to $\frac{5}{16}$ in. gauges (spiked teeth) for heavy work on duck, overalls, etc.... |
| 20507 | 1151 | Feed Dog, 16 teeth (12 teeth to the inch) for $\frac{1}{4}$ in. to $\frac{5}{16}$ in. gauges..... |
| 20514 | 1175 | Feed Dog, 21 teeth (16 teeth to the inch) for $\frac{1}{4}$ in. to $\frac{5}{16}$ in. gauges..... |
| 20512 | 1151 | Feed Dog, 16 teeth (12 teeth to the inch) for $\frac{1}{4}$ in. to $\frac{5}{16}$ in. gauges (spiked teeth) for heavy work on duck, overalls, etc.... |
| 701c | 1157 | Feed Dog Screw..... |
| 3074 | 1142 | “ Eccentric with 446c..... |
| 446c | 1158 | “ “ “ Set Screw..... |
| 20518 | 1141 | “ Forked Connection with 20519 and two 175E..... |
| *20519 | — | Feed Forked Connection Cap..... |
| 175E | 1157 | “ “ “ “ “ Screw..... |
| 20520 | 1145 | “ Raising Fork..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 157E | 1157 | Feed Raising Fork Screw..... |
| 20521 | 1142 | " Regulator..... |
| 1128E | 7430 | " " Hinge Screw..... |
| 283D | 7430 | " " Thumb Screw..... |
| 20522 | 1141 | " Rock Shaft..... |
| 20523 | 1141 | " " " Arm with 460C..... |
| 2049 | 1150 | " " " " Pin..... |
| 460C | 1158 | " " " " Set Screw..... |
| 295C | 1158 | " " " " Screw Center..... |
| 1513J | 1159 | " " " " " Nut..... |
| 21012 | 1141 | " Rod..... |
| 923E | 1158 | " " Hinge Screw..... |
| 18014 | 1142 | Needle Bar (hollow)..... |
| 12382 | 1144 | " " Connecting Link with 794E... |
| 794E | 1144 | " " " " Adjusting Screw..... |
| *12383 | — | Needle Bar Connecting Stud..... |
| 12384 | 1144 | Needle Bar Connecting Stud complete, Nos. 453C, 1904 and 12383..... |
| 1904 | 1144 | Needle Bar Connecting Stud Roller (roller only)..... |
| 453C | 1158 | Needle Bar Connecting Stud Set Screw... |
| 20188 | 1142 | " " Crank with 858C and 1065C... |
| 1065C | 7430 | " " " Position Screw..... |
| 858C | 1158 | " " " Set Screw..... |
| 936E | 1158 | " " Screw Bushing..... |
| 20524 | 1150 | " Clamp with two 209F..... |
| 2273 | 1150 | " " Pin..... |
| 209F | 1157 | " Set Screw..... |
| 19386 | 1142 | Oscillating Rock Shaft..... |
| 19387 | — | Oscillating Rock Shaft complete, Nos. 4784, 12388 and 19386..... |
| 12388 | 1142 | Oscillating Rock Shaft Hinge Pin..... |
| 448C | 1158 | " " " " " Set Screw |
| 4784 | 1150 | " " " Oil Pad..... |
| 21013 | 1141 | " Shaft..... |
| 19496 | — | " Crank..... |
| 19388 | 1149 | Oscillating Shaft Crank complete, Nos. 457C, 1518E, 19390 and 19496..... |
| 2049 | 1150 | Oscillating Shaft Crank Pin..... |
| 457C | 7430 | " " " Set Screw..... |
| 19389 | 1149 | " " " Slide Block..... |
| 226E | 7438 | " " " " " Cap Screw |
| 12424 | 1149 | " " " " " " Washer..... |
| 969C | 1149 | Oscillating Shaft Crank Slide Block Screw Stud..... |

| NO. | PLATE | NAME |
|-------|-------|---|
| 1518E | 1159 | Oscillating Shaft Crank Slide Block Screw Stud Nut..... |
| 19390 | 1149 | Oscillating Shaft Crank Slide Block com- plete, Nos. 226E, 969C, 12424 and 19389 |
| 16015 | 1150 | Oscillating Shaft (back bearing) Oil Tube |
| 20563 | 1142 | Presser Bar (hollow)..... |
| 12326 | 1145 | " " Guide Bracket with 453C.... |
| 453C | 1158 | " " " " Set Screw.... |
| 2062 | 1145 | " " Lifter..... |
| 689C | 1157 | " " " Hinge Screw..... |
| 1520E | 1159 | " " " " Nut..... |
| 12327 | 1145 | " " Lifting and Releasing Lever Bracket..... |
| 11167 | 1142 | Presser Bar Spring (light) .051 wire..... |
| 12139 | 1142 | " " " (medium) .055 wire... |
| 20023 | 1142 | " " " (heavy) .063 wire..... |
| 11170 | 1150 | " " " Washer..... |
| 330J | 1158 | " Foot Clamping Screw..... |
| 20530 | 1150 | " " Hinge Pin..... |
| 20645 | — | " " Plate..... |
| 21016 | — | " " Shank..... |
| 20646 | 1156 | Presser Foot (hinged) complete, for staying seams, Nos. 330J, 20530, 20645 and 21016..... |
| 330J | 1158 | Presser Foot Clamping Screw..... |
| 20530 | 1150 | " " Hinge Pin..... |
| 20647 | — | " " Plate..... |
| 21016 | — | " " Shank..... |
| 20648 | 1156 | Presser Foot (hinged) complete, for strip folding, with guide for opening seams, Nos. 330J, 20530, 20647 and 21016..... |
| 330J | 1158 | Presser Foot Clamping Screw..... |
| 20530 | 1150 | " " Hinge Pin..... |
| 21015 | — | " " Plate..... |
| 21016 | — | " " Shank..... |
| 21014 | 1151 | Presser Foot (hinged) complete, for gen- eral work, Nos. 330J, 20530, 21015 and 21016..... |
| 21017 | 1156 | Presser Foot (solid) with 330J..... |
| 20711 | 1171 | " " (strip folding) with 330J.... |
| 20712 | 1171 | " " (tube) with 330J..... |
| 330J | 1158 | " " Clamping Screw..... |
| 20530 | 1150 | " " Hinge Pin..... |
| 20753 | — | " " Plate..... |
| 21016 | — | " " Shank..... |

| NO. | PLATE | NAME |
|-------|-------|---|
| 20754 | 1171 | Presser Foot (hinged) complete, with guide on bottom of plate to the right of needle holes, Nos. 330a, 20530, 20753 and 21016 |
| 330a | 1158 | Presser Foot Clamping Screw..... |
| 20530 | 1150 | " " Hinge Pin..... |
| 20776 | — | " " Plate..... |
| 21016 | — | " " Shank..... |
| 20777 | 7436 | Presser Foot (hinged) complete, with tube for tape and guide for opening seams, Nos. 330a, 20530, 20776 and 21016..... |
| 688j | 1158 | Pressure Regulating Thumb Screw..... |
| 19131 | 1148 | Shuttle (inside) Bobbin..... |
| 20774 | — | " " " Case..... |
| 20536 | 1148 | " " " " Latch and Position Finger..... |
| 2521 | 1148 | Shuttle (inside) Bobbin Case Latch and Position Finger Spring..... |
| 592E | 1148 | Shuttle (inside) Bobbin Case Latch and Position Finger Stop Screw..... |
| 20538 | 1147 | Shuttle (inside) Bobbin Case Position Plate |
| 935E | 1157 | " " " " " " " " Screw..... |
| 20533 | 1148 | Shuttle (inside) Bobbin Case complete, Nos. 591F, 592E, 2521, 19149, 20536 and 20774..... |
| 20540 | 1148 | Shuttle (inside) Body..... |
| 591F | 1148 | " " " Tension Regulating Screw |
| 19149 | 1148 | " " " Spring..... |
| 20531 | 1148 | " " " 1 1/8 in. diam., Nos. 19131, 20533 and 20540..... |
| 19131 | 1148 | Shuttle (outside) Bobbin..... |
| 20775 | — | " " " Case..... |
| 20537 | 1148 | " " " " Latch and Position Finger..... |
| 2521 | 1148 | Shuttle (outside) Bobbin Case Latch and Position Finger Spring..... |
| 592E | 1148 | Shuttle (outside) Bobbin Case Latch and Position Finger Stop Screw..... |
| 20539 | 1147 | Shuttle (outside) Bobbin Case Position Plate |
| 190D | 1157 | " " " " " " " " Screw..... |
| 20534 | 1148 | Shuttle (outside) Bobbin Case complete, Nos. 591F, 592E, 2521, 19150, 20537 and 20775..... |
| 19137 | 1148 | Shuttle (outside) Body..... |
| 591F | 1148 | " " " Tension Regulating Screw |
| 19150 | 1148 | " " " Spring..... |

| NO. | PLATE | NAME |
|--------|-------|--|
| 20532 | 1148 | Shuttle (outside) 1 1/8 in. diam., Nos. 19131, 19137 and 20534..... |
| 20783 | 7436 | Shuttle Driver and Feed Lifting Eccentric |
| 2019 | 1150 | " " " " " " " " Pin..... |
| 20544 | — | Shuttle Race Body..... |
| 20545 | 1147 | " " " Loop Separator..... |
| 662D | 1158 | " " " " " Screw..... |
| 20543 | 1147 | Shuttle Race complete, Nos. 935E, 20538, 20539, 20544, 20545 and two each 190D and 662D..... |
| 131E | 1157 | Shuttle Race Screw..... |
| 2921 | 1146 | Tension Disc..... |
| 19191 | 1146 | " Plate, for upper tension, with 19231..... |
| 134D | 1157 | Tension Plate Screw..... |
| 1560C | 1146 | " Regulating Thumb Nut..... |
| 19192 | 1146 | " Releaser..... |
| 12397 | 1145 | " Releasing Lever..... |
| 12398 | 1145 | " " " Hinge Pin..... |
| 12329 | 1145 | " " " Spring..... |
| 19193 | 1146 | " " " (intermediate)... |
| 19231 | 1146 | " " " " Hinge Block..... |
| 2269 | 1146 | Tension Releasing Lever (intermediate) Hinge Pin..... |
| 19194 | 1146 | Tension Releasing Lever (intermediate) Spring..... |
| 916C | 1146 | Tension Screw Stud..... |
| 44209 | — | " " " 916C with 1560C..... |
| 1547D | 1146 | " " " Nut..... |
| 2923 | 1146 | " Spring..... |
| 12149 | 1150 | " Thread Guard..... |
| 19195 | 1146 | Tension complete (upper) with Tension Release, Nos. 2269, 19191, 19193, 19194, two each 1547D, 2923, 19192, 44209 and four 2921..... |
| 19159 | 1149 | Thread Guide Body..... |
| 19161 | 1149 | " " Cap..... |
| 19160 | 1149 | " " Roller..... |
| 905D | 1157 | " " Screw..... |
| 19162 | — | Thread Guide complete (roller) Nos. 905D and 19159 to 19161..... |
| 21019 | 1166 | Thread Retainer Body..... |
| 460C | 1158 | " " Set Screw..... |
| 21020 | 1166 | " " Thread Separator..... |
| 210958 | 7428 | " Retaining Collar..... |

| NO. | PLATE | NAME |
|--------|-------|--|
| 210993 | 7428 | Thread Retaining Sleeve..... |
| 210992 | 7428 | " " Spring..... |
| 21037 | 7428 | " " Stud..... |
| 21038 | — | Thread Retainer complete, Nos. 21020, 21037, 210958, 210992 and 210993..... |
| 24129 | 1144 | Thread Take-up Crank..... |
| 3094 | 1144 | " " " Wedge..... |
| 690E | 1144 | " " " " Screw.... |
| 19156 | 1144 | " " " Lever..... |
| 775E | 1144 | " " " Cap Screw..... |
| 12166 | 1144 | " " " Hinge Pin..... |
| 12409 | 1144 | " " " Link..... |
| 11204 | 1144 | " " " " Hinge Pin... |
| 430c | 1144 | " " " " " "Set Screw..... |
| 19157 | 1144 | Thread Take-up Lever complete, Nos. 12166, 12409 and 19156..... |
| 19158 | 1150 | Thread Take-up Spring..... |
| 7336 | 1149 | " " " " Regulator..... |
| 448c | 1158 | " " " " " Set Screw |
| 20552 | 1175 | Throat Plate for 20507, 20512 and 20514 |
| 20553 | 1176 | " " " 20508, 20510 and 20515 |
| 20554 | 1176 | " " " 20509 and 20511..... |
| 20751 | 1178 | " " " 20630..... |
| 691F | 1158 | " " " Screw..... |
| 20561 | 1164 | Drip Pan..... |

Genuine Singer Needles and their Containers are marked with the Company's Trade Mark "SIMANCO." 1

Needles in Containers marked "For Singer Machines" are not Singer made needles. 2

LIST OF PARTS COMPLETE

FOR

MACHINE No. 57-3

FOR CLOTH. ONE NEEDLE; DROP FEED UP THE ARM;
FEED BOTH SIDES OF THE NEEDLE

| NO. | PLATE | NAME |
|--------|-------|--|
| *21022 | — | Arm with 11104..... |
| 8582 | 1150 | " Dowel Pin..... |
| 12453 | 1150 | " Oil Tube for intermediate bearing... |
| 12154 | 1150 | " " " with 52015, for oiling 12409 |
| 11119 | 1150 | " " " " " " 12408 |
| 20502 | 1150 | " " " " 20599, for oiling 20197 |
| 20599 | 7429 | " " " Packing (felt) for 20502... |
| 52015 | 7438 | " " " " (braided cotton) for 11119 and 12154..... |
| 748E | 1157 | Arm Screw (back)..... |
| 868E | 1157 | " " (front)..... |
| 21002 | 1167 | " Shaft..... |
| *11104 | — | " " Bushing (front)..... |
| 12357 | 1142 | " " Flanged Bushing (back)..... |
| 448c | 1158 | " " " " " Set Screw |
| 21026 | 1166 | " " Gear with 453c and 454c.... |
| 23724 | 7429 | " " " Pin..... |
| 453c | 1158 | " " " Position Screw..... |
| 454c | 1158 | " " " Set Screw..... |
| 141b | 1157 | " " Screw..... |
| 12480 | 1143 | " Side Cap..... |
| 219J | 1157 | " " " Screw..... |
| 12193 | 1143 | " " Cover..... |
| 286b | 1158 | " " " Thumb Screw..... |
| 21004 | 1140 | " " Wheel with two 450c..... |
| 23724 | 7429 | " " " Pin..... |
| 450c | 1158 | " " " Set Screw..... |
| 21005 | 1166 | " " " Shaft..... |
| 21006 | 1166 | " " " " Collar with 449c.. |
| 23724 | 7429 | " " " " " Pin..... |
| 449c | 1158 | " " " " " Set Screw.. |
| 21027 | 1166 | " " " " " Gear with 453c and 454c..... |
| 23724 | 7429 | Arm Side Wheel Shaft Gear Pin..... |
| 453c | 1158 | " " " " " Position Screw..... |
| 454c | 1158 | Arm Side Wheel Shaft Gear Set Screw... |
| 21023 | 1170 | " " " " " Cover..... |
| 219J | 1157 | " " " " " " Screw |

| NO. | PLATE | NAME |
|--------|-------|---|
| 12403 | 1150 | Arm Spool Pin and Thread Eyelet..... |
| 11241 | 1142 | “ “ “ Washer (cloth)..... |
| 12358 | 1140 | Balance Wheel (power) light rim, 2 $\frac{3}{16}$ in. pulley, with two 448C..... |
| 448C | 1158 | Balance Wheel Set Screw..... |
| 20197 | 1141 | Crank Connecting Rod with 20198 and two 896E..... |
| *20198 | — | Crank Connecting Rod Cap..... |
| 896E | 1157 | “ “ “ “ Screw..... |
| 908C | 1158 | “ “ “ Hinge Screw..... |
| 1619E | 1159 | “ “ “ “ Nut.. |
| *21024 | — | Cylinder, 2 $\frac{1}{16}$ in. diam..... |
| 20641 | 1143 | “ Cover..... |
| 20505 | 1142 | “ Feed Cover..... |
| 219J | 1157 | “ “ “ Screw..... |
| 12366 | — | Face Plate..... |
| 12367 | 1170 | Face Plate complete, Nos. 2827, 12150 and 12366..... |
| 190D | 1157 | Face Plate Screw..... |
| 12150 | 7428 | “ “ Thread Guard (lower) with 12152..... |
| 12152 | 1150 | Face Plate Thread Guard (lower) Rivet.. |
| 2827 | 7428 | “ “ “ “ (upper) with 8505..... |
| 8505 | 7428 | Face Plate Thread Guard (upper) Rivet.. |
| 286D | 1158 | “ “ Thumb Screw..... |
| 3033 | 1145 | Feed Connecting Link..... |
| 375C | 1158 | “ “ “ Hinge Screw..... |
| 1518E | 1159 | “ “ “ “ “ Nut.. |
| 20656 | 1189 | “ Dog, 18 teeth (16 teeth to the inch) for shirt work..... |

NOTE: Feed Dog No. 20656 is sent with this machine
unless another Feed Dog is specified on order

| | | |
|--------|------|--|
| 20662 | 1190 | Feed Dog, 15 teeth (16 teeth to the inch) for tailor work..... |
| 20664 | 1191 | Feed Dog, 13 teeth (14 teeth to the inch) for shirt work |
| 20685 | 1193 | Feed Dog, 20 teeth (16 teeth to the inch) for overall work..... |
| 704C | 1157 | Feed Dog Screw..... |
| 3074 | 1142 | " Eccentric with 446C..... |
| 446C | 1158 | " " Set Screw..... |
| 20518 | 1141 | " Forked Connection with 20519 and two 175E..... |
| *20519 | — | Feed Forked Connection Cap..... |
| 175E | 1157 | " " " " Screw..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 20520 | 1145 | Feed Raising Fork..... |
| 701C | 1157 | “ “ “ Screw..... |
| 20521 | 1142 | “ Regulator..... |
| 1128E | 7430 | “ “ “ Hinge Screw..... |
| 283D | 7430 | “ “ “ Thumb Screw..... |
| 20522 | 1141 | “ Rock Shaft..... |
| 20523 | 1141 | “ “ “ Arm with 460C..... |
| 2049 | 1150 | “ “ “ “ Pin..... |
| 460C | 1158 | “ “ “ “ Set Screw..... |
| 295C | 1158 | “ “ “ “ Screw Center..... |
| 1513J | 1159 | “ “ “ “ “ Nut..... |
| 21012 | 1141 | “ Rod..... |
| 923E | 1158 | “ “ “ Hinge Screw..... |
| 12381 | 1170 | Needle Bar (hollow)..... |
| 12382 | 1144 | “ “ “ Connecting Link with 794E... |
| 794E | 1144 | “ “ “ “ “ Adjusting Screw..... |
| *12383 | ----- | Needle Bar Connecting Stud..... |
| 1904 | 1144 | “ “ “ “ “ Roller (roller only)..... |
| 453C | 1158 | Needle Bar Connecting Stud Set Screw... |
| 12384 | 1144 | Needle Bar Connecting Stud complete, Nos. 453C, 1904 and 12383..... |
| 20188 | 1142 | Needle Bar Crank with 858C and 1065C... |
| 1065C | 7430 | “ “ “ “ “ Position Screw..... |
| 858C | 1158 | “ “ “ “ “ Set Screw..... |
| 936E | 1158 | “ “ “ “ “ Screw Bushing..... |
| 4302 | 7428 | “ “ “ “ “ Thread Guide..... |
| 233J | 987 | “ “ “ “ “ Screw..... |
| 4303 | 7428 | “ “ “ “ “ Clamp with 808F..... |
| 808F | 7430 | “ “ “ “ “ Screw..... |
| 19386 | 1142 | Oscillating Rock Shaft..... |
| 19387 | --- | Oscillating Rock Shaft complete, Nos. 4784, 12388 and 19386..... |
| 12388 | 1112 | Oscillating Rock Shaft Hinge Pin..... |
| 448C | 1158 | “ “ “ “ “ “ Set Screw |
| 4784 | 1150 | “ “ “ “ “ “ Oil Pad..... |
| 21013 | 1141 | “ “ “ “ “ Shaft..... |
| 20749 | --- | “ “ “ “ “ Crank..... |
| 20750 | 7427 | Oscillating Shaft Crank complete, Nos. 219C, 1518E, 19390 and 20749..... |
| 2049 | 1150 | Oscillating Shaft Crank Pin..... |
| 219C | 1157 | “ “ “ “ “ Set Screw..... |
| 19389 | 1149 | “ “ “ “ “ Slide Block..... |
| 226E | 7438 | “ “ “ “ “ “ Cap Screw..... |

| NO. | PLATE | NAME |
|-------|-------|--|
| 12424 | 1149 | Oscillating Shaft Crank Slide Block Cap Screw Washer..... |
| 969c | 1149 | Oscillating Shaft Crank Slide Block Screw Stud..... |
| 1518E | 1159 | Oscillating Shaft Crank Slide Block Screw Stud Nut..... |
| 19390 | 1149 | Oscillating Shaft Crank Slide Block complete, Nos. 226E, 969c, 12424 and 19389 |
| 16045 | 1150 | Oscillating Shaft (back bearing) Oil Tube |
| 12391 | 1170 | Presser Bar (hollow)..... |
| 12326 | 1145 | " " Guide Bracket with 453c.... |
| 453c | 1158 | " " " " Set Screw.... |
| 2062 | 1145 | " " Lifter..... |
| 689c | 1157 | " " " Hinge Screw..... |
| 1520E | 1159 | " " " " Nut..... |
| 12327 | 1145 | " " Lifting and Releasing Lever Bracket..... |
| 11167 | 1142 | Presser Bar Spring (light) .051 wire..... |
| 12139 | 1142 | " " " (medium) .055 wire.... |
| 20023 | 1142 | " " " (heavy) .063 wire..... |
| 11170 | 1150 | " " " Washer..... |
| 20589 | 1193 | " Foot for 20662 and 20685..... |
| 20625 | 7426 | " " 20656 and 20661..... |
| 190b | 1157 | " " Screw..... |

NOTE: Presser Foot No. 20625 is sent with this Machine unless another Presser Foot is specified on order

| | | |
|-------|------|--|
| 688J | 1158 | Pressure Regulating Thumb Screw..... |
| 19131 | 5737 | Shuttle Bobbin..... |
| 20713 | 4320 | " " Case Guide Plate..... |
| 399J | 4320 | " " " " " Screw.. |
| 20650 | — | " " " Hinge, Nos. 2973, 2974 and 20619..... |
| 20649 | 5737 | Shuttle Bobbin Case Latch..... |
| 2973 | 5737 | " " " " Lever..... |
| 2974 | 5737 | " " " " " Fulcrum Pin..... |
| 2975 | 5737 | Shuttle Bobbin Case Latch Spring..... |
| 592E | 5737 | " " " " Stop Screw.... |
| 20755 | 5737 | " " " Position Finger..... |
| 2523 | 5737 | " " " " " Rivet |
| 20756 | 5737 | Shuttle Bobbin Case complete, Nos. 591E, 592E, 2523, 2975, 20650, 20654 and 20755..... |

| NO. | PLATE | NAME |
|--------|-------|--|
| 20757 | 5737 | Shuttle Body..... |
| 591F | 5737 | " Tension Regulating Screw..... |
| 20654 | 5737 | " " Spring..... |
| 20758 | 5737 | Shuttle, 1 1/4 in. diam., Nos. 19131, 20756 and 20757..... |
| 20624 | 7427 | Shuttle Driver and Feed Lifting Eccentric |
| 2049 | 1150 | " " " " " " " Pin..... |
| 20716 | — | Shuttle Race Body..... |
| 20714 | 4320 | " " Cap..... |
| 934b | 4320 | " " " Screw..... |
| 20718 | 7427 | Shuttle Race complete (steel) Nos. 20713, 20714, 20716 and two each 399J and 934b..... |
| 131E | 1157 | Shuttle Race Screw..... |
| 2102 | 7428 | Tension Disc..... |
| 1560c | 1146 | " Regulating Thumb Nut..... |
| 32572 | 7428 | " Releasing Disc..... |
| 43914 | 7428 | " " Lever..... |
| 12398 | 1145 | " " " Hinge Pin..... |
| 12320 | 1145 | " " " Spring..... |
| 32574 | 7428 | " " Pin..... |
| 50327c | 7428 | " Screw Stud..... |
| 44141 | — | " " " 50327c with 1560c... |
| 43915 | 7428 | " Spring..... |
| 12149 | 1150 | " Thread Guard..... |
| 210958 | 7428 | Thread Retaining Collar..... |
| 210993 | 7428 | " " Sleeve..... |
| 52398 | 7428 | " " Spring..... |
| 52378 | 7428 | " " Stud..... |
| 460c | 1158 | " " " Set Screw..... |
| 52379 | — | Thread Retainer complete, Nos. 52378, 52398, 210958 and 210993..... |
| 12104 | 7428 | Thread Take-up Crank..... |
| 3094 | 1144 | " " " Wedge..... |
| 690E | 1144 | " " " " Screw..... |
| 12408 | 7428 | " " Lever..... |
| 775E | 1144 | " " " Cap Screw..... |
| 12166 | 1144 | " " " Hinge Pin..... |
| 12409 | 1144 | " " " Link..... |
| 11204 | 1144 | " " " " Hinge Pin... |
| 435c | 7430 | " " " " " " " Set Screw..... |
| 12410 | — | Thread Take-up Lever complete, Nos. 12166, 12408 and 12409..... |

| NO. | PLATE | NAME |
|-------|-------|-----------------------------|
| 19158 | 1150 | Thread Take-up Spring..... |
| 7336 | 1149 | " " " Regulator..... |
| 448c | 1158 | " " " " Set Screw |
| 20657 | 1189 | Throat Plate for 20656..... |

NOTE: Throat Plate No. 20657 is sent with this machine, unless another Throat Plate is specified on order

| | | |
|-------|------|----------------------------------|
| 20663 | 1190 | Throat Plate for 20662..... |
| 20665 | 1191 | " " large needle hole, for 20664 |
| 20666 | — | " " small needle hole, for 20661 |
| 20686 | 1193 | " " for 20685..... |
| 691f | 1158 | " " Screw..... |
| 20561 | 1164 | Drip Pan..... |

Genuine Singer Needles and their Containers are marked with the Company's Trade Mark "SIMANCO." 1

Needles in Containers marked "For Singer Machines" are not Singer made needles. 2

LIST OF PARTS COMPLETE

FOR

MACHINE No. 57-4

FOR CLOTHING, ETC. ONE NEEDLE; HAS EXTENDED THROAT PLATE FOR USE WITH UNIVERSAL FELLING ATTACHMENT; DROP FEED UP THE ARM.

| NO. | PLATE | NAME |
|--------|-------|--|
| *21022 | — | Arm with 11104..... |
| 8582 | 1150 | " Dowel Pin..... |
| 12453 | 1150 | " Oil Tube for intermediate bearing... |
| 12454 | 1150 | " " " with 52045, for oiling 12409 |
| 11119 | 1150 | " " " " 52045, for oiling 12408 |
| 20502 | 1150 | " " " " 29599, for oiling 20197 |
| 29599 | 7429 | " " " Packing (felt) for 20502... |
| 52045 | 7438 | " " " " (braided cotton) |
| | | for 11119 and 12454..... |
| 748E | 1157 | Arm Screw (back)..... |
| 868B | 1157 | " " (front)..... |
| 21002 | 1167 | " Shaft..... |
| *11104 | — | " " Bushing (front)..... |
| 12357 | 1142 | " " Flanged Bushing (back)..... |
| 448c | 1158 | " " " " Set Screw |
| 21026 | 1166 | " " Gear with 453c and 454c..... |
| 23724 | 7429 | " " " Pin..... |
| 453c | 1158 | " " " Position Screw..... |
| 454c | 1158 | " " " Set Screw..... |
| 144b | 1157 | " " Screw..... |
| 12480 | 1143 | " Side Cap..... |
| 219J | 1157 | " " " Screw..... |
| 12193 | 1143 | " " Cover..... |
| 286b | 1158 | " " " Thumb Screw..... |
| 21004 | 1140 | " " Wheel with two 450c..... |
| 23724 | 7429 | " " " Pin..... |
| 450c | 1158 | " " " Set Screw..... |
| 21005 | 1166 | " " " Shaft..... |
| 21006 | 1166 | " " " " Collar with 449c.. |
| 23724 | 7429 | " " " " " Pin..... |
| 449c | 1158 | " " " " " Set Screw.. |
| 21027 | 1166 | " " " " " Gear with 453c and |
| | | 454c..... |
| 23724 | 7429 | Arm Side Wheel Shaft Gear Pin..... |
| 453c | 1158 | " " " " " Position |
| | | Screw..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 454c | 1158 | Arm Side Wheel Shaft Gear Set Screw.... |
| 21023 | 1170 | " " " " " Cover..... |
| 219J | 1157 | " " " " " " Screw |
| 12403 | 1150 | " Spool Pin and Thread Eyelet |
| 11241 | 1142 | " " " Washer (cloth)..... |
| 12358 | 1140 | Balance Wheel (power) light rim, 2 $\frac{3}{16}$ in. pulley, with two 448c..... |
| 448c | 1158 | Balance Wheel Set Screw..... |
| 20197 | 1141 | Crank Connecting Rod with 20198 and two 896E..... |
| *20198 | — | Crank Connecting Rod Cap..... |
| 896E | 1157 | " " " " " Screw..... |
| 908c | 1158 | " " " " " Hinge Screw..... |
| 1619E | 1159 | " " " " " Nut..... |
| *21024 | — | Cylinder, 2 $\frac{7}{16}$ in. diam..... |
| 21040 | 7425 | " Cover..... |
| 20505 | 1142 | " Feed Cover..... |
| 219J | 1157 | " " " " " Screw..... |
| 12366 | — | Face Plate..... |
| 12367 | 1170 | Face Plate complete, Nos. 2827, 12150 and 12366..... |
| 190D | 1157 | Face Plate Screw..... |
| 12150 | 7428 | " " " Thread Guard (lower) with 12152..... |
| 12152 | 1150 | Face Plate Thread Guard (lower) Rivet... |
| 2827 | 7428 | " " " " " (upper) with 8505..... |
| 8505 | 7428 | Face Plate Thread Guard (upper) Rivet... |
| 286D | 1158 | " " " Thumb Screw..... |
| 3033 | 1145 | Feed Connecting Link..... |
| 375c | 1158 | " " " " " Hinge Screw..... |
| 1518E | 1159 | " " " " " " Nut..... |
| 20685 | 1193 | " " " Dog, 20 teeth (16 teeth to the inch) |
| 704c | 1157 | " " " " " Screw..... |
| 3074 | 1142 | " Eccentric with 446c..... |
| 446c | 1158 | " " " Set Screw..... |
| 20518 | 1141 | " Forked Connection with 20519 and two 175E..... |
| *20519 | — | Feed Forked Connection Cap..... |
| 175E | 1157 | " " " " " " Screw..... |
| 20520 | 1145 | " " " Raising Fork..... |
| 704c | 1157 | " " " " " Screw..... |
| 20521 | 1142 | " " " Regulator..... |
| 1128E | 7430 | " " " " " Hinge Screw..... |
| 283D | 7430 | " " " " " Thumb Screw..... |
| 20522 | 1141 | " " " Rock Shaft..... |
| 20523 | 1141 | " " " " " Arm with 460c..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 2049 | 1150 | Feed Rock Shaft Arm Pin..... |
| 460c | 1158 | " " " " " Set Screw..... |
| 295c | 1158 | " " " " " Screw Center..... |
| 1513J | 1159 | " " " " " " Nut..... |
| 21012 | 1141 | " " " Rod..... |
| 923E | 1158 | " " " " " Hinge Screw..... |
| 21041 | 1170 | Needle Bar (hollow) with 857n..... |
| 12382 | 1144 | " " " " " Connecting Link with 794E... |
| 794E | 1111 | " " " " " " Adjusting Screw..... |
| *12383 | — | Needle Bar Connecting Stud |
| 1901 | 1141 | " " " " " " Roller (roller only)..... |
| 453c | 1158 | Needle Bar Connecting Stud Set Screw... |
| 12381 | 1141 | Needle Bar Connecting Stud complete, Nos. 453c, 1904 and 12383..... |
| 20188 | 1142 | Needle Bar Crank with 858c and 1065c |
| 1065c | 7430 | " " " " " Position Screw..... |
| 858c | 1158 | " " " " " Set Screw..... |
| 936E | 1158 | " " " " " Screw Bushing..... |
| 857H | 7430 | " " " " " Set Screw..... |
| 19386 | 1142 | Oscillating Rock Shaft..... |
| 19387 | — | Oscillating Rock Shaft complete, Nos. 4784, 12388 and 19386..... |
| 12388 | 1112 | Oscillating Rock Shaft Hinge Pin |
| 118c | 1158 | " " " " " " Set Screw |
| 4784 | 1150 | " " " " " " Oil Pad..... |
| 21013 | 1141 | " " " " " Shaft..... |
| 19496 | — | " " " " " Crank..... |
| 19388 | 1149 | Oscillating Shaft Crank complete, Nos. 457c, 1518E, 19390 and 19496..... |
| 2019 | 1150 | Oscillating Shaft Crank Pin..... |
| 457c | 7430 | " " " " " " Set Screw..... |
| 19389 | 1149 | " " " " " " Slide Block..... |
| 226E | 7438 | " " " " " " " Cap Screw..... |
| 12421 | 1149 | Oscillating Shaft Crank Slide Block Cap Screw Washer..... |
| 969c | 1149 | Oscillating Shaft Crank Slide Block Screw Stud..... |
| 1518E | 1159 | Oscillating Shaft Crank Slide Block Screw Stud Nut..... |
| 19390 | 1149 | Oscillating Shaft Crank Slide Block com- plete, Nos. 226E, 969c, 12424 and 19389 |
| 16015 | 1150 | Oscillating Shaft (back bearing) Oil Tube. |

| NO. | PLATE | NAME |
|-------|-------|--|
| 20563 | 1142 | Presser Bar (hollow)..... |
| 21042 | 7428 | " " Extension with two 202F ... |
| 202F | 7430 | " " " Clamping Screw... |
| 21043 | 7428 | " " " Foot Bar..... |
| 12326 | 1145 | " " Guide Bracket with 453c.... |
| 453C | 1158 | " " " " Set Screw.... |
| 2062 | 1145 | " " Lifter..... |
| 689C | 1157 | " " " Hinge Screw..... |
| 1520E | 1159 | " " " " " Nut..... |
| 12327 | 1145 | " " Lifting and Releasing Lever Bracket..... |
| 11167 | 1142 | Presser Bar Spring (light) .051 wire |
| 12139 | 1142 | " " " (medium) .055 wire... |
| 20023 | 1142 | " " " (heavy) .063 wire..... |
| 11170 | 1150 | " " " Washer..... |
| 7298 | 7429 | " Foot Hinge Pin..... |
| 19334 | — | " " Plate..... |
| 19335 | — | " " Shank..... |
| 19336 | 7426 | Presser Foot (hinged) complete, Nos. 7298, 19334 and 19335..... |
| 190D | 1157 | Presser Foot Screw..... |
| 688J | 1158 | Pressure Regulating Thumb Screw..... |
| 19131 | 5737 | Shuttle Bobbin..... |
| 20713 | 4320 | " " Case Guide Plate..... |
| 399J | 4320 | " " " " " Screw... |
| 20650 | — | " " " Hinge, Nos. 2973, 2974 and 20649..... |
| 20649 | 5737 | Shuttle Bobbin Case Latch..... |
| 2973 | 5737 | " " " " Lever..... |
| 2974 | 5737 | " " " " " Fulcrum Pin..... |
| 2975 | 5737 | Shuttle Bobbin Case Latch Spring..... |
| 592E | 5737 | " " " " Stop Screw... |
| 20755 | 5737 | " " " Position Finger..... |
| 2523 | 5737 | " " " " " Rivet |
| 20756 | 5737 | Shuttle Bobbin Case complete, Nos. 591E, 592E, 2523, 2975, 20650, 20654 and 20755..... |
| 20757 | 5737 | Shuttle Body..... |
| 591E | 5737 | " Tension Regulating Screw..... |
| 20654 | 5737 | " " Spring..... |
| 20758 | 5737 | " 1 $\frac{1}{8}$ in. diam., Nos. 19131, 20756 and 20757..... |
| 20621 | 7427 | Shuttle Driver and Feed Lifting Eccentric |
| 2049 | 1150 | " " " " " " " |
| | | Pin..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 20715 | - - | Shuttle Race Body..... |
| 20714 | 4320 | " " Cap..... |
| 931b | 4320 | " " " Screw..... |
| 20717 | 4320 | Shuttle Race complete (steel) Nos. 20713 to 20715 and two each 399J and 931b.. |
| 131E | 1157 | Shuttle Race Screw..... |
| 2102 | 7128 | Tension Disc..... |
| 1560c | 1146 | " Regulating Thumb Nut..... |
| 32572 | 7428 | " Releasing Disc..... |
| 43941 | 7428 | " " Lever..... |
| 12398 | 1115 | " " " Hinge Pin..... |
| 12329 | 1115 | " " " Spring..... |
| 32574 | 7428 | " " Pin..... |
| 50327c | 7428 | " Screw Stud..... |
| 44141 | ----- | " " " 50327c with 1560c..... |
| 43945 | 7428 | " Spring..... |
| 12149 | 1150 | " Thread Guard..... |
| 210958 | 7128 | Thread Retaining Collar..... |
| 210993 | 7428 | " " Sleeve..... |
| 52398 | 7428 | " " Spring..... |
| 52378 | 7428 | " " Stud..... |
| 460c | 1158 | " " " Set Screw..... |
| 52379 | ----- | Thread Retainer complete, Nos. 52378, 52398, 210958 and 210993..... |
| 12404 | 7428 | Thread Take-up Crank..... |
| 3094 | 1144 | " " " Wedge..... |
| 690E | 1144 | " " " " Screw..... |
| 12408 | 7428 | " " " Lever..... |
| 775E | 1144 | " " " Cap Screw..... |
| 12166 | 1144 | " " " Hinge Pin..... |
| 12409 | 1144 | " " " Link..... |
| 11204 | 1144 | " " " " Hinge Pin..... |
| 435c | 7430 | " " " " " " " " " " " " |
| | | Set Screw..... |
| 12110 | ----- | Thread Take-up Lever complete, Nos. 12166, 12108 and 12109..... |
| 19158 | 1150 | Thread Take-up Spring..... |
| 7336 | 1149 | " " " Regulator..... |
| 448c | 1158 | " " " " Set Screw..... |
| 21044 | 7425 | Throat Plate for 20685..... |
| 691F | 1158 | " " " Screw..... |
| 20561 | 1164 | Drip Pan..... |

LIST OF PARTS COMPLETE

FOR

MACHINE No. 57-14

FOR CLOTH; ONE NEEDLE; DROP FEED ACROSS THE
ARM; FEED AT LEFT OF NEEDLE

| NO. | PLATE | NAME |
|--------|-------|---|
| *12355 | — | Arm with 11104..... |
| 8582 | 1150 | " Dowel Pin..... |
| 12453 | 1150 | " Oil Tube for intermediate bearing .. |
| 12454 | 1150 | " " " with 52045, for oiling 12409 |
| 11119 | 1150 | " " " " 52015, for oiling 12108 |
| 20502 | 1150 | " " " " 29599, for oiling 20197 |
| 29599 | 7429 | " " " Packing (felt) for 20502... |
| 52045 | 7438 | " " " " (braided cotton) |
| | | for 11119 and 12154 |
| 748E | 1157 | Arm Screw (back)..... |
| 868E | 1157 | " " (front)..... |
| 12427 | 7434 | " Shaft..... |
| *11104 | — | " " Bushing (front)..... |
| 12357 | 1142 | " " Flanged Bushing (back)..... |
| 448c | 1158 | " " " " " " S e t |
| | | Screw..... |
| 144D | 1157 | Arm Shaft Screw..... |
| 12480 | 1143 | " Side Cap..... |
| 219J | 1157 | " " " Screw..... |
| 12193 | 1143 | " " Cover..... |
| 286D | 1158 | " " " Thumb Screw..... |
| 12403 | 1150 | " Spool Pin and Thread Eyelet..... |
| 11241 | 1142 | " " " Washer (cloth)..... |
| 12358 | 1140 | Balance Wheel, light rim, 2 1/8 in. pulley, with two 448c..... |
| 448c | 1158 | Balance Wheel Set Screw..... |
| 20564 | 7434 | Cloth Plate..... |
| 20565 | — | Cloth Plate complete, Nos. 3286, 20561, 20568 and two 240j..... |
| 20566 | — | Cloth Plate with Bracket complete, Nos. 20565, 20567 and two 389F..... |
| 20567 | 7435 | Cloth Plate Bracket with 345C..... |
| 345C | 7437 | " " " " " " S e t |
| 389F | 7438 | " " " " " " S e t |
| 20568 | 7435 | " " " " " " S e t |
| 3286 | 7437 | " " " " " " S e t |
| 240j | 7438 | " " " " " " S e t |
| 20197 | 1141 | Crank Connecting Rod with 20198 and two 896E..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| *20198 | — | Crank Connecting Rod Cap..... |
| 896E | 1157 | " " " " " " Screw..... |
| 908c | 1158 | " " " " " " Hinge Screw..... |
| 1619E | 1159 | " " " " " " Nut... |
| *21029 | — | Cylinder, 2 1/8 in. diam..... |
| 12366 | — | Face Plate..... |
| 12367 | 1170 | Face Plate complete, Nos. 2827, 12150 and 12366..... |
| 190D | 1157 | Face Plate Screw..... |
| 12150 | 7428 | " " Thread Guard (lower) with 12152..... |
| 12152 | 1150 | Face Plate Thread Guard (lower) Rivet.. |
| 2827 | 7428 | " " " " " (upper) with 8505 |
| 8505 | 7128 | Face Plate Thread Guard (upper) Rivet.. |
| 286D | 1158 | " " Thumb Screw..... |
| 3032 | 7437 | Feed Cam with 446c..... |
| 446c | 1158 | " " Set Screw..... |
| 3033 | 1145 | " Connecting Link..... |
| 375c | 1158 | " " " " " Hinge Screw..... |
| 1518E | 1159 | " " " " " " Nut... |
| 20573 | 7132 | " Dog, 13 teeth (18 teeth to the inch) for shirt work..... |
| 20577 | 7433 | Feed Dog, 12 teeth (18 teeth to the inch) |
| | | NOTE: Feed Dog No. 20577 is sent with this Machine, unless another Feed Dog is specified on order |
| 20579 | 7432 | Feed Dog, 13 teeth (18 teeth to the inch) for shirt work..... |
| 20701 | 7437 | Feed Dog Carrier..... |
| 225c | 7138 | " " " " " " Screw..... |
| 20581 | 7135 | " Forked Connection..... |
| 375c | 1158 | " " " " " " Hinge Screw..... |
| 1518E | 1159 | " " " " " " " " Nut |
| 20521 | 1142 | " Regulator..... |
| 1128E | 7430 | " " " " " " Hinge Screw..... |
| 283D | 7430 | " " " " " " Thumb Screw..... |
| 21030 | 7434 | " Rock Shaft..... |
| 20640 | 7437 | " " " " " " Oil Tube, for back bear- ing..... |
| 20583 | 7436 | Feed Rock Shaft Crank with 190D |
| 156c | 7438 | " " " " " " Position Screw... |
| 190D | 1157 | " " " " " " Set Screw..... |
| 12381 | 1170 | Needle Bar (hollow)..... |
| 12382 | 1144 | " " " " " " Connecting Link with 791E.. |
| 794E | 1144 | " " " " " " Adjusting Screw..... |

| NO. | PLATE | NAME |
|--------|-------|--|
| *12383 | — | Needle Bar Connecting Stud |
| 1904 | 1144 | " " " " Roller (roller only) |
| 453c | 1158 | Needle Bar Connecting Stud Set Screw |
| 12384 | 1144 | Needle Bar Connecting Stud complete, Nos. 453c, 1904 and 12383 |
| 20188 | 1142 | Needle Bar Crank with 858c and 1065c |
| 1065c | 7430 | " " " Position Screw |
| 858c | 1158 | " " " Set Screw |
| 936E | 1158 | " " " Screw Bushing |
| 4302 | 7428 | " " " Thread Guide |
| 233J | 987 | " " " " Screw |
| 4303 | 7428 | " " " Clamp with 808F |
| 808F | 7430 | " " " " Screw |
| 19386 | 1142 | Oscillating Rock Shaft |
| 19387 | — | Oscillating Rock Shaft complete, Nos. 4784, 12388 and 19386 |
| 12388 | 1142 | Oscillating Rock Shaft Hinge Pin |
| 448c | 1158 | " " " " " Set Screw |
| 4784 | 1150 | " " " " Oil Pad |
| 21031 | 7435 | " " " Shaft |
| 20749 | — | " " " Crank |
| 20750 | 7427 | Oscillating Shaft Crank complete, Nos. 219c, 1518E, 19390 and 20749 |
| 2049 | 1150 | Oscillating Shaft Crank Pin |
| 219c | 1157 | " " " " Set Screw |
| 19389 | 1149 | " " " " Slide Block |
| 226E | 7438 | " " " " " Cap Screw |
| 12424 | 1149 | Oscillating Shaft Crank Slide Block Cap Screw Washer |
| 969c | 1149 | Oscillating Shaft Crank Slide Block Screw Stud |
| 1518E | 1159 | Oscillating Shaft Crank Slide Block Screw Stud Nut |
| 19390 | 1149 | Oscillating Shaft Crank Slide Block complete, Nos. 226E, 969c, 12424 and 19389 |
| 16045 | 1150 | Oscillating Shaft (back bearing) Oil Tube |
| 12391 | 1170 | Presser Bar (hollow) |
| 12326 | 1145 | " " " Guide Bracket with 453c |
| 453c | 1158 | " " " " " Set Screw |
| 2062 | 1145 | " " " " Lifter |
| 689c | 1157 | " " " " Hinge Screw |
| 1520E | 1159 | " " " " " Nut |
| 12327 | 1145 | " " " " " Lifting and Releasing Lever Bracket |

| NO. | PLATE | NAME |
|-------|-------|---|
| 11167 | 1142 | Presser Bar Spring (light) .051 wire |
| 12139 | 1142 | " " " (medium) .055 wire |
| 20023 | 1142 | " " " (heavy) .063 wire |
| 11170 | 1150 | " " " Washer |
| 20587 | 7432 | " " " Foot (concave feed dog bearing) for 20577 |

NOTE: Presser Foot No. 20587 is sent with this Machine, unless another Presser Foot is specified on order

| | | |
|-------|------|---|
| 20588 | 7432 | Presser Foot (concave feed dog bearing) for 20573 |
| 190D | 1157 | Presser Foot Screw |
| 688J | 1158 | Pressure Regulating Thumb Screw |
| 19131 | 5737 | Shuttle Bobbin |
| 20650 | — | " " " Case Hinge, Nos. 2973, 2974 and 20649 |
| 20619 | 5737 | Shuttle Bobbin Case Latch |
| 2973 | 5737 | " " " " " Lever |
| 2974 | 5737 | " " " " " " Pulcrum Pin |
| 2975 | 5737 | Shuttle Bobbin Case Latch Spring |
| 592E | 5737 | " " " " " Stop Screw |
| 20755 | 5737 | " " " " " Position Finger |
| 2523 | 5737 | " " " " " " Rivet |
| 20756 | 5737 | Shuttle Bobbin Case complete, Nos. 591E, 592E, 2523, 2975, 20650, 20651 and 20755 |
| 20757 | 5737 | Shuttle Body |
| 591E | 5737 | " " " Tension Regulating Screw |
| 20654 | 5737 | " " " " Spring |
| 20758 | 5737 | Shuttle, 1 1/4 in. diam., Nos. 19131, 20756 and 20757 |
| 20697 | 7436 | Shuttle Driver and Feed Lifting Cam |
| 2019 | 1150 | " " " " " " " Pin |
| 20659 | 7135 | " " " Race with 20700 and two 10530 |
| 20700 | 7436 | " " " " Cap |
| 10530 | 1177 | " " " " " Screw |
| 20719 | 7437 | " " " " Cover |
| 937F | 7438 | " " " " Hinge Screw |
| 127E | 7438 | " " " " " Screw |
| 2102 | 7428 | Tension Disc |
| 1560c | 1146 | " " " Regulating Thumb Nut |
| 32572 | 7428 | " " " Releasing Disc |
| 43914 | 7428 | " " " " Lever |
| 12398 | 1145 | " " " " " Hinge Pin |
| 12329 | 1145 | " " " " " Spring |

| NO. | PLATE | NAME |
|--------|-------|--|
| 32574 | 7428 | Tension Releasing Pin..... |
| 50327c | 7428 | " Screw Stud..... |
| 44141 | — | " " " 50327c with 1560c... |
| 43945 | 7428 | " Spring..... |
| 12149 | 1150 | " Thread Guard..... |
| 52454 | 7436 | Thread Retainer..... |
| 50429c | 7438 | " " Set Screw..... |
| 12404 | 7428 | " Take-up Crank..... |
| 3094 | 1144 | " " " Wedge..... |
| 690E | 1144 | " " " " Screw..... |
| 12408 | 7428 | " " Lever..... |
| 775E | 1144 | " " " Cap Screw..... |
| 12166 | 1144 | " " " Hinge Pin..... |
| 12409 | 1144 | " " " Link..... |
| 11204 | 1144 | " " " " Hinge Pin .. |
| 12410 | — | Thread Take-up Lever complete, Nos. 12166, 12408 and 12409..... |
| 435c | 7430 | Thread Take-up Lever Link Hinge Pin Set Screw..... |
| 8511 | 7436 | Thread Take-up Spring..... |
| 7336 | 1149 | " " " Regulator..... |
| 448c | 1158 | " " " " Set Screw |
| 20698 | — | Throat Plate, large needle hole, for 20573 |
| 20699 | 7432 | " " small needle hole, for 20573 |
| 20708 | — | " " large needle hole, for 20577 |
| 20709 | 7433 | " " small needle hole, for 20577 |

NOTE: Throat Plate No. 20709 is sent with this
Machine, unless another Throat Plate
is specified on order

| | | |
|-------|------|-----------------------------|
| 20748 | 7432 | Throat Plate for 20579..... |
| 691F | 1158 | " " Screw..... |
| 20561 | 1164 | Drip Pan..... |

IRON BASE

| NO. | PLATE | NAME |
|-------|-------|---|
| 20747 | 4321 | Machine Base with four each 121E and wood screws 1 1/4 in. No. 12..... |
| 121E | 7430 | Machine Base Screw to secure machine to base..... |

ATTACHMENTS AND ACCESSORIES

| NO. | PLATE | NAME |
|--------|-------|--|
| 51077E | 7438 | Bolt with 51581E, to secure machine to table..... |
| 51581E | 7438 | Bolt Nut..... |

| NO. | PLATE | NAME |
|--------|-------|--|
| 6055 | 1145 | Bolt Nut Washer..... |
| 120346 | 1161 | Oiler (copper plated) with 120347..... |
| 120347 | 1161 | " Spout, 9 in. long..... |
| 26026 | 1161 | Screw Driver (machine)..... |
| 26185 | 1161 | " " (shuttle tension)..... |
| 20535 | 1149 | Shuttle Bobbin Case Extractor..... |
| 120341 | 1161 | Tweezers (curved)..... |
| 4347 | 1161 | Wrench for 1513 and 1518..... |
| 8908 | 1161 | " " 1520..... |
| 19221 | 1161 | " " 936 and 1619..... |

LAP SEAM FELLER PARTS

FOR MACHINE No. 57-2

| NO. | PLATE | NAME |
|--------|-------|---|
| 20562 | 1143 | Cylinder Cover for 26277..... |
| 20508 | 1152 | Feed Dog, 13 teeth (12 teeth to the inch) for 3/32 in. to 5/32 in. gauges..... |
| 20515 | 1152 | Feed Dog, 23 teeth (22 teeth to the inch) for 3/32 in. to 5/32 in. gauges..... |
| 20510 | 1152 | Feed Dog, 13 teeth (12 teeth to the inch) for 3/32 in. to 5/32 in. gauges (spiked teeth) for heavy work on duck, overalls, etc.... |
| 20509 | 1153 | Feed Dog, 13 teeth (12 teeth to the inch) for 1/4 in. to 5/8 in. gauges..... |
| 20511 | 1153 | Feed Dog, 13 teeth (12 teeth to the inch) for 1/4 in. to 5/8 in. gauges (spiked teeth) for heavy work on duck, overalls, etc.... |
| 20507 | 1151 | Feed Dog, 16 teeth (12 teeth to the inch) for 1/4 in. to 5/8 in. gauges..... |
| 20514 | 1175 | Feed Dog, 21 teeth (16 teeth to the inch) for 1/4 in. to 5/8 in. gauges..... |
| 20512 | 1151 | Feed Dog, 16 teeth (12 teeth to the inch) for 1/4 in. to 5/8 in. gauges (spiked teeth) for heavy work on duck, overalls, etc.... |
| *26352 | — | Folder for 26353..... |
| 20636 | — | " Slide with 10165..... |
| 19291 | 1153 | " " Spring..... |
| 405E | 1158 | " " " Screw..... |
| 10165 | 1150 | " " Stop Pin..... |
| 26277 | 1153 | Holder (adjustable)..... |
| 922D | 1158 | " Thumb Screw..... |
| 26353 | 1155 | Lap Seam Feller (right hand) complete, for gauges 3/32 in. to 5/8 in. for light, me- dium, heavy, X-heavy, XX-heavy and XXX-heavy material, Nos. 20636 and 26352..... |

| NO. | PLATE | NAME |
|--------|-------|--|
| *26389 | — | Folder..... |
| 26390 | 1155 | Lap Seam Feller (left hand) complete, for gauges $\frac{3}{8}$ in. to $\frac{5}{8}$ in., for light, medium, heavy, X-heavy, XX-heavy and XXX-heavy material, Nos. 20636 and 26389..... |
| *26391 | — | Folder..... |
| 26392 | 1155 | Lap Seam Feller (right hand) complete, to fold top only, Nos. 20636 and 26391..... |
| *26393 | — | Lap Seam Guide..... |
| 26394 | 1156 | Lap Seam Guide complete, Nos. 20636 and 26393..... |
| 330J | 1158 | Presser Foot Clamping Screw..... |
| 20530 | 1150 | " " Hinge Pin..... |
| 20637 | — | " " Plate..... |
| 21016 | — | " " Shank..... |
| 20638 | 1152 | Presser Foot (hinged) complete, Nos. 330J, 20530, 20637 and 21016..... |
| 330J | 1158 | Presser Foot Clamping Screw..... |
| 20530 | 1150 | " " Hinge Pin..... |
| 20680 | — | " " Plate..... |
| 20681 | — | " " Shank..... |
| 20682 | 1156 | Presser Foot (hinged) complete, hollowed across bottom between needle holes and heel, for riding seams, Nos. 330J, 20530, 20680 and 20681..... |
| 330J | 1158 | Presser Foot Clamping Screw..... |
| 18055 | 7429 | " " Hinge Pin..... |
| 20759 | — | " " Plate..... |
| 20760 | — | " " Shank..... |
| 35250 | 7429 | " " Spring..... |
| 20761 | 1171 | Presser Foot (spring hinged) complete, Nos. 330J, 18055, 20759, 20760 and 35250..... |
| 20550 | 1153 | Throat Plate for 20509 and 20511..... |
| 20549 | 1152 | " " " 20508, 20510 and 20515..... |
| 20555 | — | " " large needle hole, for 20507, 20512 and 20514..... |
| 20548 | 1151 | Throat Plate, small needle hole, for 20507, 20512 and 20514..... |
| 20687 | — | Throat Plate Body..... |
| 20688 | 1177 | " " Needle Hole Strip..... |
| 1053D | 1177 | " " " " " Screw.... |
| 20556 | 1177 | Throat Plate complete for 20509 and 20511, Nos. 20687, 20688 and two 1053D |

SHIRT CLOSING PARTS

FOR MACHINE No. 57-2

| NO. | PLATE | NAME |
|-------|-------|--|
| 20630 | 1179 | Feed Dog, 22 teeth (16 teeth to the inch) $\frac{1}{16}$ in. to $\frac{3}{32}$ in. gauges..... |
| 20631 | 987 | Feed Dog, 22 teeth (16 teeth to the inch) $\frac{1}{8}$ in. to $\frac{3}{16}$ in. gauges..... |
| 26337 | 987 | Hemmer (foot) for felling..... |
| 26338 | 987 | " Bracket with two 211F..... |
| 211F | 987 | " " Clamping Screw..... |
| 6267 | 987 | " Folder..... |
| 25888 | 987 | " Tongue..... |
| 20632 | 1179 | Throat Plate with 2653, for 20630 and 26339..... |
| 20633 | 987 | Throat Plate with 2653, for 20631 and 26339..... |
| 26051 | 987 | Throat Plate Cloth Guide..... |
| 102D | 987 | " " " " " Screw..... |
| 1530E | 987 | " " " " " Nut..... |
| 2653 | 987 | " " " " " Stop Pin..... |
| 26339 | 987 | " " Spring Guide..... |
| 233J | 987 | " " " " " Screw..... |

STAYING PARTS

FOR MACHINE No. 57-2

| NO. | PLATE | NAME |
|-------|-------|---|
| 20513 | 1154 | Feed Dog, 21 teeth (16 teeth to the inch) for $\frac{3}{8}$ in. to $\frac{5}{8}$ in. gauges..... |
| 330J | 1158 | Presser Foot Clamping Screw..... |
| 20530 | 1150 | " " Hinge Pin..... |
| 20642 | — | " " Plate..... |
| 21016 | — | " " Shank..... |
| 20613 | 1151 | Presser Foot (hinged) complete, for inside stays, for 20551, Nos. 330J, 20530, 20642 and 21016..... |
| 26384 | 1155 | Stay Guide (lower)..... |
| 26385 | 1155 | " " (upper)..... |
| 26386 | — | Stay Guide complete, Nos. 26384 and 26385..... |
| 337F | 1158 | Stay Guide Screw..... |
| 20551 | 1154 | Throat Plate for 20513..... |
| 20557 | 1178 | " " with 4515, for 20513..... |
| 4515 | — | " " Spring Guide..... |

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

| NO. | PLATE | NAME |
|--------|-------|--|
| 27552 | 1162 | Base..... |
| 15072 | 1150 | Bobbin Position Pin..... |
| 27302 | 1162 | Frame..... |
| 50356D | 7430 | " Hinge Screw..... |
| 1620J | 7430 | " " Nut..... |
| 27303 | 1150 | " Spring..... |
| 27553 | 1162 | Pulley..... |
| 27849 | — | Spindle..... |
| 27538 | 1162 | " 27849 with 15072, 27850 and 41828 |
| 27850 | — | " Collar..... |
| 41828 | — | " " Pin..... |
| 27306 | 1162 | Spool Pin..... |
| 27307 | 1162 | " Stand..... |
| 27308 | 1162 | Spool Stand complete, Nos. 418E, 1562J, 2106, 10141, 11241, 27306, 27307 and two each 2455 and wood screws 1 in. No. 10..... |
| 11241 | 1142 | Spool Pin Washer (cloth)..... |
| 27587 | 1162 | Stop Latch..... |
| 35D | 1157 | " " Hinge Screw..... |
| 2455 | 1150 | Tension Disc..... |
| 1562J | 1159 | " Regulating Thumb Nut..... |
| 418E | 1158 | " Screw Stud..... |
| 10141 | 1150 | " Spring..... |
| 2106 | 1150 | " Thread Guide..... |
| 27651 | 1162 | Bobbin Winder, Nos. 35D, 1620J, 27302, 27303, 27538, 27552, 27553, 27587, 50356D and two wood screws 1 in. No. 7 |
| 27588 | — | Bobbin Winder (swinging automatic, right hand) complete, Nos. 27308 and 27651 |

DRIVING ATTACHMENT

| NO. | PLATE | NAME |
|-------|-------|---|
| 16592 | 1167 | Balance Wheel (friction) with 7958, 16524 and two 435C..... |
| 16524 | — | Balance Wheel Friction Ring (leather)... |
| 7958 | 1150 | " " " " Stop Pin... |
| 24355 | 1170 | " " Oil Cover..... |
| 210D | 7430 | " " " Screw..... |
| 435C | 7430 | " " Set Screw..... |
| 20667 | 4314 | Driving Arm with 2928 and two 15132... |
| 341D | 7430 | " " Adjusting Screw..... |
| 1594C | 7430 | " " " " Nut..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 20668 | 4314 | Driving Arm Bracket..... |
| 692D | 7430 | " " " Screw..... |
| 2928 | 7429 | " " Brake (leather)..... |
| 15132 | 7429 | " " " Rivet..... |
| 12178 | 7429 | " " Friction Plug (wood)..... |
| 427E | 1158 | " " " " Adjusting Screw..... |
| 1508C | 1159 | Driving Arm Friction Plug Adjusting Screw Nut..... |
| 20677 | 7429 | Driving Arm Pin..... |
| 20669 | 4314 | " " Shaft..... |
| 20670 | — | Driving Arm complete, Nos. 341D, 427E, 1508C, 1594C, 12178, 20667 to 20669, 20671, 20672, 20675, 20678 and two 20677..... |
| 16594 | 1167 | Driving Friction Pulley, 2 $\frac{5}{16}$ in. diam., with 861D and 10236..... |
| 10236 | 7429 | Driving Friction Pulley Center Bearing.. |
| 861D | 7430 | " " " Oil Hole Plug Screw |
| 2763 | 4321 | Rock Shaft..... |
| 27683 | 4321 | " " Arm with two 356C..... |
| 356C | 1157 | " " " Set Screw..... |
| 2764 | 4321 | " " Hanger with two wood screws 1 in. No. 10..... |
| 20673 | 4321 | Rock Shaft complete, Nos. 2763 and two each 2764 and 27683..... |
| 27072 | 7431 | Shaft Driving Pulley (sectional, grooved) 12 in. diam., 1 $\frac{3}{8}$ in. bore, with two 597C |
| 597C | 1157 | Shaft Driving Pulley Clamping Screw.... |
| 20671 | 4314 | Starting Crank..... |
| 20674 | 4314 | " " Connecting Rod..... |
| 20675 | 7429 | " " " " Joint..... |
| 20678 | 7429 | " " " " " Hinge Stud..... |
| 1620E | 7430 | Starting Crank Connecting Rod Lock Nut |
| 20677 | 7429 | " " Pin..... |
| 20672 | 4314 | " " Spring..... |
| 14229 | 4321 | Table Belt Guide Bracket with 448C.... |
| 14230 | 4321 | " " " Pulley..... |
| 126928 | — | " " " " Shaft..... |
| 14231 | 1170 | " " " " " 126928 with 858C..... |
| 858C | 1158 | Table Belt Guide Pulley Shaft Plug Screw |
| 448C | 1158 | " " " " " Set Screw |
| 14232 | 4321 | Table Belt Guide complete, Nos. 14229 to 14231 and four R. H. M. F. O. and A. wood screws 1 $\frac{1}{4}$ in. No. 10..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 126036 | 3477 | Treadle..... |
| 126205 | 7435 | " Bracket (left)..... |
| 126207 | 7438 | " " " Hook..... |
| 23258 | 7438 | " " " " Friction Washer..... |
| 126208 | 7438 | " " " " Rivet..... |
| 126206 | — | Treadle Bracket (left) complete, Nos. 23258, 126205, 126207, 126208 and two wood screws 1 in. No. 14..... |
| 46681 | 7435 | Treadle Bracket (right)..... |
| 60502 | — | " " " 46681 with two wood screws 1 in. No. 14..... |
| 27637 | 1164 | Treadle Pitman Rod (lower)..... |
| 27638 | 1164 | " " " " Spring..... |
| 27639 | 1164 | " " " (upper)..... |
| 9079 | 1164 | " " " Clamp with 351c..... |
| 354c | 1157 | " " " " Screw..... |
| 6055 | 1145 | " " " Washer..... |
| 27640 | 1164 | Treadle Pitman complete, Nos. 2762, 6055, 27637 to 27639 and two 9079..... |
| 2762 | 1164 | Treadle Stop Collar with 362F..... |
| 362F | 1157 | " " " Set Screw..... |
| 126209 | — | Treadle complete, Nos. 60502, 126036 and 126206..... |
| 126210 | — | Treadle and Pitman complete, Nos. 27640 and 126209..... |
| 20676 | — | Driving Attachment with Rock Shaft and Treadle complete, Nos. 210b, 692b, 1620e, 16592, 16594, 20670, 20673, 20674, 24355, 27072, 126210 and two 14232..... |

FOOT LIFTER PARTS

| NO. | PLATE | NAME |
|-------|-------|--|
| 13351 | — | Chain, 46 in. to 55 in. long, with 56864 and 56865..... |

NOTE: When ordering 13351, give length required

| | | |
|-------|------|------------------------------|
| 56864 | 7438 | Chain Hook (large)..... |
| 56865 | 7438 | " " (small)..... |
| 12237 | 4321 | Lifting Lever with 448c..... |
| 802b | 1157 | " " Hinge Screw..... |
| 12241 | 1145 | " " Link..... |
| 766b | 1157 | " " Hinge Screw..... |
| 12240 | 1145 | " " Pin..... |
| 448c | 1158 | " " Set Screw..... |
| 20559 | 1140 | " " Spring..... |

| NO. | PLATE | NAME |
|-------|-------|---|
| 20558 | 1140 | Pitman, 13 in. long..... |
| 12416 | 1145 | " Joint..... |
| 76b | 1157 | " " Hinge Screw..... |
| 1521e | 1159 | " Lock Nut..... |
| 14209 | 3477 | Treadle..... |
| 7585 | 1140 | " Shaft..... |
| 14357 | 3477 | " Stand..... |
| 14358 | 3477 | Treadle complete, Nos. 7585, 14209, 14357 and two wood screws 1 1/4 in. No. 12.... |
| 21028 | — | Foot Lifter complete, Nos. 76b, 766b, 802b, 1521e, 12237, 12240, 12241, 12416, 13351, 14358, 20558 and 20559..... |

KNEE LIFTER PARTS

| NO. | PLATE | NAME |
|-------|-------|---|
| 12237 | 4321 | Lifting Lever with 448c..... |
| 802b | 1157 | " " Hinge Screw..... |
| 12241 | 1145 | " " Link..... |
| 766b | 1157 | " " Hinge Screw..... |
| 12240 | 1145 | " " Pin..... |
| 448c | 1158 | " " Set Screw..... |
| 20559 | 1140 | " " Spring..... |
| 20558 | 1140 | Pitman, 13 in. long..... |
| 12416 | 1145 | " Joint..... |
| 76b | 1157 | " " Hinge Screw..... |
| 1521e | 1159 | " Lock Nut..... |
| 7124 | 1167 | Rock Shaft..... |
| 2764 | 1167 | " " Hanger (back) with two wood screws 1 in. No. 10..... |
| 16128 | 1167 | Rock Shaft Hanger (front) with two wood screws 1 in. No. 10..... |
| 16616 | 1167 | Rock Shaft Knee Arm..... |
| 16617 | — | Rock Shaft Knee Arm complete, Nos. 2766, 2767 and 16646..... |
| 2766 | 1167 | Rock Shaft Knee Arm Hub with 356c..... |
| 356c | 1157 | " " " " Set Screw.... |
| 2767 | 1167 | " " " Plate with 356c..... |
| 356c | 1157 | " " " Set Screw..... |
| 6337 | 1167 | " " Lifting Bracket with two 356c..... |
| 6338 | 1167 | " " " " Hook..... |
| 356c | 1157 | " " " " Set Screw..... |
| 356c | 1157 | " " " Set Screw.... |
| 2770 | 1167 | " " Stop Dog with 356c..... |
| 356c | 1157 | " " " Set Screw..... |
| 16129 | 1167 | Rock Shaft complete, Nos. 2764, 6337, 6338, 7124, 16128, 16647 and two 2770..... |

| NO. | PLATE | NAME |
|-------|-------|--|
| 21032 | — | Knee Lifter complete, Nos. 76D, 766D, 802D, 1521E, 12237, 12240, 12241, 12416, 16129, 20558 and 20559..... |

THREAD UNWINDER

FOR ONE SPOOL

| NO. | PLATE | NAME |
|---------|-------|--|
| 225389 | 8523 | Spool Rest with 201018c..... |
| 225388 | 8523 | " " Rod..... |
| 200383c | 7438 | " " " Set Screw..... |
| 201018c | 7438 | " " " Set Screw..... |
| 202490 | 8523 | " Stand with 200383c..... |
| 225391 | 8523 | Thread Guide..... |
| 201696J | 7438 | " " Lock Nut..... |
| 225392 | 8523 | " " Rod with 208E and 225393 |
| 208E | 7430 | " " " Screw..... |
| 225393 | 7438 | " " " Washer..... |
| 225394 | 8523 | Thread Unwinder complete, Nos. 201696J, 202490, 225388, 225389, 225391, 225392 and three wood screws $\frac{3}{8}$ in. No. 12... |
| 27739 | 7234 | Thread Cone (wood) for large cones..... |
| 225390 | 7234 | " " Holder, for inverted cones.. |

NOTE: Nos. 27739 and 225390 are used with,
but not included in 225394

THREAD UNWINDER

FOR TWO SPOOLS

| NO. | PLATE | NAME |
|---------|-------|---|
| 225395 | 7233 | Spool Rest with 201018c..... |
| 225388 | 7233 | " " Rod..... |
| 200383c | 7438 | " " " Set Screw..... |
| 201018c | 7438 | " " " Set Screw..... |
| 202490 | 7233 | " Stand with 200383c..... |
| 225391 | 7233 | Thread Guide..... |
| 201696J | 7438 | " " Lock Nut..... |
| 225392 | 7233 | " " Rod with 208E and 225393 |
| 208E | 7430 | " " " Screw..... |
| 225393 | 7438 | " " " Washer..... |
| 225396 | 7233 | Thread Unwinder complete, Nos. 201696J, 202490, 225388, 225392, 225395, two 225391 and three wood screws $\frac{3}{8}$ in. No. 12..... |
| 27739 | 7234 | Thread Cone (wood) for large cones..... |
| 225390 | 7234 | " " Holder, for inverted cones.. |

NOTE: Nos. 27739 and 225390 are used with,
but not included in 225396

OBSOLETE PARTS

| NO. | PLATE | NAME |
|-------|-------|--|
| 21003 | 1166 | Arm Shaft Gear with 453c and 454c..... |
| 21007 | 1166 | " Side Wheel Shaft Gear with 453c and 454c..... |
| 58E | 1157 | Feed Regulator Hinge Screw..... |
| 818D | 1158 | " " Thumb Screw..... |
| 19166 | 1142 | Oscillating Rock Shaft..... |
| 19167 | — | " " " 19166 with 12388 |
| 12443 | 1160 | " " " Oil Pad..... |
| 16508 | 1160 | " " " " " Holder with 12443..... |
| 12390 | 1160 | Oscillating Shaft Crank complete, Nos. 457c, 1518E, 1902 and 19496..... |
| 1902 | 1160 | Oscillating Shaft Crank Roller and Screw Stud..... |
| 20526 | 1142 | Presser Bar..... |
| 20530 | 1150 | " Foot Hinge Pin..... |
| 20529 | — | " " Plate..... |
| 20528 | — | " " Shank..... |
| 20527 | 1156 | " " (hinged) Nos. 20528 to 20530 |
| 2102 | 7428 | Tension (upper) Disc..... |
| 637c | 7430 | " " Screw Stud..... |
| 8238 | 7429 | " " Spring..... |
| 19153 | 1160 | Tension (upper) complete, Nos. 19151, two each 637c, 1517D, 1560c, 8238 and four 2102..... |
| 19152 | 1160 | Tension Plate Stud..... |
| 19151 | 1160 | " " for upper tension with 19152 |
| 12101 | 7428 | Thread Take-up Crank for 57-2 Machine |

Genuine Singer Needles and their Con-
tainers are marked with the Company's
Trade Mark "SIMANCO." 1

Needles in Containers marked
"For Singer Machines"
are not Singer made needles. 2

NUMERICAL LIST OF PARTS
FOR
MACHINES

Nos. 57-2 to 57-4 and 57-14

NUMERICAL LIST OF PARTS

| NO. | PLATE | NAME |
|------|-------|--|
| 35D | 1157 | Bobbin Winder Stop Latch Hinge Screw for 27651 |
| 58E | 1157 | Feed Regulator Hinge Screw, obsolete ... |
| 76D | 1157 | Pitman Joint Hinge Screw for 21028 and 21032 |
| 102D | 987 | Throat Plate Cloth Guide Screw for 26054 |
| 121E | 7430 | Machine Base Screw, to secure machine to base, for 20747 |
| 127E | 7438 | Shuttle Race Screw for 57-11 Machine... |
| 131E | 1157 | " " " " 57-2 to 57-4 Machines |
| 134D | 1157 | Tension Plate Screw for 57-2 Machine... |
| 144D | 1157 | Arm Shaft Screw |
| 145D | 7430 | " Spool Bracket Screw for 57-2 Machine |
| 156E | 7438 | Feed Rock Shaft Crank Position Screw for 57-14 Machine |
| 157E | 1157 | Feed Raising Fork Screw for 57-2 Machine |
| 175E | 1157 | " Forked Connection Cup Screw for 20518 |
| 190D | 1157 | Face Plate Screw |
| 190D | 1157 | Feed Rock Shaft Crank Set Screw for 20583 |
| 190D | 1157 | Presser Foot Screw for 57-3, 57-4 and 57-14 Machines |
| 190D | 1157 | Shuttle (outside) Bobbin Case Position Plate Screw for 20543 |
| 202F | 7430 | Presser Bar Extension Clamping Screw for 21042 |
| 208E | 7430 | Thread Unwinder Thread Guide Rod Screw for 225392 |
| 209F | 1157 | Needle Set Screw for 20521 |
| 210D | 7430 | Driving Attachment Balance Wheel Oil Cover Screw for 20676 |
| 211F | 987 | Hemmer Bracket Clamping Screw for 26338 |
| 219C | 1157 | Oscillating Shaft Crank Set Screw for 20750 |
| 219J | 1157 | Arm Side Cap Screw |
| 219J | 1157 | " " Wheel Shaft Gear Cover Screw for 57-2 and 57-4 Machines |
| 219J | 1157 | Cylinder Feed Cover Screw for 57-2 to 57-4 Machines |
| 225C | 7438 | Feed Dog Screw for 57-14 Machine |

| NO. | PLATE | NAME |
|------|-------|--|
| 226E | 7438 | Oscillating Shaft Crank Slide Block Cap Screw for 19390..... |
| 233J | 987 | Needle Bar Thread Guide Screw for 57-3 and 57-14 Machines..... |
| 233J | 987 | Throat Plate Spring Guide Screw for 26339..... |
| 240J | 7438 | Cloth Plate Slide Spring Screw for 20565..... |
| 283D | 7430 | Feed Regulator Thumb Screw..... |
| 286D | 1158 | Arm Side Cover Thumb Screw..... |
| 286D | 1158 | Face Plate Thumb Screw..... |
| 295C | 1158 | Feed Rock Shaft Screw Center for 57-2 to 57-4 Machines..... |
| 330J | 1158 | Presser Foot Clamping Screw for 20638, 20643, 20646, 20648, 20682, 20711, 20712, 20754, 20761, 20777, 21014 and 21017..... |
| 337F | 1158 | Stay Guide Screw for 26386..... |
| 341D | 7430 | Driving Attachment Driving Arm Adjusting Screw for 20670..... |
| 345C | 7437 | Cloth Plate Bracket Set Screw for 20567.. |
| 354C | 1157 | Driving Attachment Treadle Pitman Rod Clamp Screw for 9079..... |
| 356C | 1157 | Driving Attachment Rock Shaft Arm Set Screw for 27683..... |
| 356C | 1157 | Rock Shaft Knee Arm Hub Set Screw for 2766..... |
| 356C | 1157 | Rock Shaft Knee Plate Set Screw for 2767..... |
| 356C | 1157 | " " Lifting Bracket Hook Set Screw for 6337..... |
| 356C | 1157 | Rock Shaft Lifting Bracket Set Screw for 6337..... |
| 356C | 1157 | Rock Shaft Stop Dog Set Screw for 2770.. |
| 362F | 1157 | Driving Attachment Treadle Stop Collar Set Screw for 2762..... |
| 375C | 1158 | Feed Connecting Link Hinge Screw..... |
| 375C | 1158 | " Forked Connection Hinge Screw for 57-14 Machine..... |
| 389F | 7438 | Cloth Plate Screw for 20566..... |
| 399J | 4320 | Shuttle Bobbin Case Guide Plate Screw for 20717 and 20718..... |
| 405E | 1158 | Lap Seam Feller Folder Slide Spring Screw for 57-2 Machine..... |
| 418E | 1158 | Bobbin Winder Tension Screw Stud for 27308..... |
| 427E | 1158 | Driving Attachment Driving Arm Friction Plug Adjusting Screw for 20670..... |
| 430C | 1144 | Thread Take-up Lever Link Hinge Pin Set Screw for 57-2 Machine..... |

| NO. | PLATE | NAME |
|------|-------|--|
| 435C | 7430 | Driving Attachment Balance Wheel Set Screw for 16592..... |
| 435C | 7430 | Thread Take-up Lever Link Hinge Pin Set Screw for 57-3, 57-4 and 57-14 Machines..... |
| 446C | 1158 | Feed Eccentric Set Screw for 3074..... |
| 446C | 1158 | " Cam Set Screw for 3032..... |
| 448C | 1158 | Arm Shaft Flanged Bushing (back) Set Screw..... |
| 448C | 1158 | Balance Wheel Set Screw for 12358..... |
| 448C | 1158 | Driving Attachment Table Belt Guide Pulley Shaft Set Screw for 14229..... |
| 448C | 1158 | Lifting Lever Pin Set Screw for 12237.... |
| 448C | 1158 | Oscillating Rock Shaft Hinge Pin Set Screw..... |
| 448C | 1158 | Thread Take-up Spring Regulator Set Screw..... |
| 449C | 1158 | Arm Side Wheel Shaft Collar Set Screw for 21006..... |
| 450C | 1158 | Arm Side Wheel Set Screw for 21001..... |
| 453C | 1158 | " Shaft Gear Position Screw for 21003 and 21026..... |
| 453C | 1158 | Arm Side Wheel Shaft Gear Position Screw for 21007 and 21027..... |
| 453C | 1158 | Needle Bar Connecting Stud Set Screw for 12384..... |
| 453C | 1158 | Presser Bar Guide Bracket Set Screw for 12326..... |
| 451C | 1158 | Arm Shaft Gear Set Screw for 21003 and 21026..... |
| 451C | 1158 | Arm Side Wheel Shaft Gear Set Screw for 21007 and 21027..... |
| 457C | 7430 | Oscillating Shaft Crank Set Screw for 12390 and 19388..... |
| 460C | 1158 | Feed Rock Shaft Arm Set Screw for 20523..... |
| 460C | 1158 | Thread Retainer Set Screw for 21009..... |
| 460C | 1158 | " Retaining Stud Set Screw for 57-3 and 57-4 Machines..... |
| 591F | 5737 | Shuttle Tension Regulating Screw for 20756..... |
| 591F | 1148 | Shuttle (inside) Tension Regulating Screw for 20533..... |
| 591F | 1148 | Shuttle (outside) Tension Regulating Screw for 20534..... |
| 592E | 5737 | Shuttle Bobbin Case Latch Stop Screw for 20756..... |
| 592E | 1148 | Shuttle (inside) Bobbin Case Latch and Position Finger Stop Screw for 20533.. |

| NO. PLATE | NAME |
|-----------|---|
| 592E 1148 | Shuttle (outside) Bobbin Case Latch and Position Finger Stop Screw for 20534... |
| 597c 1157 | Driving Attachment Shaft Driving Pulley Clamping Screw for 27072..... |
| 637c 7430 | Tension (upper) Screw Stud for 19153, obsolete..... |
| 662n 1158 | Shuttle Race Loop Separator Screw for 20543..... |
| 688a 1158 | Pressure Regulating Thumb Screw..... |
| 689c 1157 | Presser Bar Lifter Hinge Screw..... |
| 690E 1144 | Thread Take-up Crank Wedge Screw..... |
| 691F 1158 | Throat Plate Screw..... |
| 692D 7430 | Driving Attachment Driving Arm Bracket Screw for 20676..... |
| 704c 1157 | Feed Dog Screw for 57-2 to 57-4 Machines |
| 704c 1157 | " Raising Fork Screw for 57-3 and 57-4 Machines..... |
| 748E 1157 | Arm Screw (back)..... |
| 766D 1157 | Lifting Lever Link Hinge Screw for 21028 and 21032..... |
| 775E 1144 | Thread Take-up Lever Cap Screw..... |
| 794E 1144 | Needle Bar Connecting Link Adjusting Screw for 12382..... |
| 802D 1157 | Lifting Lever Hinge Screw for 21028 and 21032..... |
| 808F 7430 | Needle Clamp Screw for 4303..... |
| 818D 1158 | Feed Regulator Thumb Screw, obsolete.. |
| 854E 1159 | Arm Screw (front) for 57-2 Machine..... |
| 857H 7430 | Needle Set Screw for 21041..... |
| 858c 1158 | Driving Attachment Table Belt Guide Pulley Shaft Plug Screw for 14231..... |
| 858c 1158 | Needle Bar Crank Set Screw for 20188... |
| 861D 7430 | Driving Attachment Driving Friction Pulley Oil Hole Plug Screw for 16594... |
| 868E 1157 | Arm Screw (front) for 57-3, 57-4 and 57-14 Machines..... |
| 896E 1157 | Crank Connecting Rod Cap Screw for 20197..... |
| 905D 1157 | Thread Guide Screw for 19162..... |
| 908c 1158 | Crank Connecting Rod Hinge Screw..... |
| 916c 1146 | Tension Screw Stud for 44209..... |
| 922D 1158 | Lap Seam Feller Holder Thumb Screw for 57-2 Machine..... |
| 923E 1158 | Feed Rod Hinge Screw for 57-2 to 57-4 Machines..... |
| 934D 4320 | Shuttle Race Cap Screw for 20717 and 20718..... |

| NO. PLATE | NAME |
|------------|---|
| 935E 1157 | Shuttle (inside) Bobbin Case Position Plate Screw for 20543..... |
| 936E 1158 | Needle Bar Screw Bushing..... |
| 937F 7438 | Shuttle Race Cover Hinge Screw for 57-14 Machine..... |
| 969c 1149 | Oscillating Shaft Crank Slide Block Screw Stud for 19390..... |
| 1053D 1177 | Shuttle Race Cap Screw for 20659..... |
| 1053D 1177 | Throat Plate Needle Hole Strip Screw for 20556..... |
| 1065c 7430 | Needle Bar Crank Position Screw for 20188..... |
| 1128E 7430 | Feed Regulator Hinge Screw..... |
| 1508c 1159 | Driving Attachment Driving Arm Friction Plug Adjusting Screw Nut for 20670... |
| 1513J 1159 | Feed Rock Shaft Screw Center Nut for 57-2 to 57-4 Machines..... |
| 1518E 1159 | Feed Connecting Link Hinge Screw Nut.. |
| 1518E 1159 | " Forked Connection Hinge Screw Nut for 57-14 Machine..... |
| 1518E 1159 | Oscillating Shaft Crank Slide Block Screw Stud Nut for 12390, 19388 and 20750.. |
| 1520E 1159 | Presser Bar Lifter Hinge Screw Nut..... |
| 1521E 1159 | Pitman Lock Nut for 21028 and 21032... |
| 1530E 987 | Throat Plate Cloth Guide Screw Nut for 102..... |
| 1547D 1146 | Tension Screw Stud Nut for 19153 and 19195..... |
| 1560c 1146 | Tension Regulating Thumb Nut for 19153, 44141 and 44209..... |
| 1562J 1159 | Bobbin Winder Tension Regulating Thumb Nut for 27308..... |
| 1594c 7430 | Driving Attachment Driving Arm Adjusting Screw Nut for 20670..... |
| 1619E 1159 | Crank Connecting Rod Hinge Screw Nut |
| 1620J 7430 | Bobbin Winder Frame Hinge Screw Nut for 27651..... |
| 1620E 7430 | Driving Attachment Starting Crank Connecting Rod Lock Nut for 20676..... |
| 1902 1160 | Oscillating Shaft Crank Roller and Screw Stud for 12390, obsolete..... |
| 1904 1144 | Needle Bar Connecting Stud Roller (roller only) for 12384..... |
| 2019 1150 | Feed Rock Shaft Arm Pin for 57-2 to 57-4 Machines..... |
| 2049 1150 | Oscillating Shaft Crank Pin..... |
| 2049 1150 | Shuttle Driver and Feed Lifting Cam Pin for 57-14 Machine..... |

| NO. | PLATE | NAME |
|------|-------|--|
| 2049 | 1150 | Shuttle Driver and Feed Lifting Eccentric Pin for all machines except 57-14..... |
| 2062 | 1145 | Presser Bar Lifter..... |
| 2102 | 7428 | Tension Disc for 57-3, 57-4 and 57-14 Machines..... |
| 2102 | 7428 | Tension (upper) Disc for 19153, obsolete... |
| 2106 | 1150 | Bobbin Winder Tension Thread Guide for 27308..... |
| 2269 | 1146 | Tension Releasing Lever (intermediate) Hinge Pin for 19195..... |
| 2273 | 1150 | Needle Clamp Pin for 57-2 Machine..... |
| 2415 | 1140 | Arm Spool Bracket for 15063..... |
| 2455 | 1150 | Bobbin Winder Tension Disc for 27308... |
| 2521 | 1148 | Shuttle (inside) Bobbin Case Latch and Position Finger Spring for 20533..... |
| 2521 | 1148 | Shuttle (outside) Bobbin Case Latch and Position Finger Spring for 20531..... |
| 2523 | 5737 | Shuttle Bobbin Case Position Finger Rivet for 20756..... |
| 2653 | 987 | Throat Plate Cloth Guide Stop Pin for 20632 and 20633..... |
| 2762 | 1164 | Driving Attachment Treadle Stop Collar with 362r, for 27640..... |
| 2763 | 4321 | Driving Attachment Rock Shaft for 20673 |
| 2764 | 4321 | " " " " Hanger with two wood screws 1 in. No. 10, for 20673..... |
| 2764 | 1167 | Rock Shaft Hanger (back) with two wood screws 1 in. No. 10, for 16129..... |
| 2766 | 1167 | Rock Shaft Knee Arm Hub with 356c, for 16647..... |
| 2767 | 1167 | Rock Shaft Knee Plate with 356c, for 16647..... |
| 2770 | 1167 | Rock Shaft Stop Dog with 356c, for 16129 |
| 2827 | 7428 | Face Plate Thread Guard (upper) with 8505, for 12367..... |
| 2921 | 1146 | Tension Disc for 19195..... |
| 2923 | 1146 | " Spring for 19195..... |
| 2928 | 7429 | Driving Attachment Driving Arm Brake (leather) for 20667..... |
| 2973 | 5737 | Shuttle Bobbin Case Latch Lever for 20650..... |
| 2974 | 5737 | Shuttle Bobbin Case Latch Lever Fulcrum Pin for 20650..... |
| 2975 | 5737 | Shuttle Bobbin Case Latch Spring for 20756..... |
| 3032 | 7437 | Feed Cam with 446c, for 57-14 Machine. |

| NO. | PLATE | NAME |
|--------|-------|--|
| 3033 | 1145 | Feed Connecting Link..... |
| 3074 | 1142 | " Eccentric with 446c, for 57-2 to 57-1 Machines..... |
| 3094 | 1144 | Thread Take-up Crank Wedge..... |
| 3286 | 7437 | Cloth Plate Slide Spring for 20565..... |
| 4302 | 7428 | Needle Bar Thread Guide for 57-3 and 57-14 Machines..... |
| 4303 | 7428 | Needle Clamp with 808r, for 57-3 and 57-14 Machines..... |
| 4347 | 1161 | Wrench for 1513 and 1518 (Attachments and Accessories)..... |
| 4515 | — | Throat Plate Spring Guide for 20557..... |
| 4784 | 1150 | Oscillating Rock Shaft Oil Pad for 19387.. |
| 6055 | 1145 | Bolt Nut Washer (Attachments and Accessories)..... |
| 6055 | 1145 | Driving Attachment Treadle Pitman Rod Washer for 27640..... |
| 6267 | 987 | Hemmer Folder, for shirt closing, for 57-2 Machine..... |
| 6337 | 1167 | Rock Shaft Lifting Bracket with two 356c, for 16129..... |
| 6338 | 1167 | Rock Shaft Lifting Bracket Hook for 16129..... |
| 7124 | 1167 | Rock Shaft for 16129..... |
| 7298 | 7429 | Presser Foot Hinge Pin for 19336..... |
| 7336 | 1149 | Thread Take-up Spring Regulator..... |
| 7585 | 1140 | Treadle Shaft for 14358..... |
| 7958 | 1150 | Driving Attachment Balance Wheel Friction Ring Stop Pin for 16592..... |
| 8238 | 7429 | Tension (upper) Spring for 19153, obsolete |
| 8505 | 7428 | Face Plate Thread Guard (upper) Rivet for 2827..... |
| 8511 | 7436 | Thread Take-up Spring for 57-14 Machine |
| 8582 | 1150 | Arm Dowel Pin..... |
| 8908 | 1161 | Wrench for 1520 (Attachments and Accessories)..... |
| 9079 | 1164 | Driving Attachment Treadle Pitman Rod Clamp with 35 tc, for 27610..... |
| 10141 | 1150 | Bobbin Winder Tension Spring for 27308.. |
| 10165 | 1150 | Lap Seam Feller Folder Slide Stop Pin for 20636..... |
| 10236 | 7429 | Driving Attachment Driving Friction Pulley Center Bearing for 16594..... |
| *11101 | — | Arm Shaft Bushing (front) for 12355, 21001 and 21022..... |
| 11119 | 1150 | Arm Oil Tube with 52045, for oiling 12408 and 19156..... |

| NO. | PLATE | NAME |
|--------|-------|--|
| 11167 | 1142 | Presser Bar Spring (light) .051 wire..... |
| 11170 | 1150 | " " " Washer..... |
| 11201 | 1144 | Thread Take-up Lever Link Hinge Pin... |
| 11241 | 1142 | Arm Spool Bracket Spool Pin Washer (cloth) for 57-2 Machine..... |
| 11241 | 1142 | Arm Spool Pin Washer (cloth) for 57-3, 57-4 and 57-14 Machines..... |
| 11241 | 1142 | Bobbin Winder Spool Pin Washer (cloth) for 27308..... |
| 12139 | 1142 | Presser Bar Spring (medium) .055 wire... |
| 12149 | 1150 | Tension Thread Guard..... |
| 12150 | 7428 | Face Plate Thread Guard (lower) with 12152, for 12367..... |
| 12152 | 1150 | Face Plate Thread Guard (lower) Rivet for 12150 and 19327..... |
| 12152 | 1150 | Face Plate Thread Guard (upper) Rivet for 19155..... |
| 12166 | 1144 | Thread Take-up Lever Hinge Pin for 12410 and 19157..... |
| 12178 | 7429 | Driving Attachment Driving Arm Friction Plug (wood) for 20670..... |
| 12193 | 1143 | Arm Side Cover..... |
| 12237 | 4321 | Lifting Lever with 448c, for 21028 and 21032..... |
| 12240 | 1145 | Lifting Lever Pin for 21028 and 21032.... |
| 12241 | 1145 | " " Link for 21028 and 21032... |
| 12326 | 1145 | Presser Bar Guide Bracket with 453c.... |
| 12327 | 1145 | " " Lifting and Releasing Lever Bracket..... |
| 12329 | 1145 | Tension Releasing Lever Spring..... |
| *12355 | ----- | Arm with 11104, for 57-14 Machine..... |
| 12357 | 1142 | " Shaft Flanged Bushing (back) |
| 12358 | 1140 | Balance Wheel (power) light rim, 2 1/8 in. pulley, with two 448c..... |
| 12366 | ----- | Face Plate for 12367..... |
| 12367 | 1170 | Face Plate complete for 57-3, 57-4 and 57-14 Machines, Nos. 2827, 12150 and 12366..... |
| 12381 | 1170 | Needle Bar (hollow) for 57-3 and 57-14 Machines..... |
| 12382 | 1144 | Needle Bar Connecting Link with 794E... |
| *12383 | ----- | " " " Stud for 12384... |
| 12384 | 1144 | Needle Bar Connecting Stud complete, Nos. 453c, 1904 and 12383..... |
| 12388 | 1142 | Oscillating Rock Shaft Hinge Pin for 19167 and 19387..... |
| 12390 | 1160 | Oscillating Shaft Crank complete, Nos. 457c, 1518E, 1902 and 19496, obsolete.. |

| NO. | PLATE | NAME |
|-------------------------------|-------|---|
| 12391 | 1170 | Presser Bar (hollow) for 57-3 and 57-14 Machines..... |
| 12397 | 1145 | Tension Releasing Lever for 57-2 Machine |
| 12398 | 1145 | " " " Hinge Pin..... |
| 12403 | 1150 | Arm Spool Bracket Spool Pin and Thread Eyelet for 15063..... |
| 12403 | 1150 | Arm Spool Pin and Thread Eyelet for 57-3, 57-4 and 57-14 Machines..... |
| 12404 | 7428 | Thread Take-up Crank for 57-3, 57-4 and 57-14 Machines and obsolete for 57-2 Machine..... |
| 12408 | 7428 | Thread Take-up Lever for 12410..... |
| 12409 | 1144 | Thread Take-up Lever Link for 12410 and 19157..... |
| 12410 | ----- | Thread Take-up Lever complete for 57-3, 57-4 and 57-14 Machines, Nos. 12166, 12108 and 12409..... |
| 12416 | 1145 | Pitman Joint for 21028 and 21032..... |
| 12424 | 1149 | Oscillating Shaft Crank Slide Block Cap Screw Washer for 19390..... |
| 12427 | 7434 | Arm Shaft for 57-14 Machine..... |
| 12443 | 1160 | Oscillating Rock Shaft Oil Pad for 16508, obsolete..... |
| 12453 | 1150 | Arm Oil Tube, for intermediate bearing.. |
| 12454 | 1150 | " " " with 52045, for oiling 12409 |
| 12480 | 1113 | " Side Cap..... |
| 13351 | ----- | Chain, 46 in. to 55 in. long, with 56864 and 56865, for 21028..... |
| 14209 | 3477 | Treadle for 14358..... |
| Nos. 14229 to 14231 for 14232 | | |
| 14229 | 4321 | Driving Attachment Table Belt Guide Bracket with 448c..... |
| 14230 | 4321 | Driving Attachment Table Belt Guide Pulley..... |
| 14231 | 1170 | Driving Attachment Table Belt Guide Pulley Shaft 126928 with 858c..... |
| 14232 | 4321 | Driving Attachment Table Belt Guide complete for 20676, Nos. 14229 to 14231 and four R. H. M. F. O. and A. wood screws 1 1/4 in. No. 10..... |
| 14357 | 3477 | Treadle Stand for 14358..... |
| 14358 | 3477 | Treadle complete for 21028, Nos. 7585, 14209, 14357 and two wood screws 1 1/4 in. No. 12..... |
| 15063 | 1140 | Arm Spool Bracket 2415 with two 12403, for 57-2 Machine..... |

| NO. | PLATE | NAME |
|-------------------------------|-------|--|
| 15072 | 1150 | Bobbin Winder Bobbin Position Pin for 27538..... |
| 15132 | 7429 | Driving Attachment Driving Arm Brake Rivet for 20667..... |
| 16045 | 1150 | Oscillating Shaft (back bearing) Oil Tube |
| 16128 | 1167 | Rock Shaft Hanger (front) with two wood screws 1 in. No. 10, for 16129..... |
| 16129 | 1167 | Rock Shaft complete for 21032, Nos. 2764, 6337, 6338, 7124, 16128, 16647 and two 2770..... |
| 16508 | 1160 | Oscillating Rock Shaft Oil Pad Holder with 12443, obsolete..... |
| 16524 | — | Driving Attachment Balance Wheel Friction Ring (leather) for 16592..... |
| 16592 | 1167 | Driving Attachment Balance Wheel (friction) with 7958, 16524 and two 435c, for 20676..... |
| 16594 | 1167 | Driving Attachment Driving Friction Pulley, 2 $\frac{5}{8}$ in. diam., with 861b and 10236, for 20676..... |
| 16646 | 1167 | Rock Shaft Knee Arm for 16647..... |
| 16647 | — | Rock Shaft Knee Arm complete for 16129, Nos. 2766, 2767 and 16646..... |
| 18014 | 1142 | Needle Bar (hollow) for 57-2 Machine.... |
| 18055 | 7429 | Presser Foot Hinge Pin for 20761..... |
| 19131 | 5737 | Shuttle Bobbin for 20758..... |
| 19131 | 1148 | " (inside) Bobbin for 20531..... |
| 19137 | 1148 | " (outside) Body for 20532..... |
| 19149 | 1148 | " (inside) Tension Spring for 20533..... |
| 19150 | 1148 | " (outside) Tension Spring for 20534..... |
| 19151 | 1160 | Tension Plate, for upper tension, with 19152, for 19153, obsolete..... |
| 19152 | 1160 | Tension Plate Stud for 19151, obsolete... |
| 19153 | 1160 | Tension (upper) complete, Nos. 19151, two each 637c, 1547b, 1560c, 8238 and four 2102, obsolete..... |
| 19155 | 1150 | Face Plate Thread Guard (upper) with 12152, for 19305..... |
| 19156 | 1144 | Thread Take-up Lever for 19157..... |
| 19157 | 1144 | Thread Take-up Lever complete for 57-2 Machine, Nos. 12166, 12409 and 19156..... |
| 19158 | 1150 | Thread Take-up Spring for 57-2 to 57-4 Machines..... |
| Nos. 19159 to 19161 for 19162 | | |
| 19159 | 1149 | Thread Guide Body..... |
| 19160 | 1149 | " " Roller..... |
| 19161 | 1149 | " " Cap..... |

| NO. | PLATE | NAME |
|-------------------------------|-------|--|
| 19162 | — | Thread Guide complete (roller) for 57-2 Machine, Nos. 905b and 19159 to 19161..... |
| 19166 | 1142 | Oscillating Rock Shaft for 19167, obsolete |
| 19167 | — | " " " 19166 with 12388, obsolete..... |
| Nos. 19191 to 19194 for 19195 | | |
| 19191 | 1146 | Tension Plate, for upper tension, with 19231..... |
| 19192 | 1146 | Tension Releaser..... |
| 19193 | 1146 | " Releasing Lever (intermediate) |
| 19194 | 1146 | " " " " " Spring..... |
| 19195 | 1146 | Tension complete (upper) with Tension Release, for 57-2 Machine, Nos. 2269, 19191, 19193, 19194, two each 1547b, 2923, 19192, 44209 and four 2921..... |
| 19221 | 1161 | Wrench for 936 and 1619 (Attachments and Accessories)..... |
| 19231 | 1146 | Tension Releasing Lever (intermediate) Hinge Block for 19191..... |
| 19291 | 1153 | Lap Seam Feller Folder Slide Spring for 57-2 Machine..... |
| 19304 | — | Face Plate for 19305..... |
| 19305 | 1143 | Face Plate complete for 57-2 Machine, Nos. 19155, 19301 and 19327..... |
| 19327 | 7428 | Face Plate Thread Guard (lower) with 12152, for 19305..... |
| 19334 | — | Presser Foot Plate for 19336..... |
| 19335 | — | " " Shank for 19336..... |
| 19336 | 7426 | Presser Foot (hinged) complete for 57-4 Machine, Nos. 7298, 19334 and 19335.. |
| 19386 | 1142 | Oscillating Rock Shaft for 19387..... |
| 19387 | — | Oscillating Rock Shaft complete, Nos. 4784, 12388 and 19386..... |
| 19388 | 1149 | Oscillating Shaft Crank complete for 57-2, and 57-4 Machines, Nos. 457c, 1518e, 19390 and 19496..... |
| 19389 | 1149 | Oscillating Shaft Crank Slide Block for 19390..... |
| 19390 | 1149 | Oscillating Shaft Crank Slide Block complete for 19388 and 20750, Nos. 226e, 969c, 12424 and 19389..... |
| 19496 | — | Oscillating Shaft Crank for 12390 and 19388..... |
| 20023 | 1142 | Presser Bar Spring (heavy) .063 wire.... |
| 20188 | 1142 | Needle Bar Crank with 858c and 1065c... |

NUMERICAL LIST OF PARTS

| NO. | PLATE | NAME |
|--|-------|---|
| 20197 | 1141 | Crank Connecting Rod with 20198 and two 896E..... |
| *20198 | — | Crank Connecting Rod Cap for 20197... |
| 20502 | 1150 | Arm Oil Tube with 29599, for oiling 12496 and 20197..... |
| 20505 | 1142 | Cylinder Feed Cover for 57-2 to 57-4 Machines..... |
| Nos. 20507 to 20512 for 26353, 26390, 26392 AND 57-2 MACHINE | | |
| 20507 | 1151 | Feed Dog, 16 teeth (12 teeth to the inch) for $\frac{1}{4}$ in. to $\frac{5}{8}$ in. gauges..... |
| 20508 | 1152 | Feed Dog, 13 teeth (12 teeth to the inch) for $\frac{3}{8}$ in. to $\frac{5}{8}$ in. gauges..... |
| 20509 | 1153 | Feed Dog, 13 teeth (12 teeth to the inch) for $\frac{1}{4}$ in. to $\frac{3}{8}$ in. gauges..... |
| 20510 | 1152 | Feed Dog, 13 teeth (12 teeth to the inch) for $\frac{3}{8}$ in. to $\frac{5}{8}$ in. gauges (spiked teeth) for heavy work on duck, overalls, etc... |
| 20511 | 1153 | Feed Dog, 13 teeth (12 teeth to the inch) for $\frac{1}{4}$ in. to $\frac{3}{8}$ in. gauges (spiked teeth) for heavy work on duck, overalls, etc... |
| 20512 | 1151 | Feed Dog, 16 teeth (12 teeth to the inch) for $\frac{1}{4}$ in. to $\frac{5}{8}$ in. gauges (spiked teeth) for heavy work on duck, overalls, etc... |
| 20513 | 1154 | Feed Dog, 21 teeth (16 teeth to the inch) for $\frac{3}{8}$ in. to $\frac{5}{8}$ in. gauges, for staying, for 57-2 Machine..... |
| 20514 | 1175 | Feed Dog, 21 teeth (16 teeth to the inch) for $\frac{1}{4}$ in. to $\frac{5}{8}$ in. gauges, for 26353, 26390, 26392 and 57-2 Machine..... |
| 20515 | 1152 | Feed Dog, 23 teeth (22 teeth to the inch) for $\frac{3}{8}$ in. to $\frac{5}{8}$ in. gauges, for 26353, 26390, 26392 and 57-2 Machine..... |
| 20518 | 1141 | Feed Forked Connection with 20519 and two 175E, for 57-2 to 57-4 Machines... |
| *20519 | — | Feed Forked Connection Cap for 20518... |
| 20520 | 1145 | " Raising Fork for 57-2 to 57-4 Machines..... |
| 20521 | 1142 | Feed Regulator..... |
| 20522 | 1141 | " Rock Shaft for 57-2 to 57-4 Machines |
| 20523 | 1141 | " " " Arm with 460c, for 57-2 to 57-4 Machines..... |
| 20524 | 1150 | Needle Clamp with two 209F, for 57-2 Machine..... |
| 20526 | 1142 | Presser Bar for 20527, obsolete..... |
| 20527 | 1156 | " Foot (hinged) Nos. 20528 to 20530, obsolete..... |

NUMERICAL LIST OF PARTS

| NO. | PLATE | NAME |
|-------|-------|--|
| 20528 | — | Presser Foot Shank for 20527, obsolete... |
| 20529 | — | " " Plate for 20527, obsolete... |
| 20530 | 1150 | " " Hinge Pin for 20527, 20638, 20643, 20646, 20648, 20682, 20754, 20777 and 21014..... |
| 20531 | 1148 | Shuttle (inside) $1\frac{1}{8}$ in. diam., for 57-2 Machine, Nos. 19131, 20533 and 20540 |
| 20532 | 1148 | Shuttle (outside) $1\frac{1}{8}$ in. diam., for 57-2 Machine, Nos. 19131, 19137 and 20534 |
| 20533 | 1148 | Shuttle (inside) Bobbin Case complete for 20531, Nos. 591F, 592E, 2521, 19149, 20536 and 20774..... |
| 20534 | 1148 | Shuttle (outside) Bobbin Case complete for 20532, Nos. 591F, 592E, 2521, 19150, 20537 and 20775..... |
| 20535 | 1149 | Shuttle Bobbin Case Extractor (Attachments and Accessories)..... |
| 20536 | 1148 | Shuttle (inside) Bobbin Case Latch and Position Finger for 20533..... |
| 20537 | 1148 | Shuttle (outside) Bobbin Case Latch and Position Finger for 20534..... |
| 20538 | 1147 | Shuttle (inside) Bobbin Case Position Plate for 20543..... |
| 20539 | 1147 | Shuttle (outside) Bobbin Case Position Plate for 20543..... |
| 20540 | 1148 | Shuttle (inside) Body for 20531..... |
| 20543 | 1147 | Shuttle Race complete for 57-2 Machine, Nos. 935E, 20538, 20539, 20544, 20545 and two each 190b and 662b..... |
| 20544 | — | Shuttle Race Body for 20543..... |
| 20545 | 1147 | " " Loop Separator for 20543... |
| 20548 | 1151 | Throat Plate, small needle hole, for lap seam feller, for 20507, 20512 and 20514 |
| 20549 | 1152 | Throat Plate, for lap seam feller, for 20508, 20510 and 20515..... |
| 20550 | 1153 | Throat Plate, for lap seam feller, for 20509 and 20511..... |
| 20551 | 1154 | Throat Plate for 20513..... |
| 20552 | 1175 | " " " 20507, 20512 and 20514 |
| 20553 | 1176 | " " " 20508, 20510 and 20515 |
| 20554 | 1176 | " " " 20509 and 20511..... |
| 20555 | — | " " largeneedle hole, for lap seam feller, for 20507, 20512 and 20514..... |
| 20556 | 1177 | Throat Plate complete for 20509 and 20511, for lap seam feller, for 57-2 Machine, Nos. 20687, 20688 and two 1053b..... |
| 20557 | 1178 | Throat Plate with 4515, for 20513..... |

NUMERICAL LIST OF PARTS

| NO. | PLATE | NAME |
|-------|-------|---|
| 20558 | 1140 | Pitman, 13 in. long, for 21028 and 21032.. |
| 20559 | 1140 | Lifting Lever Spring for 21028 and 21032 |
| 20561 | 1164 | Drip Pan |
| 20562 | 1143 | Cylinder Cover for 26277 |
| 20563 | 1142 | Presser Bar (hollow) for 57-2 and 57-4 Machines..... |
| 20564 | 7434 | Cloth Plate for 20565 |
| 20565 | — | Cloth Plate complete for 20566, Nos. 3286, 20564, 20568 and two 2101 |
| 20566 | — | Cloth Plate with Bracket complete for 57-14 Machine, Nos. 20565, 20567 and two 389r |
| 20567 | 7435 | Cloth Plate Bracket with 345c, for 20566 |
| 20568 | 7435 | " " Slide for 20565 |
| 20573 | 7432 | Feed Dog, 13 teeth (18 teeth to the inch) for shirt work, for 57-14 Machine..... |
| 20577 | 7433 | Feed Dog, 12 teeth (18 teeth to the inch) for 57-14 Machine..... |
| 20579 | 7432 | Feed Dog, 13 teeth (18 teeth to the inch) for shirt work, for 57-14 Machine..... |
| 20581 | 7435 | Feed Forked Connection for 57-14 Ma- chine..... |
| 20583 | 7436 | Feed Rock Shaft Crank with 190b, for 57-14 Machine..... |
| 20587 | 7432 | Presser Foot (concave feed dog bearing) for 20577, for 57-14 Machine..... |
| 20588 | 7432 | Presser Foot (concave feed dog bearing) for 20573, for 57-14 Machine..... |
| 20589 | 1193 | Presser Foot for 20662 and 20685, for 57-3 Machine..... |
| 20621 | 7427 | Shuttle Driver and Feed Lifting Eccentric for 57-3 and 57-4 Machines..... |
| 20625 | 7426 | Presser Foot for 20656 and 20661, for 57-3 Machine..... |
| 20630 | 1179 | Feed Dog, 22 teeth (16 teeth to the inch) for $\frac{1}{8}$ in. to $\frac{3}{8}$ in. gauges, for shirt closing, for 57-2 Machine..... |
| 20631 | 987 | Feed Dog, 22 teeth (16 teeth to the inch) for $\frac{1}{8}$ in. to $\frac{3}{8}$ in. gauges, for shirt closing, for 57-2 Machine..... |
| 20632 | 1179 | Throat Plate with 2653, for 20630 and 26339 |
| 20633 | 987 | Throat Plate with 2653, for 20631 and 26339 |
| 20636 | — | Lap Seam Feller Folder Slide with 10165, for 26353, 26390, 26392 and 26394..... |
| 20637 | — | Presser Foot Plate for 20638..... |

NUMERICAL LIST OF PARTS

| NO. | PLATE | NAME |
|-------------------------------|-------|--|
| 20638 | 1152 | Presser Foot (hinged) complete, for lap seam feller, for 57-2 Machine, Nos. 330r, 20530, 20637 and 21016 |
| 20640 | 7437 | Feed Rock Shaft Oil Tube, for back bear- ing, for 57-14 Machine..... |
| 20641 | 1143 | Cylinder Cover for 57-2 and 57-3 Machines |
| 20642 | — | Presser Foot Plate for 20643 |
| 20643 | 1154 | Presser Foot (hinged) complete, for inside stays, for 20551, Nos. 330r, 20530, 20642 and 21016 |
| 20645 | — | Presser Foot Plate for 20646 |
| 20646 | 1156 | Presser Foot (hinged) complete, for staying seams, for 57-2 Machine, Nos. 330r, 20530, 20645 and 21016 |
| 20647 | — | Presser Foot Plate for 20648 |
| 20648 | 1156 | Presser Foot (hinged) complete, for strip folding, with guide for opening seams, for 57-2 Machine, Nos. 330r, 20530, 20647 and 21016..... |
| 20649 | 5737 | Shuttle Bobbin Case Latch for 20650..... |
| 20650 | — | Shuttle Bobbin Case Hinge for 20756, Nos. 2973, 2974 and 20649 |
| 20654 | 5737 | Shuttle Tension Spring for 20756..... |
| 20656 | 1189 | Feed Dog, 18 teeth (16 teeth to the inch) for shirt work, for 57-3 Machine..... |
| 20657 | 1189 | Throat Plate for 20656..... |
| 20659 | 7435 | Shuttle Race with 20700 and two 1053b, for 57-14 Machine..... |
| 20662 | 1190 | Feed Dog, 15 teeth (16 teeth to the inch) for tailor work, for 57-3 Machine..... |
| 20663 | 1190 | Throat Plate for 20662..... |
| 20664 | 1191 | Feed Dog, 13 teeth (14 teeth to the inch) for shirt work, for 57-3 Machine..... |
| 20665 | 1191 | Throat Plate, large needle hole, for 20664 |
| 20666 | — | " " small needle hole, for 20664 |
| Nos. 20667 to 20669 for 20670 | | |
| 20667 | 4314 | Driving Attachment Driving Arm with 2928 and two 15132..... |
| 20668 | 4314 | Driving Attachment Driving Arm Bracket |
| 20669 | 4314 | " " " " Shaft.. |
| 20670 | — | Driving Attachment Driving Arm com- plete for 20676, Nos. 341b, 427e, 1508c, 1594c, 12178, 20667 to 20669, 20671, 20672, 20675, 20678 and two 20677.... |
| 20671 | 4314 | Driving Attachment Starting Crank for 20670..... |

NUMERICAL LIST OF PARTS

| NO. | PLATE | NAME |
|-------|-------|---|
| 20672 | 4314 | Driving Attachment Starting Crank Spring for 20670..... |
| 20673 | 4321 | Driving Attachment Rock Shaft complete for 20676, Nos. 2763 and two each 2764 and 27683..... |
| 20674 | 4314 | Driving Attachment Starting Crank Connecting Rod for 20676..... |
| 20675 | 7429 | Driving Attachment Starting Crank Connecting Rod Joint for 20670..... |
| 20676 | — | Driving Attachment with Rock Shaft and Treadle complete. Nos. 210b, 692b, 1620e, 16592, 16594, 20670, 20673, 20674, 24355, 27072, 126210 and two 14232..... |
| 20677 | 7429 | Driving Attachment Driving Arm Pin for 20670..... |
| 20677 | 7429 | Driving Attachment Starting Crank Pin for 20670..... |
| 20678 | 7429 | Driving Attachment Starting Crank Connecting Rod Joint Hinge Stud for 20670..... |
| 20680 | — | Presser Foot Plate for 20682..... |
| 20681 | — | " " Shank for 20682..... |
| 20682 | 1156 | Presser Foot (hinged) complete, hollowed across bottom between needle holes and heel, for riding seams, for lap seam feller, for 57-2 Machine, Nos. 330j, 20530, 20680 and 20681..... |
| 20685 | 1193 | Feed Dog, 20 teeth (16 teeth to the inch) for overall work, for 57-3 and 57-4 Machines..... |
| 20686 | 1193 | Throat Plate for 20685..... |
| 20687 | — | " " Body, for 20556..... |
| 20688 | 1177 | " " Needle Hole Strip for 20556..... |
| 20697 | 7436 | Shuttle Driver and Feed Lifting Cam for 57-14 Machine..... |
| 20698 | — | Throat Plate, large needle hole, for 20573..... |
| 20699 | 7432 | " " small needle hole, for 20573..... |
| 20700 | 7436 | Shuttle Race Cap for 20659..... |
| 20701 | 7437 | Feed Dog Carrier for 57-14 Machine..... |
| 20708 | — | Throat Plate, large needle hole, for 20577..... |
| 20709 | 7433 | " " small needle hole, for 20577..... |
| 20711 | 1171 | Presser Foot (strip folding) with 330j, for 57-2 Machine..... |
| 20712 | 1171 | Presser Foot (tube) with 330j, for 57-2 Machine..... |
| 20713 | 4320 | Shuttle Bobbin Case Guide Plate for 20717 and 20718..... |

NUMERICAL LIST OF PARTS

| NO. | PLATE | NAME |
|--------|-------|--|
| 20714 | 4320 | Shuttle Race Cap for 20717 and 20718..... |
| 20715 | — | " " Body for 20717..... |
| 20716 | — | " " " " 20718..... |
| 20717 | 4320 | Shuttle Race complete (steel) for 57-4 Machine, Nos. 20713 to 20715 and two each 399j and 934b..... |
| 20718 | 7427 | Shuttle Race complete (steel) for 57-3 Machine, Nos. 20713, 20714, 20716 and two each 399j and 934b..... |
| 20719 | 7437 | Shuttle Race Cover for 57-14 Machine..... |
| 20747 | 4321 | Machine Base with four each 121e and wood screws 1 1/4 in. No. 12..... |
| 20748 | 7432 | Throat Plate for 20676..... |
| 20749 | — | Oscillating Shaft Crank for 20750..... |
| 20750 | 7427 | Oscillating Shaft Crank complete for 57-3 and 57-14 Machines, Nos. 210c, 1518e, 19890 and 20749..... |
| 20751 | 1175 | Throat Plate for 20630..... |
| 20753 | — | Presser Foot Plate for 20754..... |
| 20754 | 1171 | Presser Foot (hinged) complete with guide on bottom of plate to the right of needle hole, for 57-2 Machine, Nos. 330j, 20530, 20753 and 21016..... |
| 20755 | 5737 | Shuttle Bobbin Case Position Finger for 20756..... |
| 20756 | 5737 | Shuttle Bobbin Case complete for 20758, Nos. 591e, 592e, 2523, 2975, 20650, 20654 and 20755..... |
| 20757 | 5737 | Shuttle Body for 20758..... |
| 20758 | 5737 | Shuttle, 1 1/8 in. diam., for 57-3, 57-4 and 57-14 Machines, Nos. 19131, 20756 and 20757..... |
| 20759 | — | Presser Foot Plate for 20761..... |
| 20760 | — | " " Shank for 20761..... |
| 20761 | 1171 | Presser Foot (spring hinged) complete, for lap seam feller, for 57-2 Machine, Nos. 330j, 18055, 20759, 20760 and 35250..... |
| 20774 | — | Shuttle (inside) Bobbin Case for 20533..... |
| 20775 | — | " (outside) Bobbin Case for 20534..... |
| 20776 | — | Presser Foot Plate for 20777..... |
| 20777 | 7436 | Presser Foot (hinged) complete, with tube for tape and guide for opening seams, for 57-2 Machine, Nos. 330j, 20530, 20776 and 21016..... |
| 20783 | 7436 | Shuttle Driver and Feed Lifting Eccentric for 57-2 Machine..... |
| *21001 | — | Arm with 11104 for 57-2 Machine..... |

| NO. | PLATE | NAME |
|---|-------|---|
| Nos. 21002 to 21007 for 57-2 to 57-4 Machines | | |
| 21002 | 1167 | Arm Shaft..... |
| 21003 | 1166 | " " Gear with 453c and 454c, obsolete..... |
| 21004 | 1140 | Arm Side Wheel with two 450c..... |
| 21005 | 1166 | " " " Shaft..... |
| 21006 | 1166 | " " " " Collar with 449c.. |
| 21007 | 1166 | " " " " Gear with 453c and 454c, obsolete..... |
| 21008 | 1166 | Arm Side Wheel Shaft Gear Cover for 21009..... |
| 21009 | — | Arm Side Wheel Shaft Gear Cover 21008 with 460c and 21019, for 21010..... |
| 21010 | 1166 | Arm Side Wheel Shaft Gear Cover complete for 57-2 Machine, Nos. 21009 and 21038..... |
| *21011 | — | Cylinder, 2 $\frac{1}{8}$ in. diam., for 57-2 Machine |
| 21012 | 1141 | Feed Rod for 57-2 to 57-4 Machines..... |
| 21013 | 1141 | Oscillating Shaft for 57-2 to 57-4 Machines |
| 21014 | 1151 | Presser Foot (hinged) complete, for general work, for 57-2 Machine, Nos. 330j, 20530, 21015 and 21016..... |
| 21015 | — | Presser Foot Plate for 21014..... |
| 21016 | — | " " Shank for 20638, 20643, 20646, 20648, 20754, 20777 and 21014.. |
| 21017 | 1156 | Presser Foot (solid) with 330j, for 57-2 Machine..... |
| 21019 | 1166 | Thread Retainer Body for 21009..... |
| 21020 | 1166 | " " Thread Separator for 21038..... |
| *21022 | — | Arm with 11104, for 57-3 and 57-4 Machines..... |
| 21023 | 1170 | Arm Side Wheel Shaft Gear Cover for 57-3 and 57-4 Machines..... |
| *21024 | — | Cylinder, 2 $\frac{1}{8}$ in. diam., for 57-3 and 57-4 Machines..... |
| 21026 | 1166 | Arm Shaft Gear with 453c and 454c, for 57-2 to 57-4 Machines..... |
| 21027 | 1166 | Arm Side Wheel Shaft Gear with 453c and 454c, for 57-2 to 57-4 Machines..... |
| 21028 | — | Foot Lifter complete, Nos. 76b, 766b, 802b, 1521e, 12237, 12240, 12241, 12416, 13351, 14358, 20558 and 20559..... |
| *21029 | — | Cylinder, 2 $\frac{1}{8}$ in. diam., for 57-14 Machine |

| NO. | PLATE | NAME |
|--------|-------|--|
| 21030 | 7434 | Feed Rock Shaft for 57-14 Machine..... |
| 21031 | 7435 | Oscillating Shaft for 57-14 Machine..... |
| 21032 | — | Knee Lifter complete, Nos. 76b, 766b, 802b, 1521e, 12237, 12240, 12241, 12416, 16129, 20558 and 20559..... |
| 21037 | 7428 | Thread Retaining Stud for 21038..... |
| 21038 | — | Thread Retainer complete for 21010, Nos. 21020, 21037, 210958, 210992 and 210993..... |
| 21040 | 7425 | Cylinder Cover for 57-4 Machine..... |
| 21011 | 1170 | Needle Bar (hollow) with 857ir, for 57-1 Machine..... |
| 21042 | 7428 | Presser Bar Extension with two 202e, for 57-4 Machine..... |
| 21043 | 7428 | Presser Bar Extension Foot Bar for 57-4 Machine..... |
| 21044 | 7425 | Throat Plate for 20685..... |
| 23258 | 7438 | Driving Attachment Treadle Bracket (left) Hook Friction Washer for 126206..... |
| 23724 | 7429 | Arm Shaft Gear Pin for 57-2 to 57-4 Machines..... |
| 23724 | 7429 | Arm Side Wheel Pin for 57-2 to 57-4 Machines..... |
| 23724 | 7429 | Arm Side Wheel Shaft Collar Pin for 57-2 to 57-4 Machines..... |
| 23724 | 7429 | Arm Side Wheel Shaft Gear Pin for 57-2 to 57-4 Machines..... |
| 24129 | 1144 | Thread Take-up Crank for 57-2 Machine |
| 24355 | 1170 | Driving Attachment Balance Wheel Oil Cover for 20676..... |
| 25888 | 987 | Hemmer Tongue, for shirt closing, for 57-2 Machine..... |
| 26026 | 1161 | Screw Driver, machine (Attachments and Accessories)..... |
| 26054 | 987 | Throat Plate Cloth Guide for 20632 and 20633..... |
| 26277 | 1153 | Lap Seam Feller Holder (adjustable) for 57-2 Machine..... |
| 26337 | 987 | Hemmer (foot) for felling, for shirt closing, for 57-2 Machine..... |
| 26338 | 987 | Hemmer Bracket with two 211e, for shirt closing, for 26337..... |
| 26339 | 987 | Throat Plate Spring Guide for 20632 and 20633..... |
| *26352 | — | Lap Seam Feller Folder for 26353..... |

| NO. | PLATE | NAME |
|-------------------------------|-------|---|
| 26353 | 1155 | Lap Seam Feller (right hand) complete for 57-2 Machine, for gauges $\frac{3}{8}$ in. to $\frac{1}{2}$ in., for light, medium, heavy, X-heavy, XX-heavy and XXX-heavy material, Nos. 20636 and 26352 |
| 26384 | 1155 | Stay Guide (lower) for 26386 |
| 26385 | 1155 | " " (upper) for 26386 |
| 26386 | — | Stay Guide complete for 57-2 Machine, Nos. 26384 and 26385 |
| *26389 | — | Lap Seam Feller Folder for 26390 |
| 26390 | 1155 | Lap Seam Feller (left hand) complete for 57-2 Machine, for gauges $\frac{3}{8}$ in. to $\frac{1}{2}$ in., for light, medium, heavy, X-heavy, XX-heavy and XXX-heavy material, Nos. 20636 and 26389 |
| *26391 | — | Lap Seam Feller Folder for 26392 |
| 26392 | 1155 | Lap Seam Feller (right hand) complete for 57-2 Machine, to fold top only, Nos. 20636 and 26391 |
| *26393 | — | Lap Seam Guide for 26394 |
| 26394 | 1156 | Lap Seam Guide complete for 57-2 Machine, Nos. 20636 and 26393 |
| 26485 | 1161 | Screw Driver, shuttle tension (Attachments and Accessories) |
| 27072 | 7431 | Driving Attachment Shaft Driving Pulley (sectional, grooved) 12 in. diam., $1\frac{1}{8}$ in. bore, with two 597c, for 20676 |
| 27302 | 1162 | Bobbin Winder Frame for 27651 |
| 27303 | 1150 | " " " Spring for 27651 .. |
| 27306 | 1162 | " " " Spool Pin for 27308 |
| 27307 | 1162 | " " " Stand for 27308 .. |
| 27308 | 1162 | Bobbin Winder Spool Stand complete for 27588, Nos. 418E, 1562r, 2106, 10141, 11241, 27306, 27307 and two each 2455 and wood screws 1 in. No. 10 |
| 27538 | 1162 | Bobbin Winder Spindle 27849 with 15072, 27850 and 41828, for 27651 |
| 27552 | 1162 | Bobbin Winder Base for 27651 |
| 27553 | 1162 | " " Pulley for 27651 |
| 27587 | 1162 | " " Stop Latch for 27651 |
| 27588 | — | Bobbin Winder (swinging automatic, right hand) complete, Nos. 27308 and 27651 |
| Nos. 27637 to 27639 for 27640 | | |
| 27637 | 1164 | Driving Attachment Treadle Pitman Rod (lower) |

| NO. | PLATE | NAME |
|--------|-------|--|
| 27638 | 1164 | Driving Attachment Treadle Pitman Rod (lower) Spring |
| 27639 | 1164 | Driving Attachment Treadle Pitman Rod (upper) |
| 27640 | 1164 | Driving Attachment Treadle Pitman complete for 126210, Nos. 2762, 6055, 27637 to 27639 and two 9079 |
| 27651 | 1162 | Bobbin Winder for 27588, Nos. 35D, 1620J, 27302, 27303, 27538, 27552, 27553, 27587, 50356D and two wood screws 1 in. No. 7 |
| 27683 | 4321 | Driving Attachment Rock Shaft Arm with two 356c, for 20673 |
| 27739 | 7234 | Thread Unwinder Thread Cone (wood) for large cones, for 225394 and 225396 |
| 27849 | — | Bobbin Winder Spindle for 27538 |
| 27850 | — | " " " Collar for 27538 .. |
| 29599 | 7429 | Arm Oil Tube Packing (felt) for 20502 .. |
| 32572 | 7428 | Tension Releasing Disc for 57-3, 57-4 and 57-14 Machines |
| 32574 | 7428 | Tension Releasing Pin for 57-3, 57-4 and 57-14 Machines |
| 35250 | 7429 | Presser Foot Spring for 20761 |
| 41828 | — | Bobbin Winder Spindle Collar Pin for 27538 |
| 43944 | 7428 | Tension Releasing Lever for 57-3, 57-4 and 57-14 Machines |
| 43945 | 7428 | Tension Spring for 57-3, 57-4 and 57-14 Machines |
| 44141 | — | Tension Screw Stud 50327c with 1560c, for 57-3, 57-4 and 57-14 Machines |
| 44209 | — | Tension Screw Stud 916c with 1560c, for 19195 |
| 46681 | 7435 | Driving Attachment Treadle Bracket (right) for 60502 |
| 50327c | 7428 | Tension Screw Stud for 44141 |
| 50356D | 7430 | Bobbin Winder Frame Hinge Screw for 27651 |
| 50429c | 7438 | Thread Retainer Set Screw for 57-14 Machine |
| 51077E | 7438 | Bolt with 51581E, to secure machine to table (Attachments and Accessories) .. |
| 51581E | 7438 | Bolt Nut for 51077 |
| 52045 | 7438 | Arm Oil Tube Packing (braided cotton) for 11119 and 12454 |
| 52378 | 7428 | Thread Retaining Stud for 52379 |

| NO. | PLATE | NAME |
|---------|-------|---|
| 52379 | — | Thread Retainer complete for 57-3 and 57-4 Machines, Nos. 52378, 52398, 210958 and 210993..... |
| 52398 | 7428 | Thread Retaining Spring for 52379..... |
| 52454 | 7436 | " Retainer for 57-14 Machine..... |
| 56864 | 7438 | Chain Hook (large) for 13351..... |
| 56865 | 7438 | " " (small) for 13351..... |
| 60502 | — | Driving Attachment Treadle Bracket (right) 46681 with two wood screws 1 in. No. 14, for 126209..... |
| 120341 | 1161 | Tweezers, curved (Attachments and Accessories)..... |
| 120346 | 1161 | Oiler (copper plated) with 120347 (Attachments and Accessories)..... |
| 120347 | 1161 | Oiler Spout, 9 inches long, for 120346 ... |
| 126036 | 3477 | Driving Attachment Treadle for 126209.. |
| 126205 | 7435 | " " " Bracket (left) for 126206..... |
| 126206 | — | Driving Attachment Treadle Bracket (left) complete for 126209, Nos. 23258, 126205, 126207, 126208 and two wood screws 1 in. No. 14..... |
| 126207 | 7438 | Driving Attachment Treadle Bracket (left) Hook for 126206..... |
| 126208 | 7438 | Driving Attachment Treadle Bracket (left) Hook Rivet for 126206..... |
| 126209 | — | Driving Attachment Treadle complete for 126210, Nos. 60502, 126036 and 126206..... |
| 126210 | — | Driving Attachment Treadle and Pitman complete for 20676, Nos. 27640 and 126209..... |
| 126928 | — | Driving Attachment Table Belt Guide Pulley Shaft for 14231..... |
| 200383c | 7438 | Thread Unwinder Spool Rest Rod Set Screw for 202490..... |
| 201018c | 7438 | Thread Unwinder Spool Rest Set Screw for 225389 and 225395..... |
| 201696j | 7438 | Thread Unwinder Thread Guide Lock Nut for 225394 and 225396..... |
| 202490 | 7233 | Thread Unwinder Spool Stand with 200383c, for 225394 and 225396..... |
| 210958 | 7428 | Thread Retaining Collar for 21038 and 52379..... |
| 210992 | 7428 | Thread Retaining Spring for 21038..... |
| 210993 | 7428 | " " Sleeve for 21038 and 52379..... |

| NO. | PLATE | NAME |
|--------|-------|---|
| 225388 | 7233 | Thread Unwinder Spool Rest Rod for 225394 and 225396..... |
| 225389 | 8523 | Thread Unwinder Spool Rest with 201018c, for 225394..... |

Nos. 225390 TO 225392 FOR 225391 AND 225396

| | | |
|--------|------|--|
| 225390 | 7234 | Thread Unwinder Thread Cone Holder for inverted cones..... |
| 225391 | 7233 | Thread Unwinder Thread Guide..... |
| 225392 | 7233 | " " " " Rod with 208E and 225393..... |
| 225393 | 7438 | Thread Unwinder Thread Guide Rod Washer for 225392..... |
| 225391 | 8523 | Thread Unwinder complete, for one spool, Nos. 201696j, 202490, 225388, 225389, 225391, 225392 and three wood screws $\frac{7}{8}$ in. No. 12..... |
| 225395 | 7233 | Thread Unwinder Spool Rest with 201018c, for 225396..... |
| 225396 | 7233 | Thread Unwinder complete, for two spools, Nos. 201696j, 202490, 225388, 225392, 225395, two 225391 and three wood screws $\frac{7}{8}$ in. No. 12..... |

Genuine Singer Needles and their Containers are marked with the Company's Trade Mark "SIMANCO." 1

Needles in Containers marked "For Singer Machines" are not Singer made needles. 2

25032

211

225307

2257

20033

5508

2003

ILLUSTRATIONS OF PARTS

FOR

MACHINES

Nos. 57-2 to 57-4 and 57-14

20054

233

2593

11.2

5530

ILLUSTRATIONS OF PARTS
 FOR
 MACHINES
 Nos. 27-2 to 27-4 and 27-14

PLATE 987—FULL SIZE

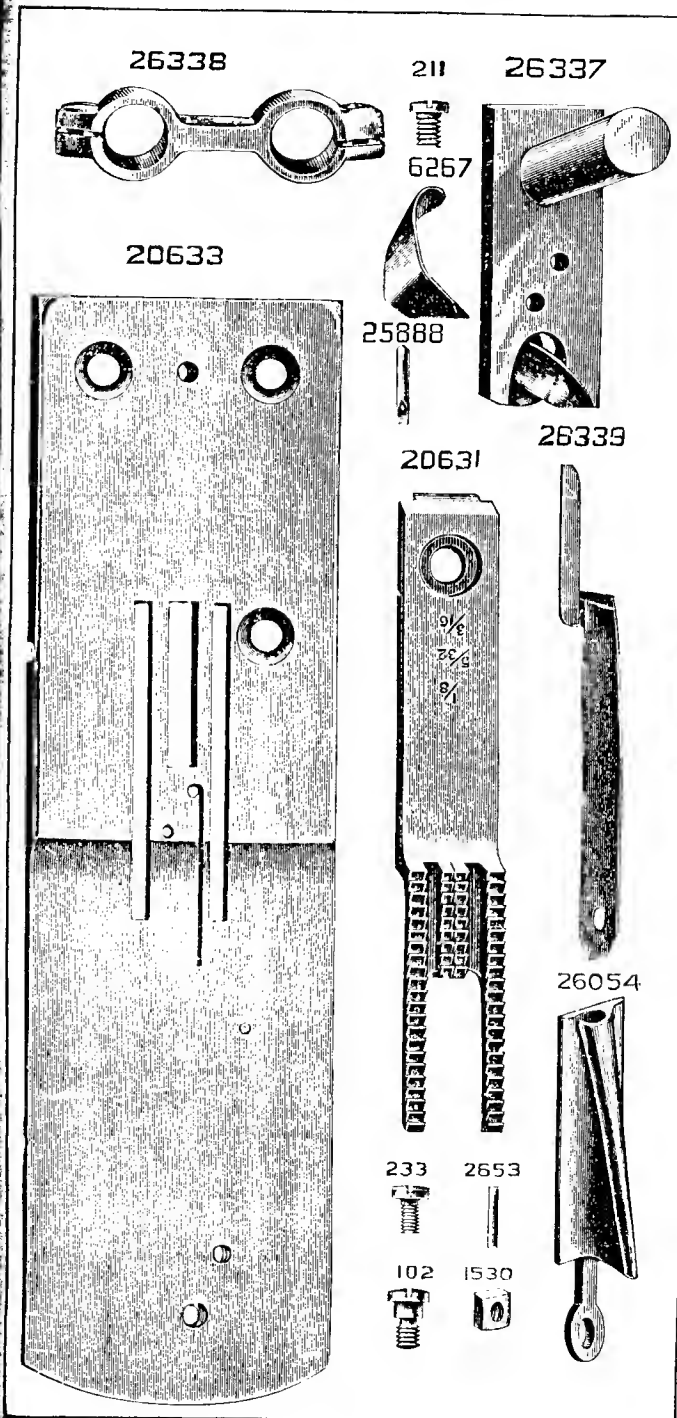 


PLATE 1140—ONE-HALF SIZE

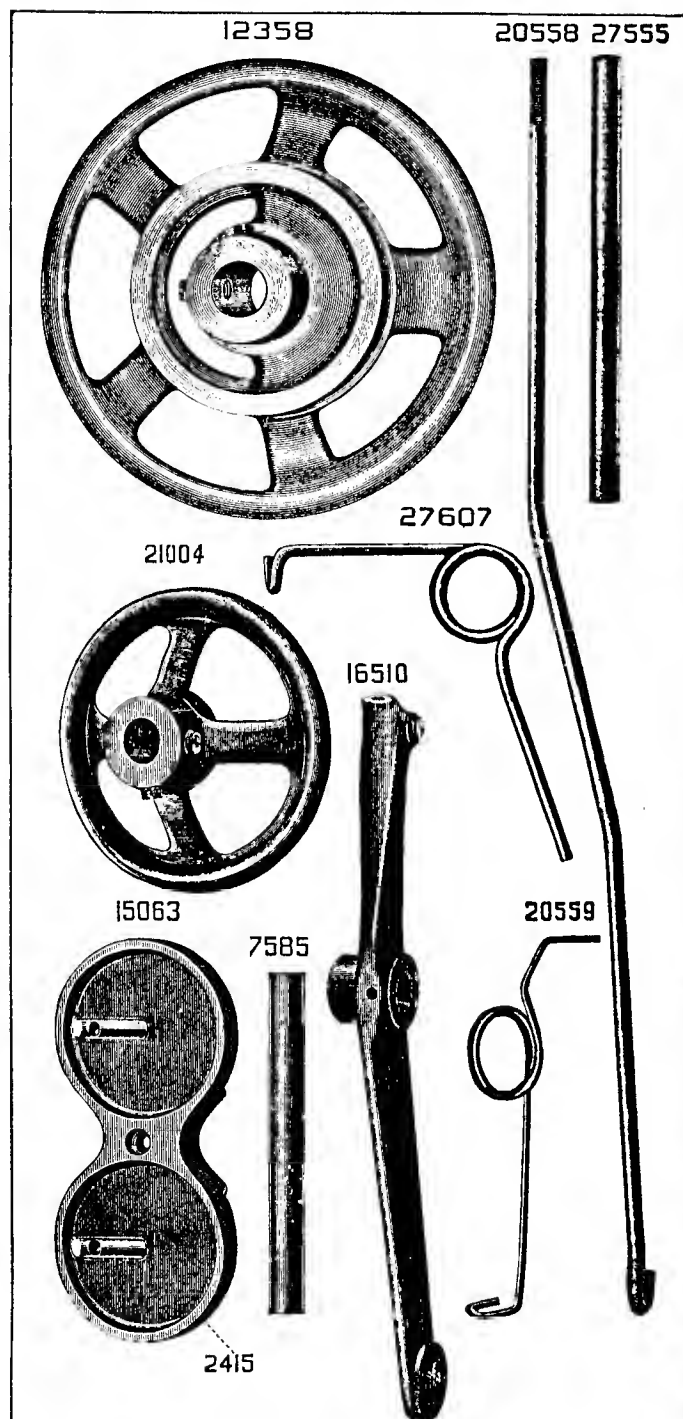 


PLATE 1141—ONE-HALF SIZE

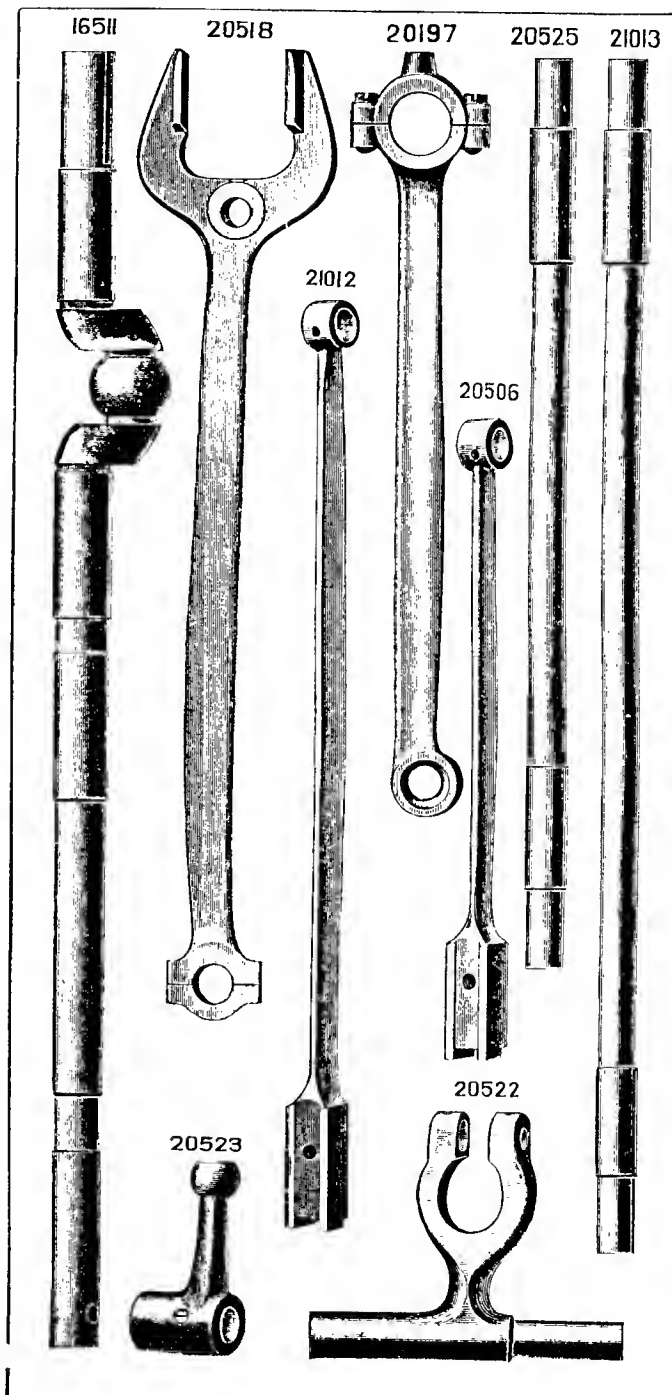 


PLATE 1142—ONE-HALF SIZE

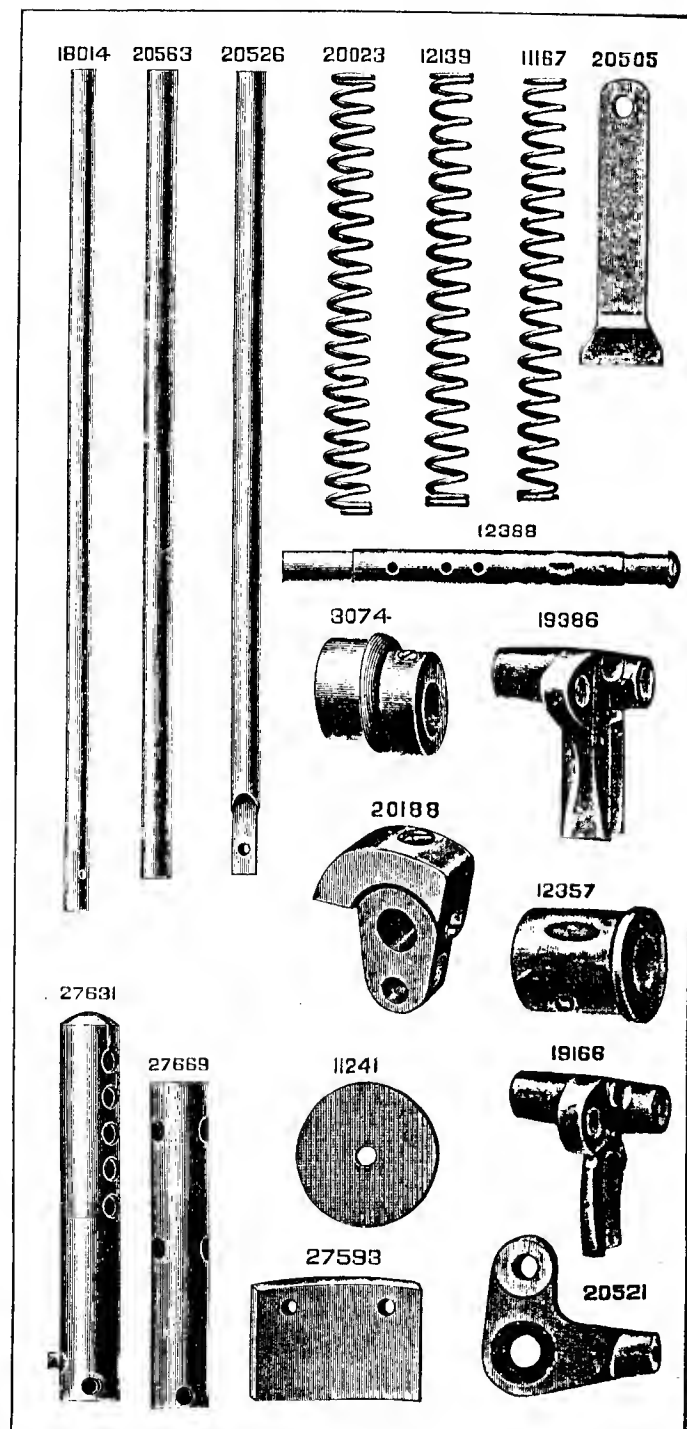 


PLATE 1143—ONE-HALF SIZE

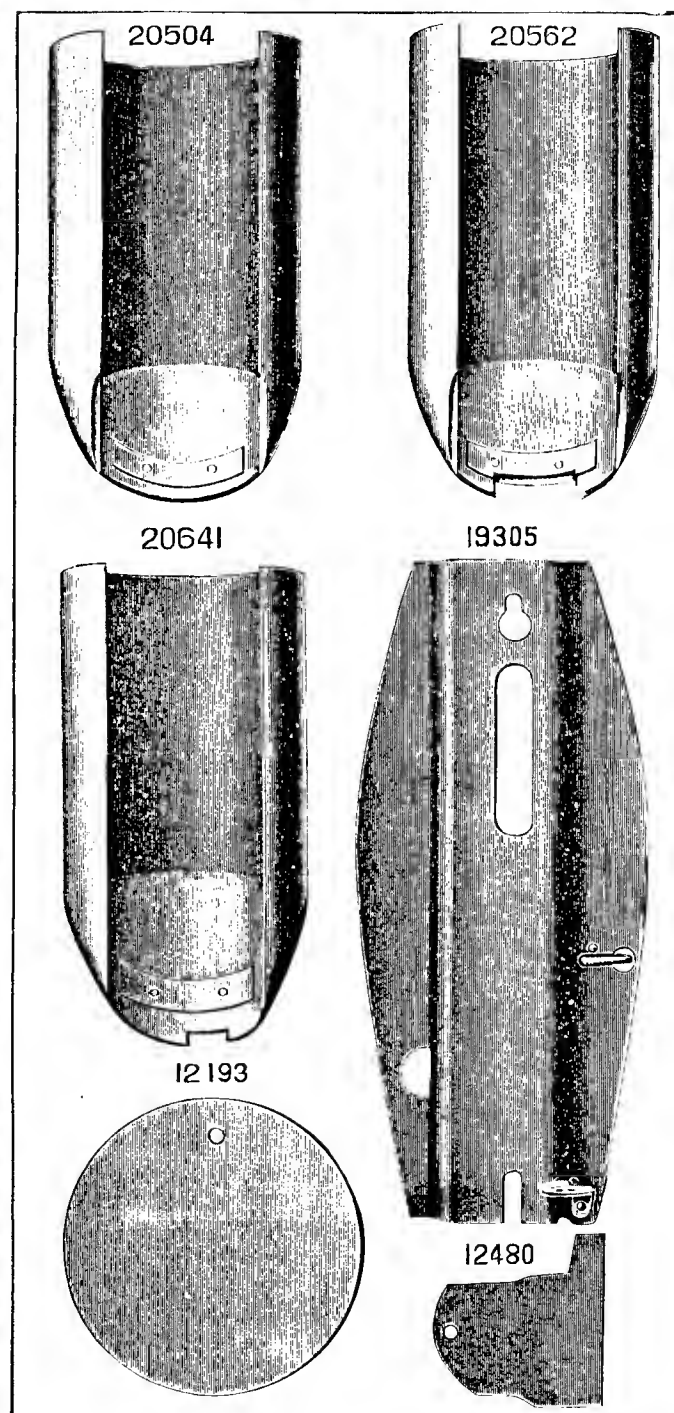 


PLATE 1144—FULL SIZE

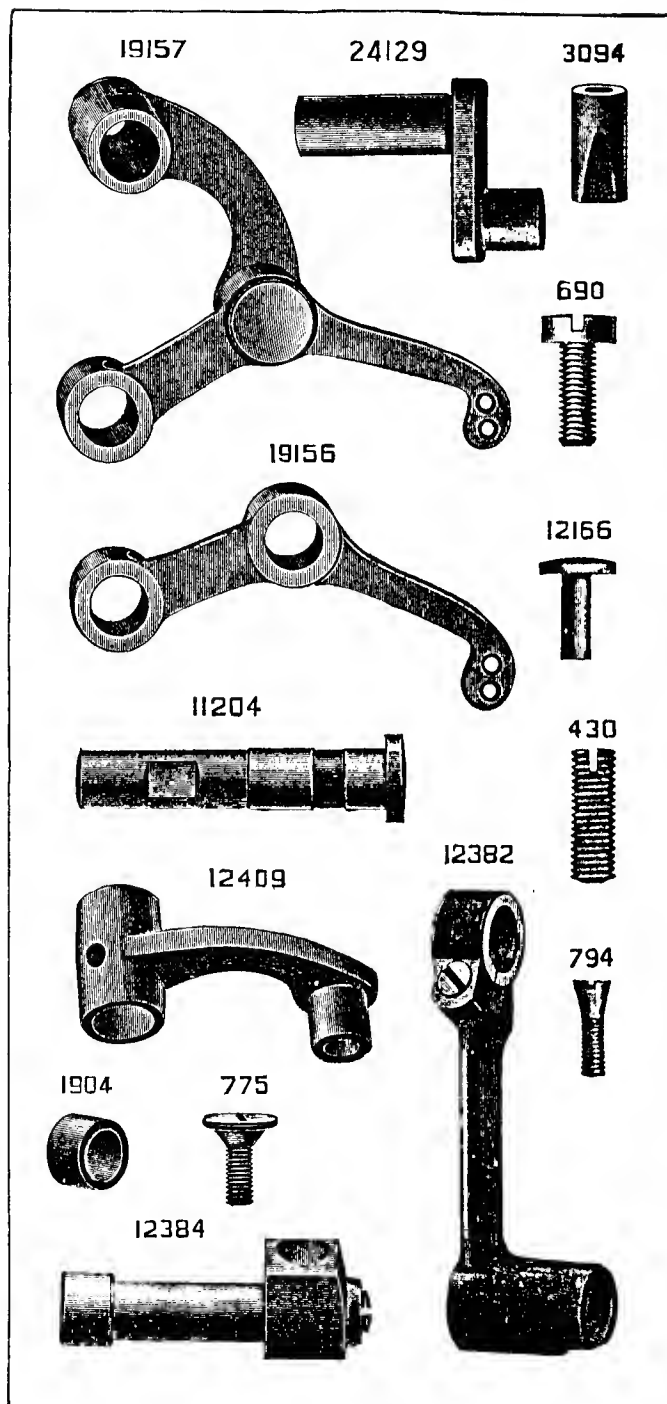 


PLATE 1145—FULL SIZE

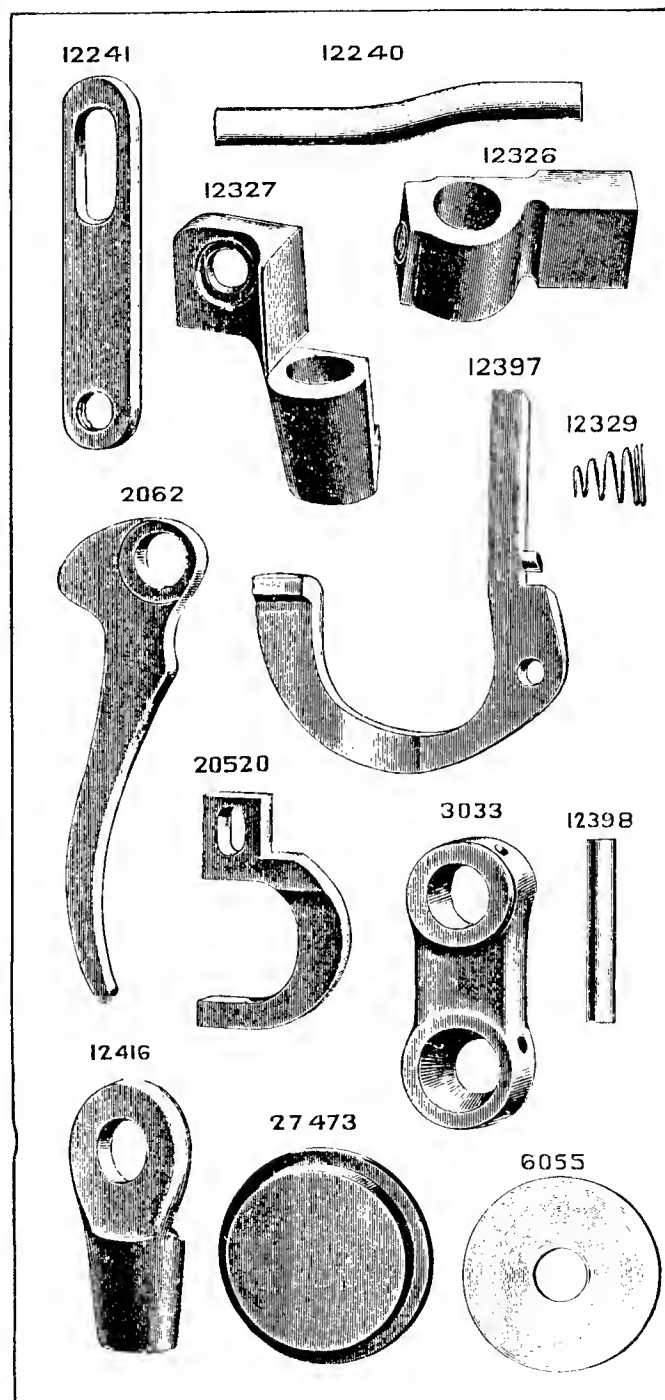 


PLATE 1146—FULL SIZE

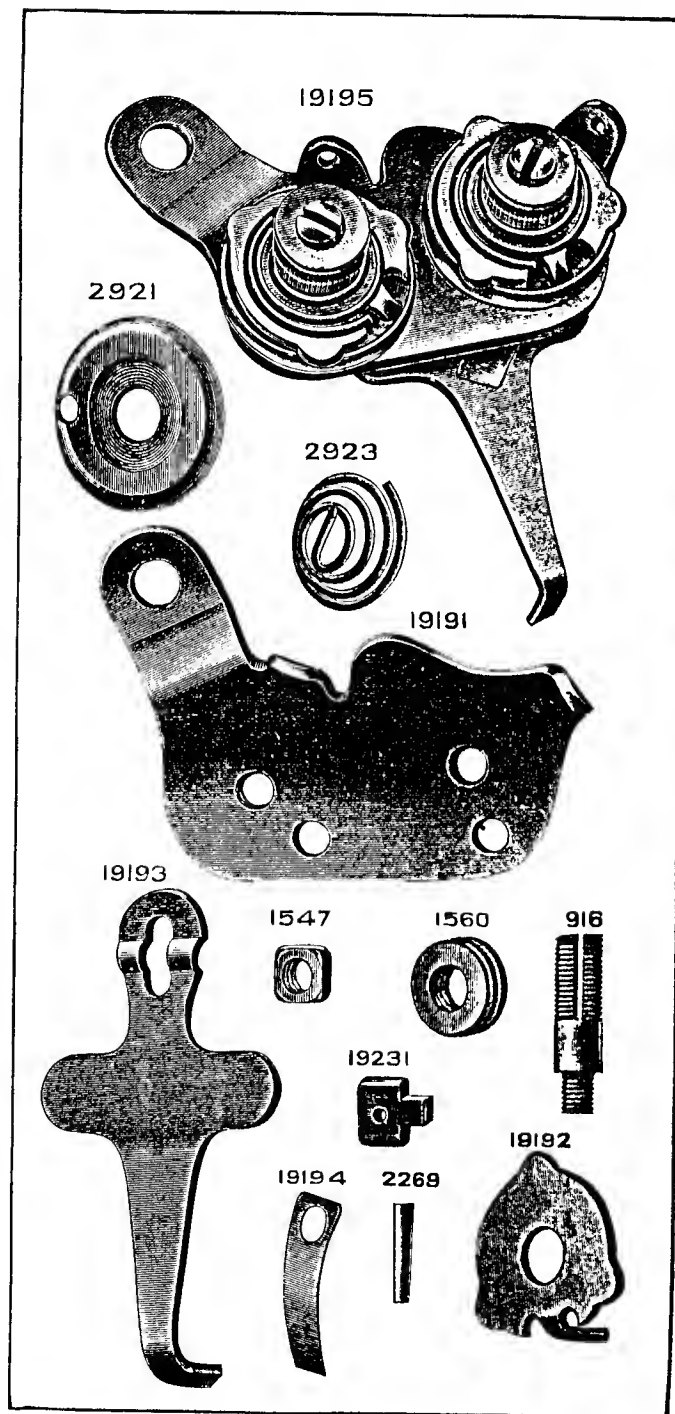 


PLATE 1147—FULL SIZE

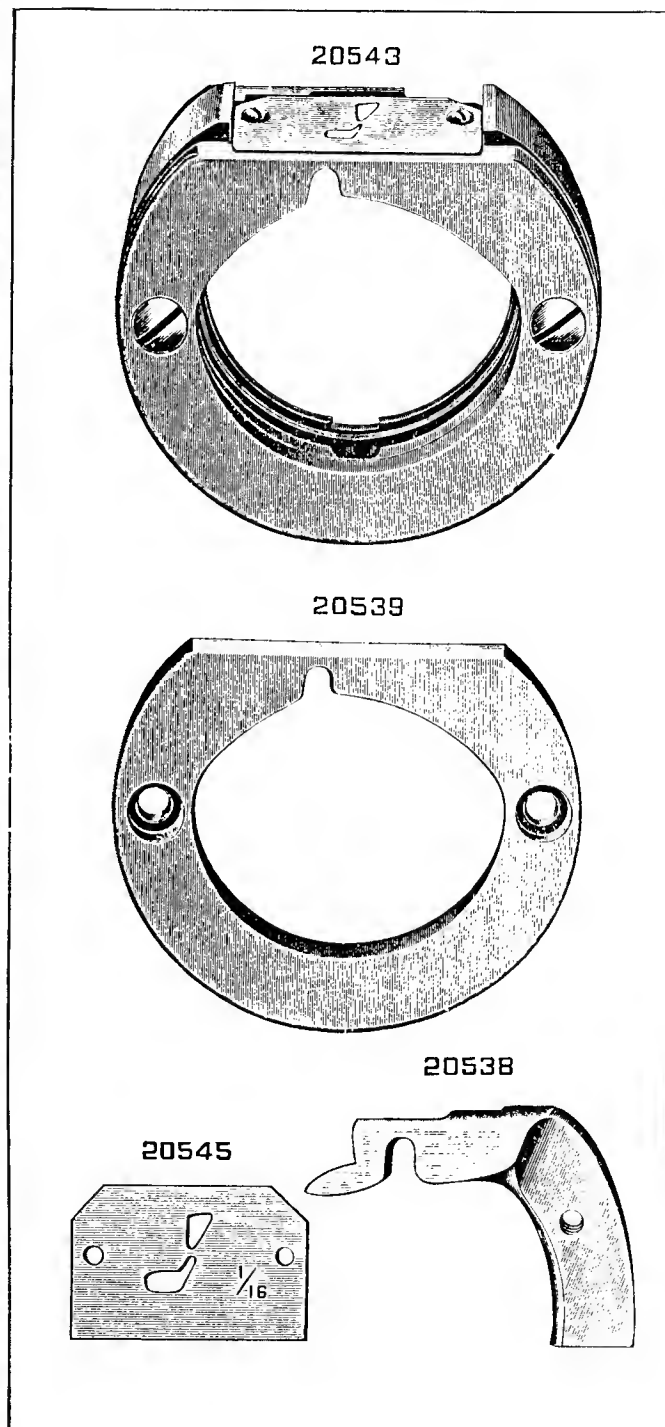 


PLATE 1148—FULL SIZE

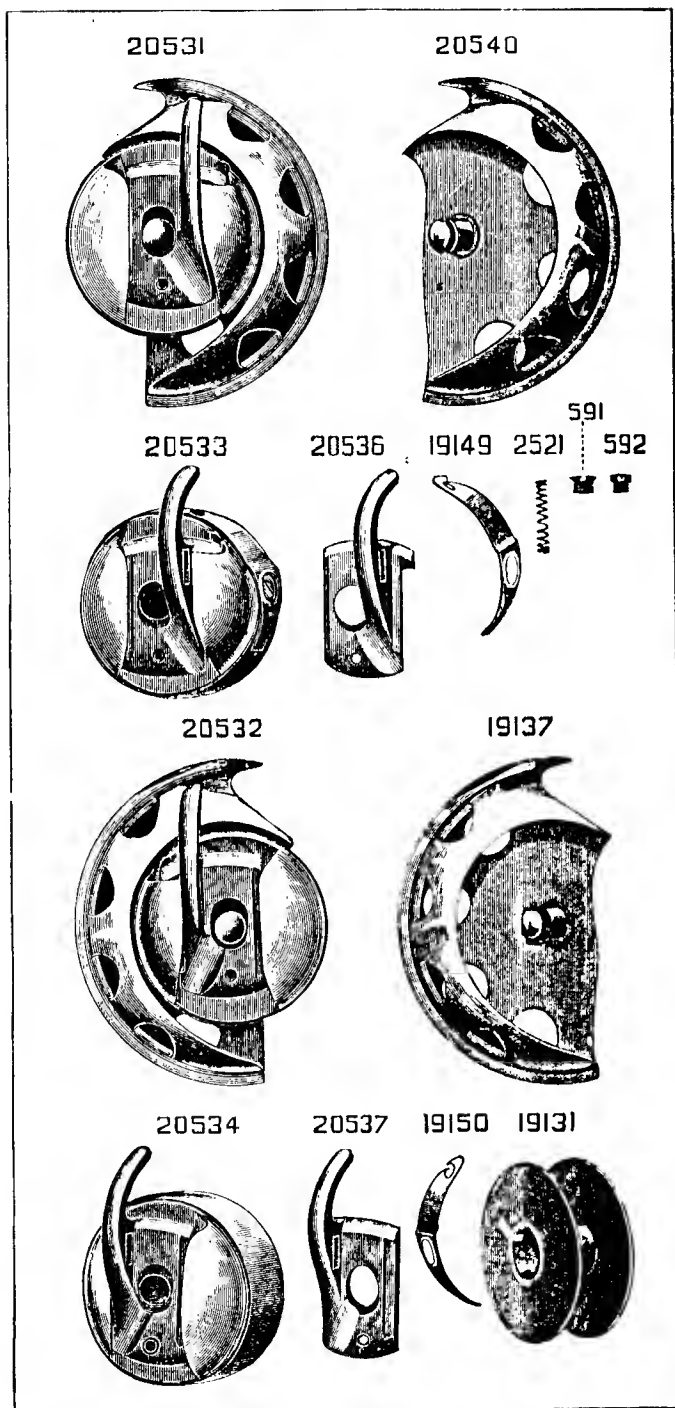 


PLATE 1149—FULL SIZE

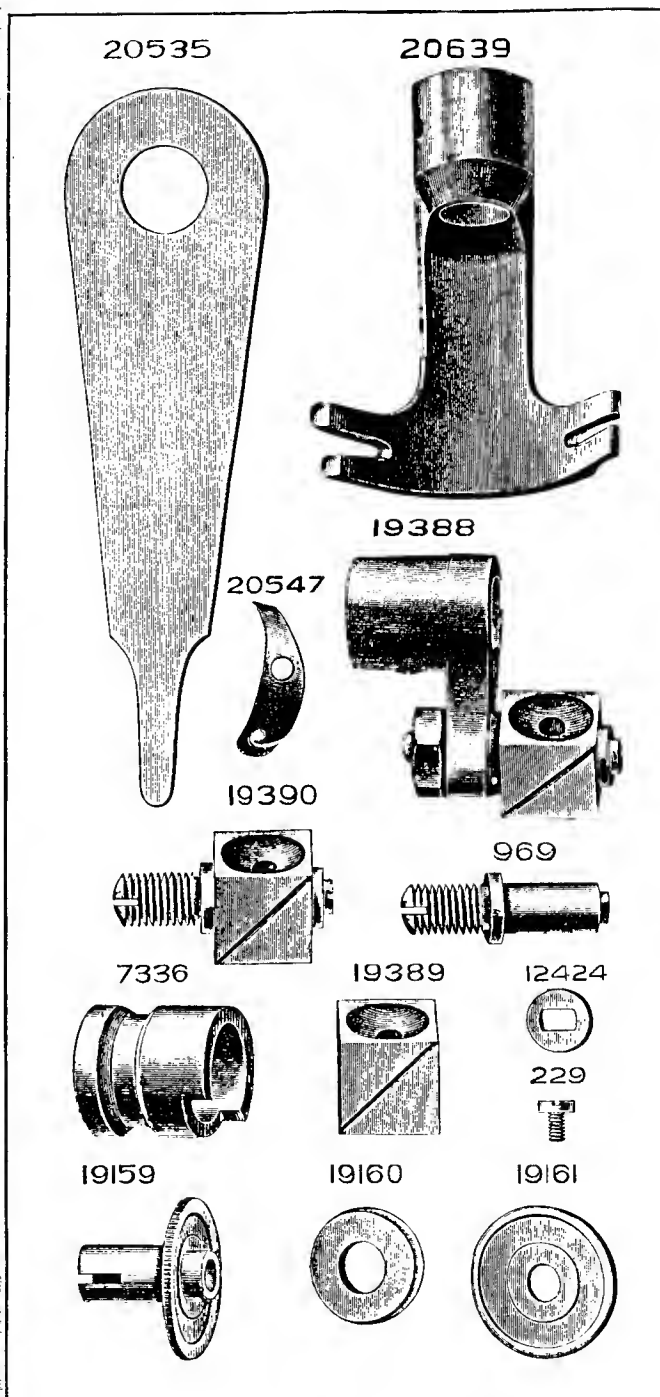 


PLATE 1150—FULL SIZE

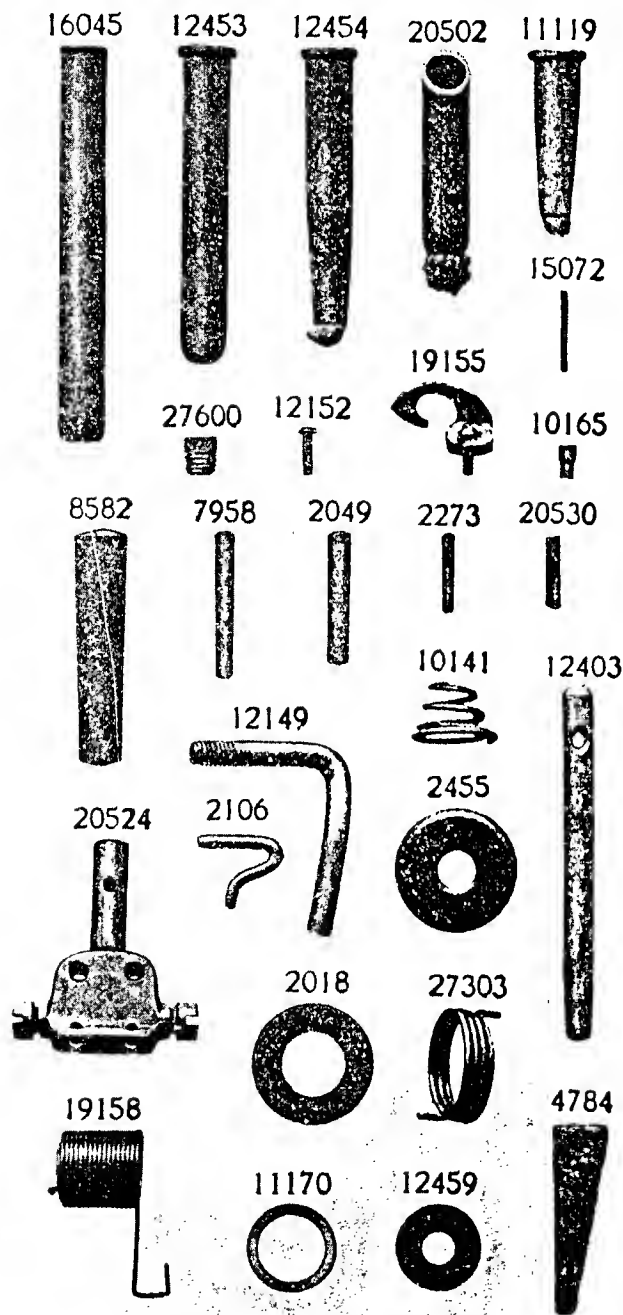 


PLATE 1151—FULL SIZE

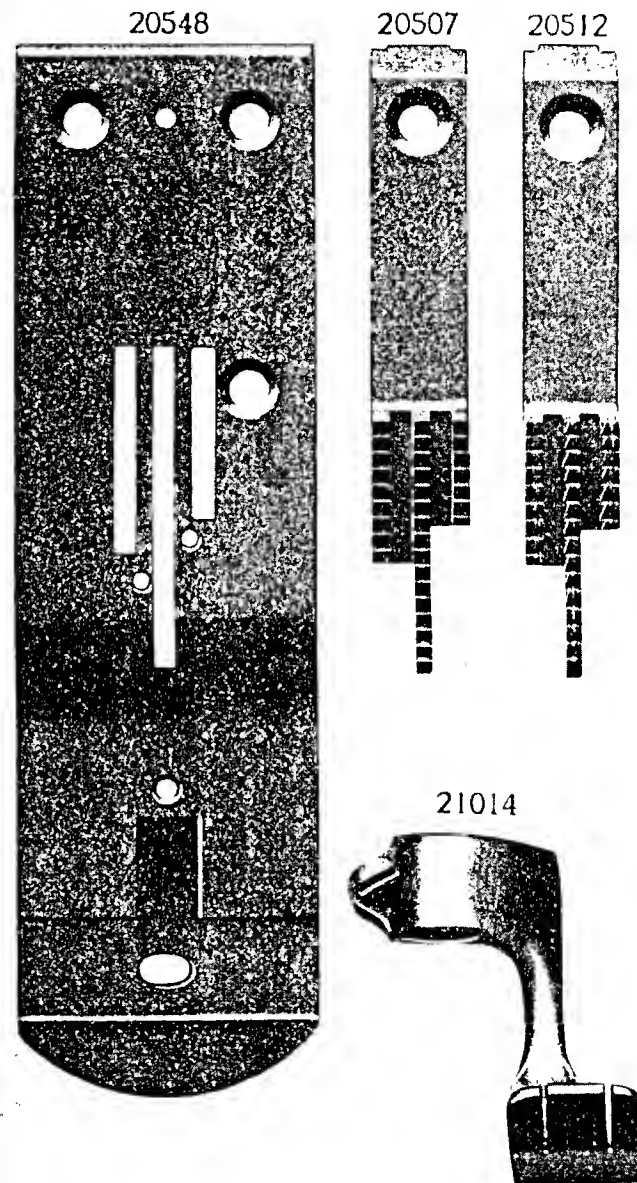 


PLATE 1152—FULL SIZE

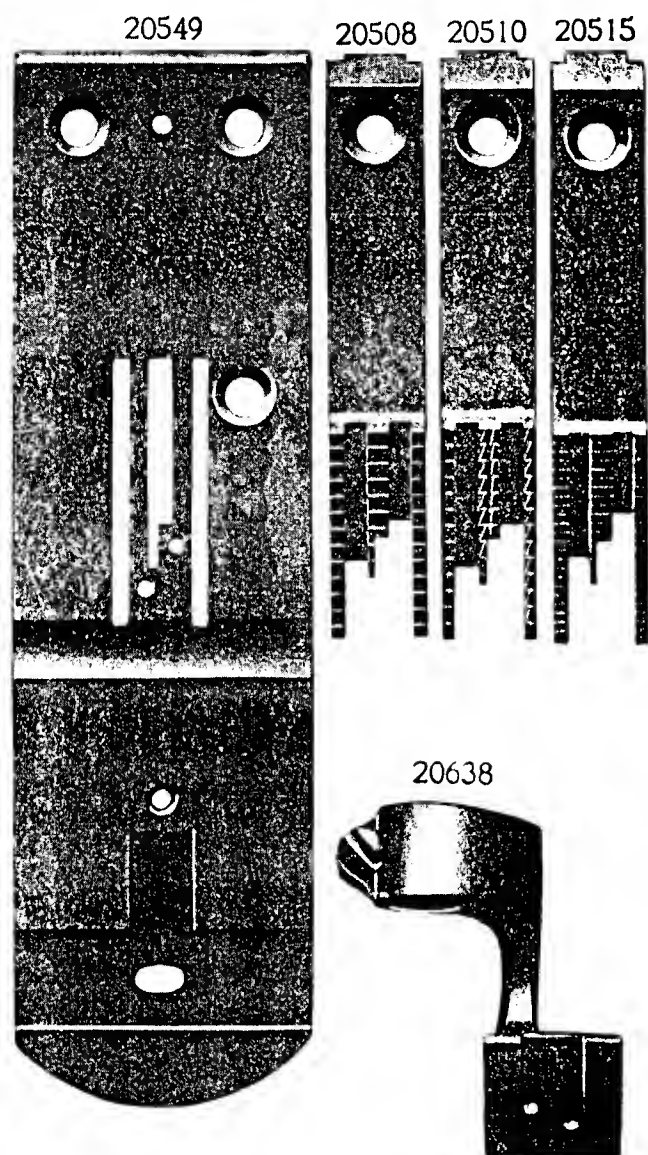 


PLATE 1153—FULL SIZE



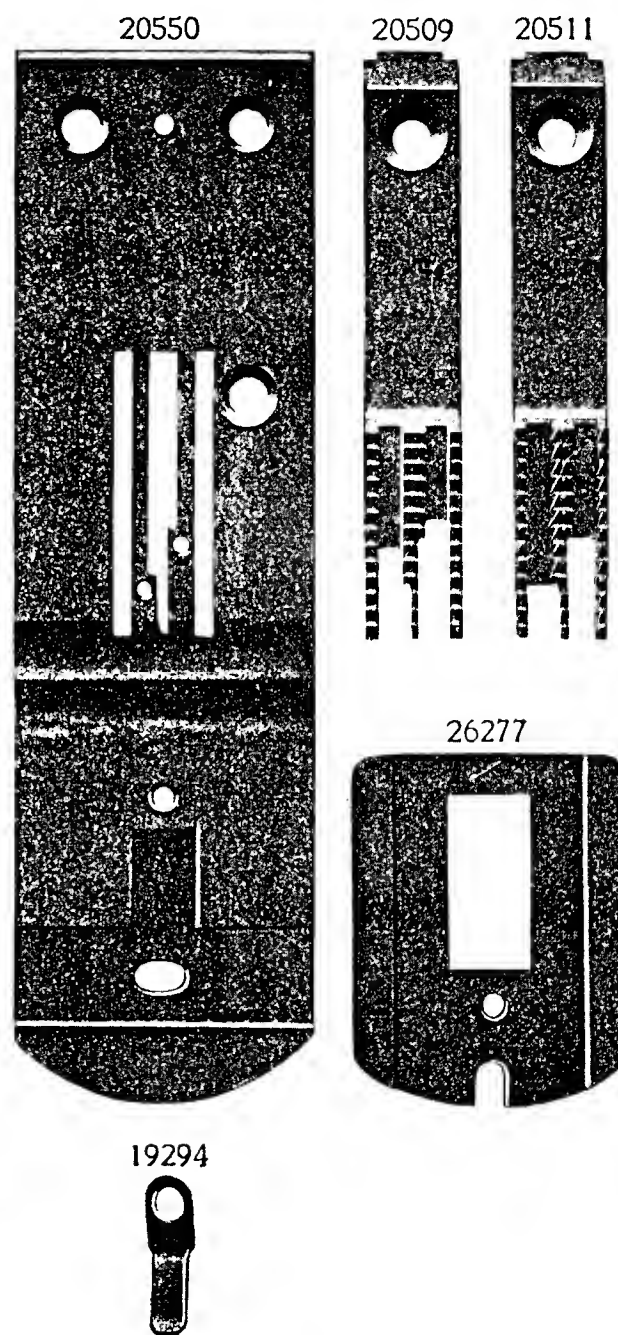 


PLATE 1154—FULL SIZE

 20551

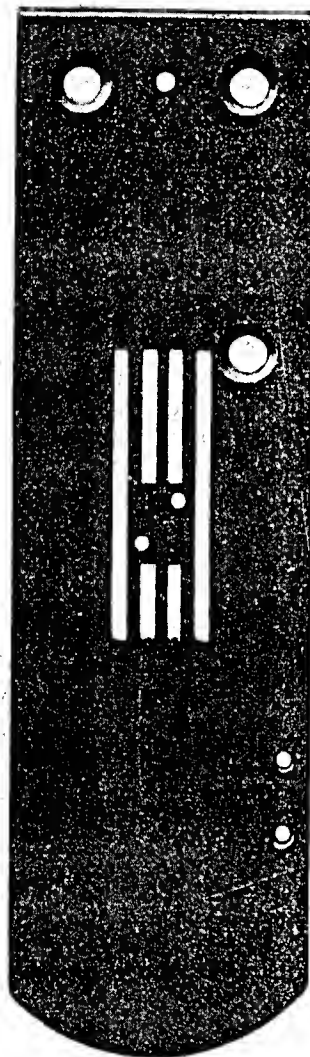

20513

  


20643

 


PLATE 1155—FULL SIZE

26353

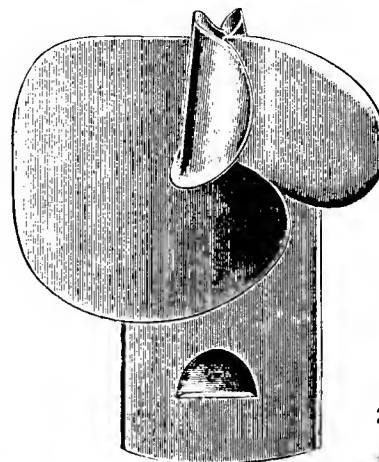

 
26390

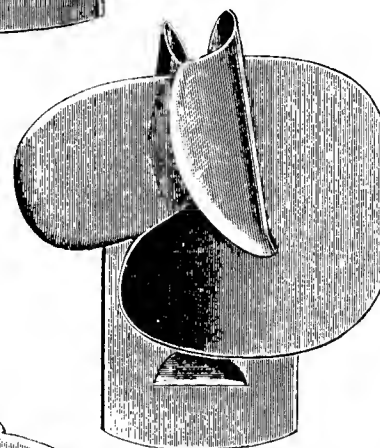

26384



26392

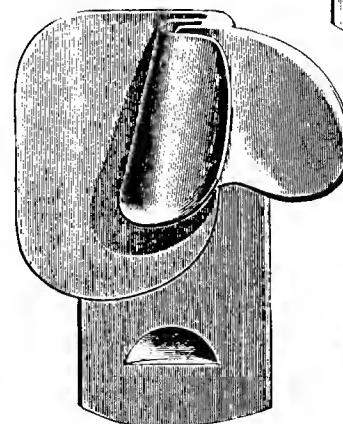

26385


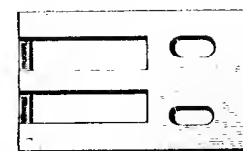 


PLATE 1156—FULL SIZE

 
26394




20527

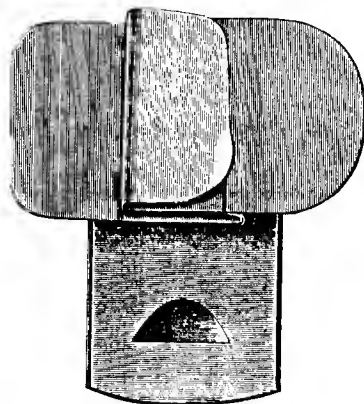

 21017

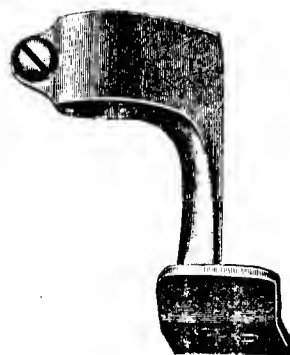

20648

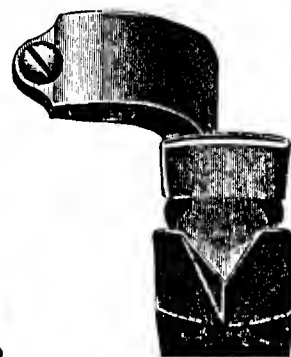 

20646



20682

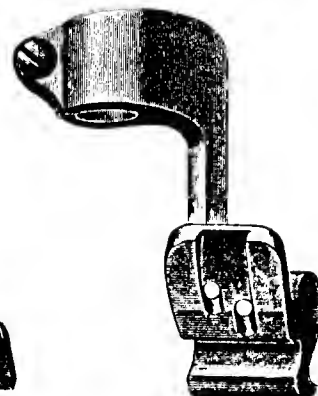 


PLATE 1157—FULL SIZE

748



905



131



138



134



935



144



157



896



159



704



175



190



209



219



802



689



32



35



868



 
766



76



58

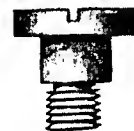

597



354



356



362



955



PLATE 1158—FULL SIZE

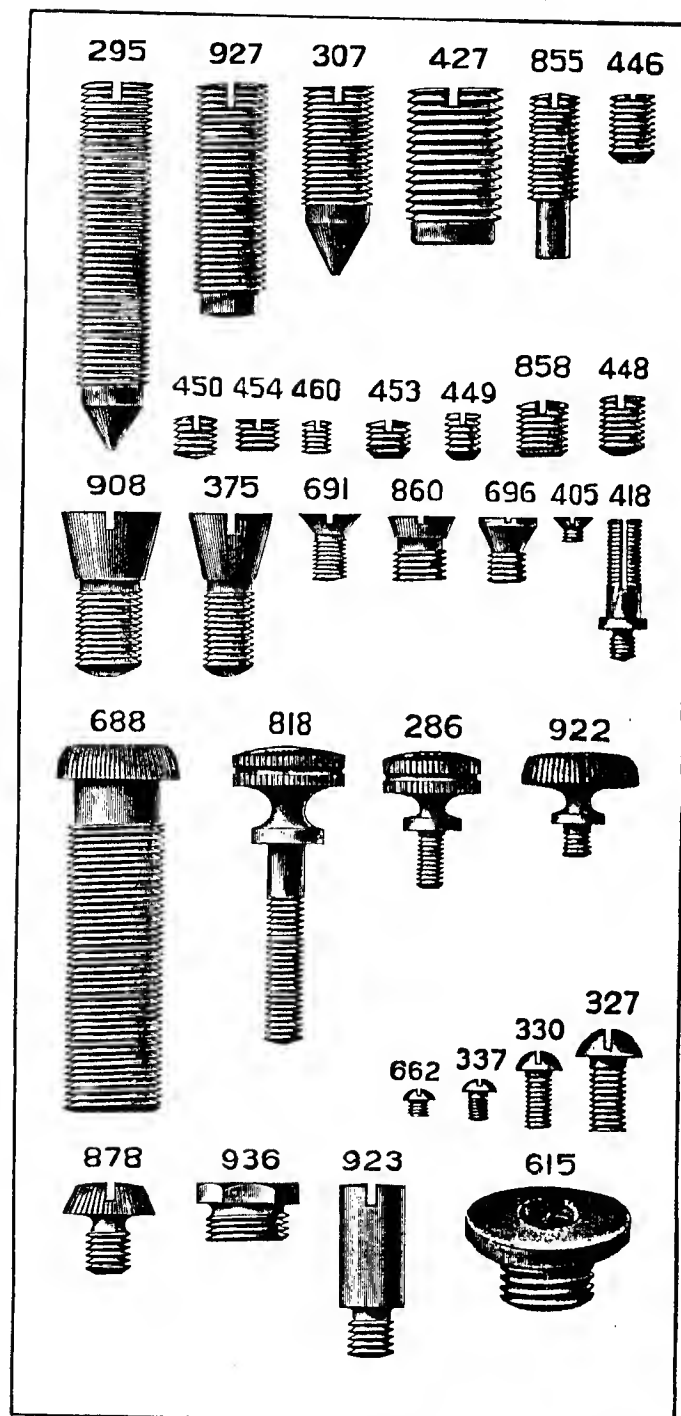 


PLATE 1159—FULL SIZE

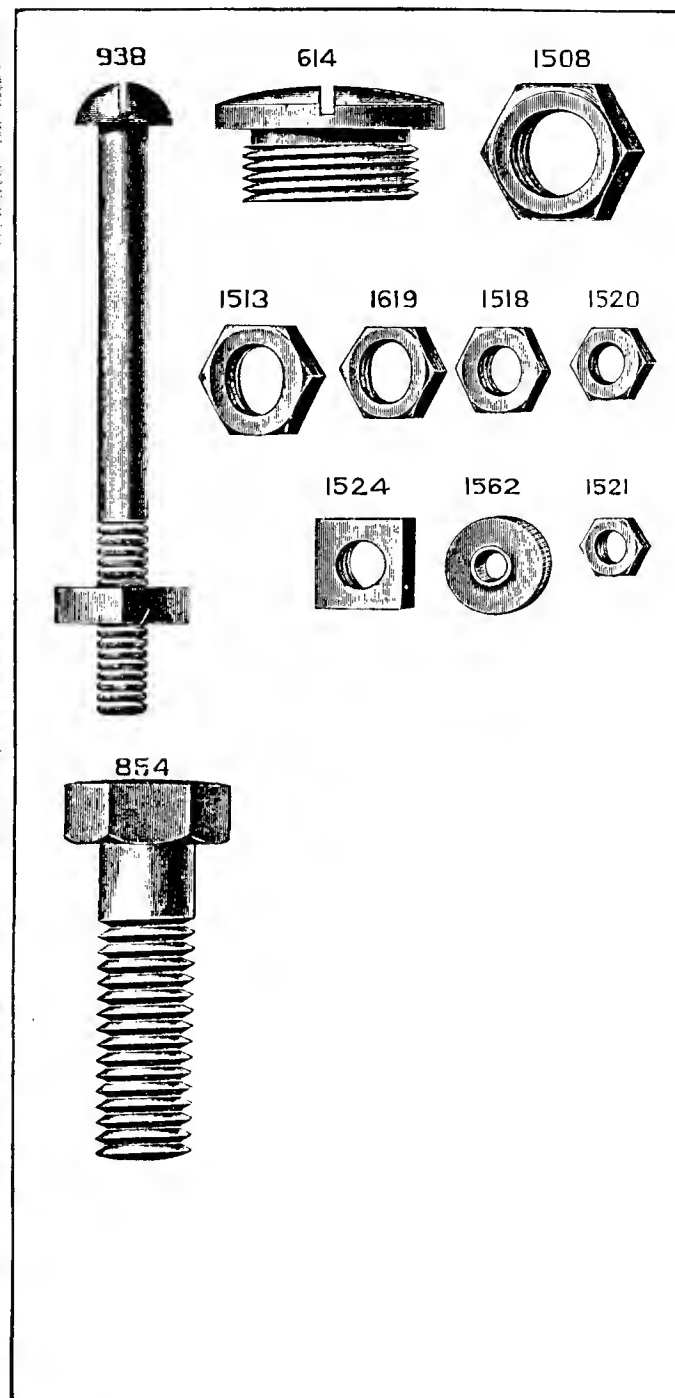 


PLATE 1160—FULL SIZE

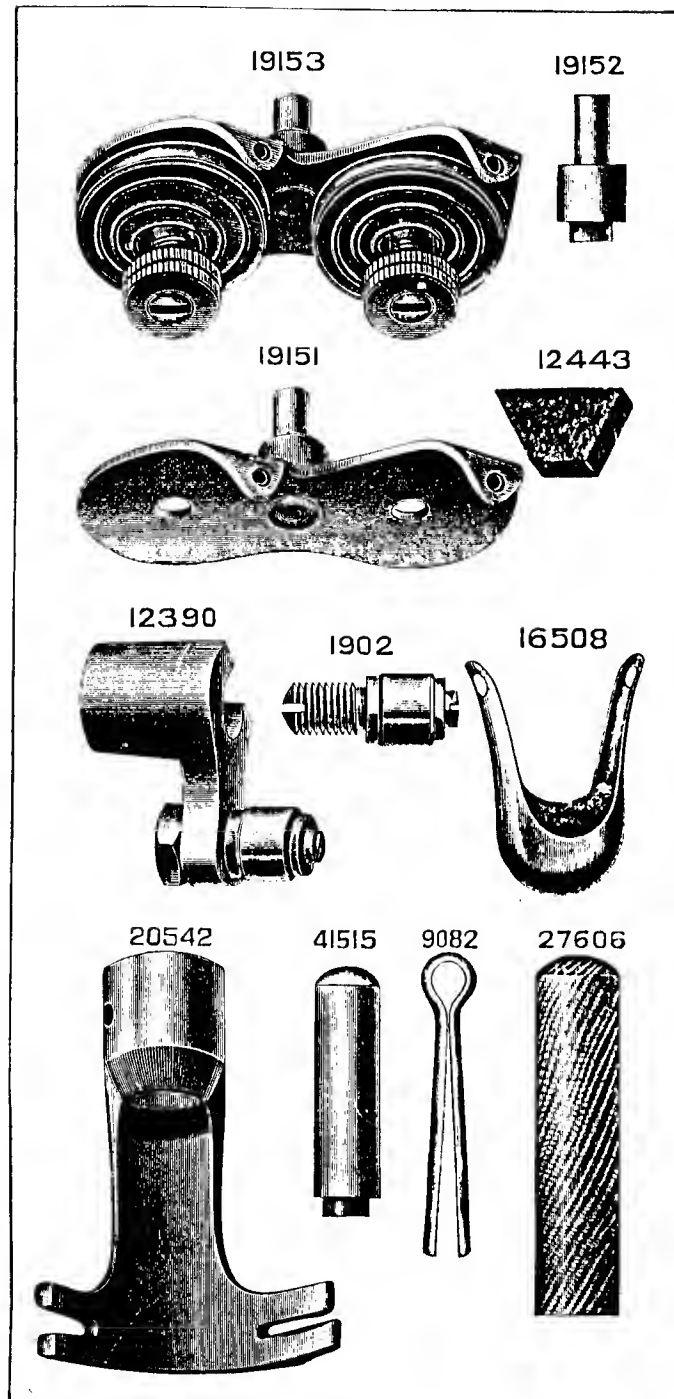 


PLATE 1161—ONE-HALF SIZE

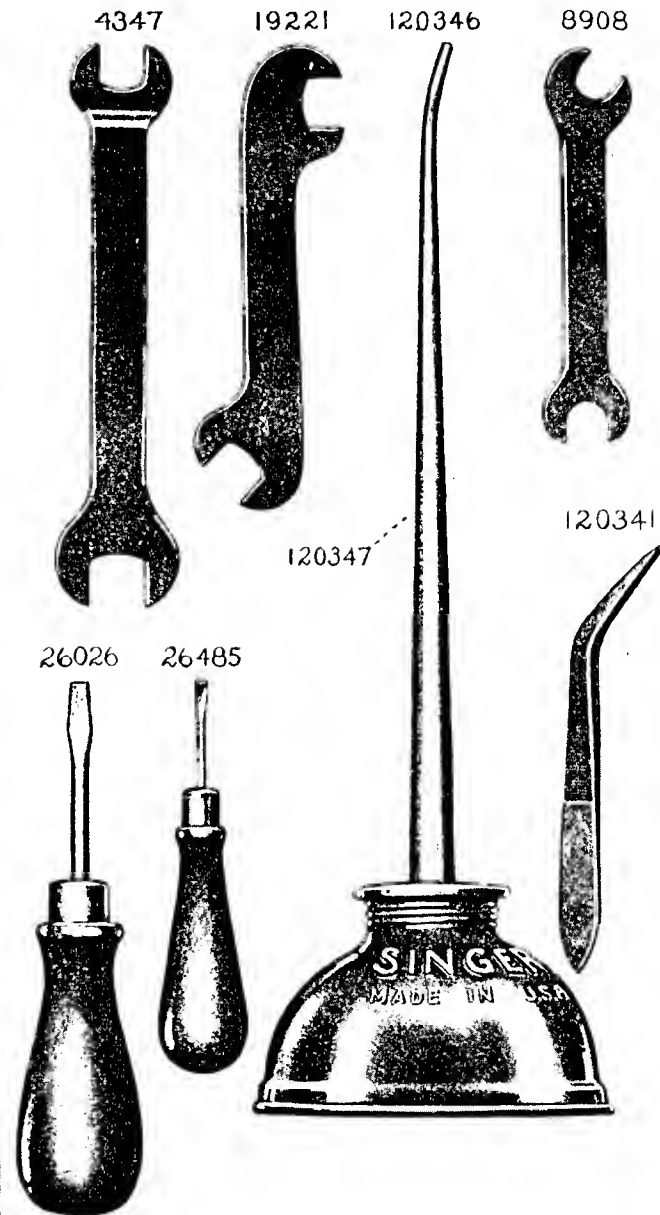 


PLATE 1162—ONE-HALF SIZE

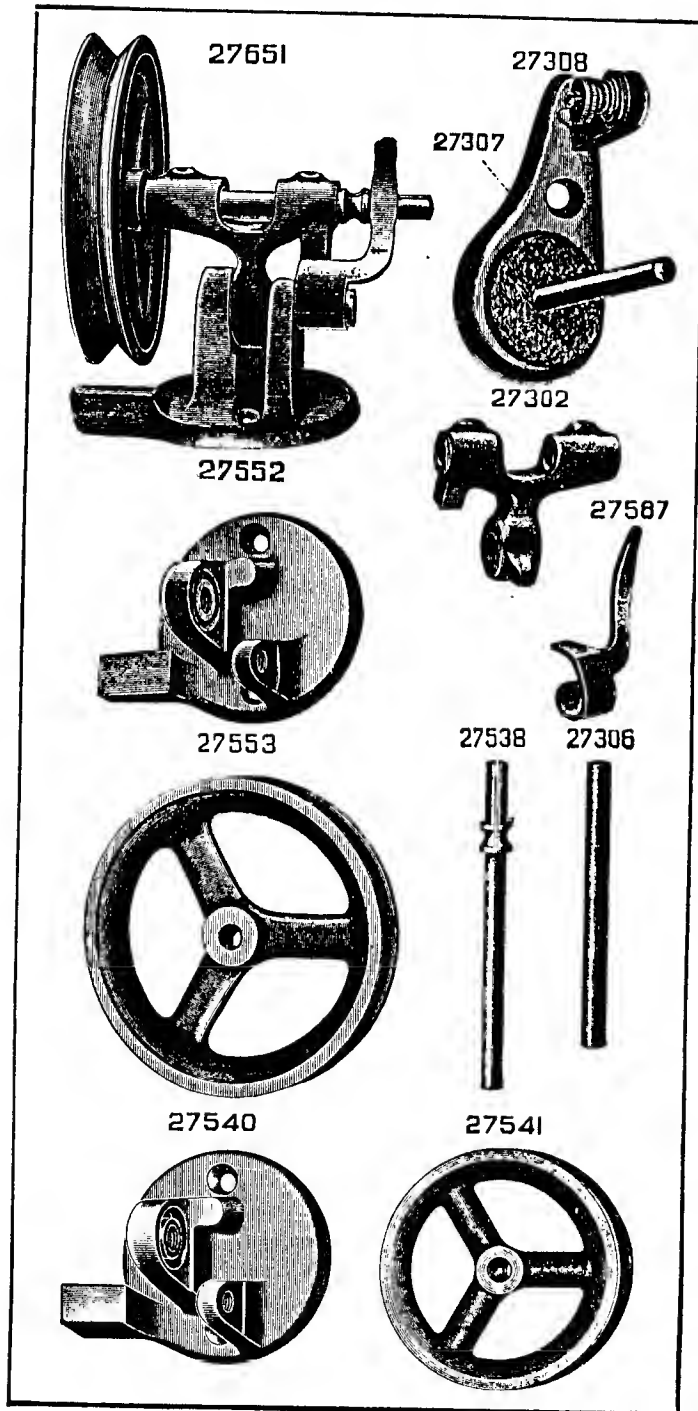 


PLATE 1164—ONE-FOURTH SIZE

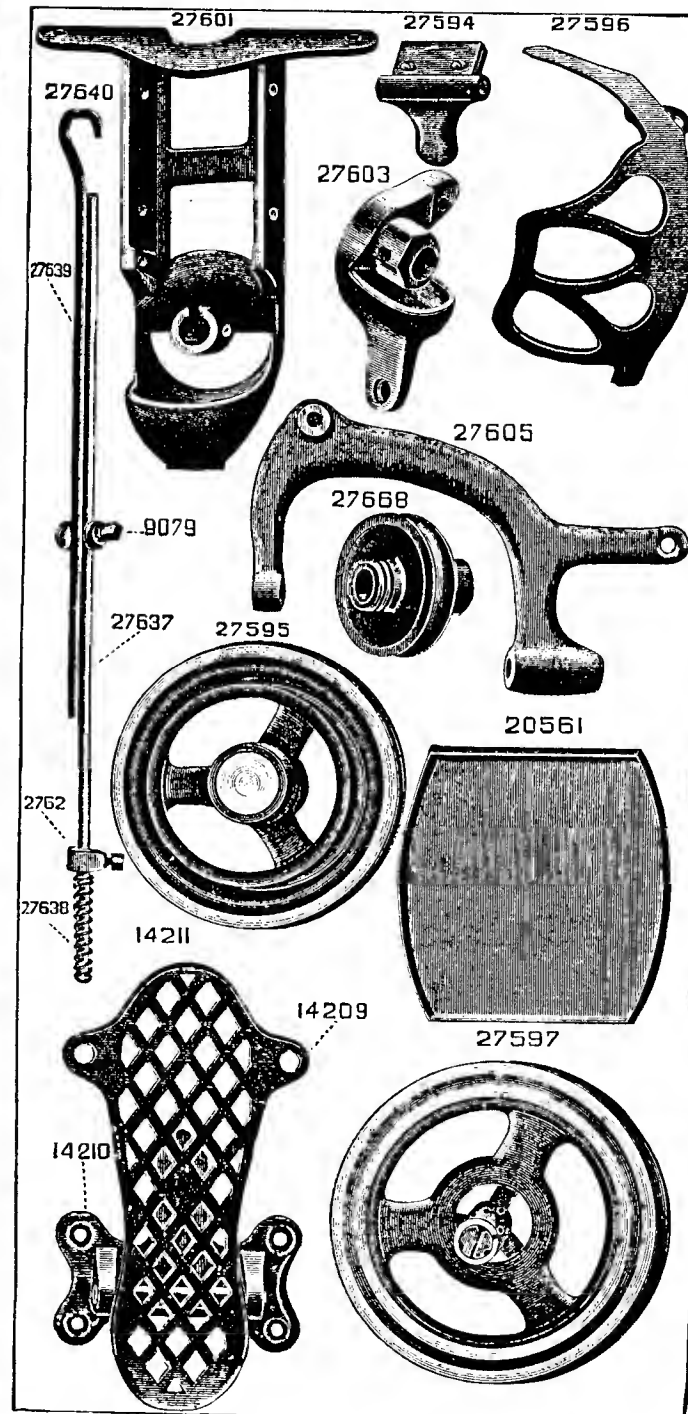 


PLATE 1166—FULL SIZE

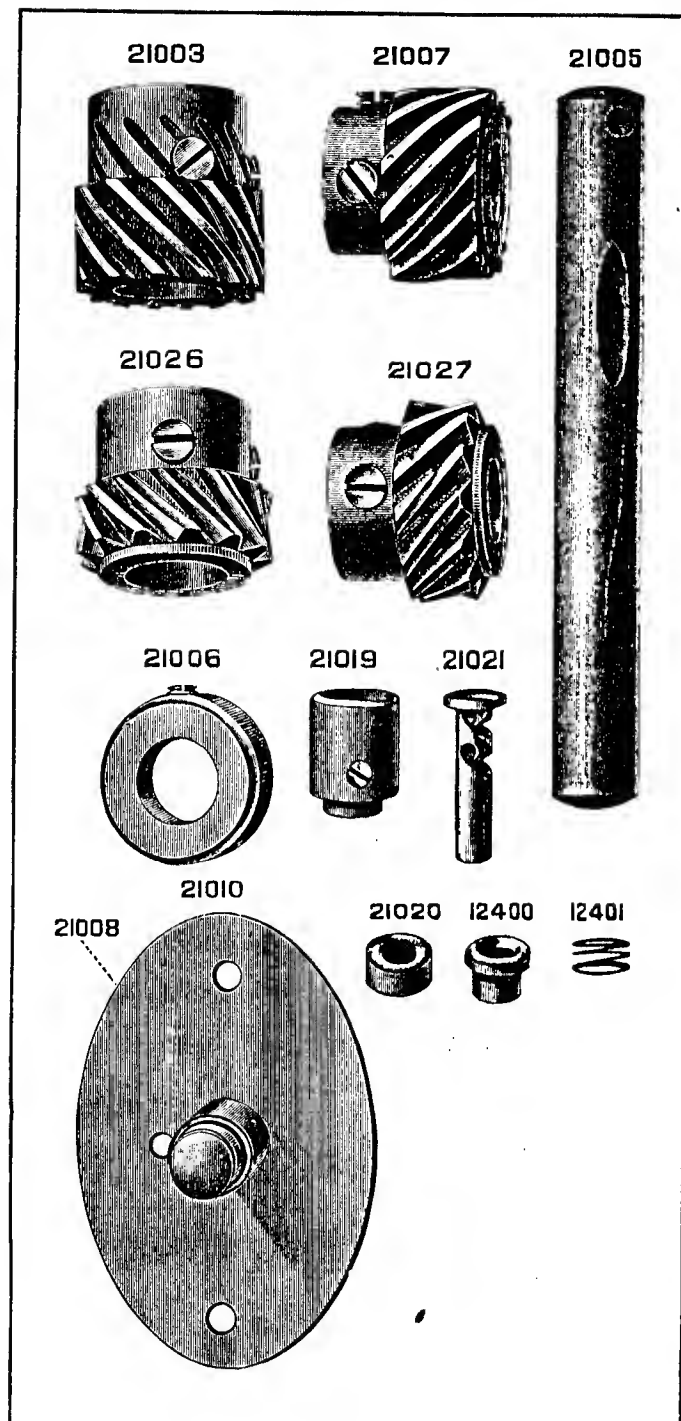 


PLATE 1167—ONE-FOURTH SIZE


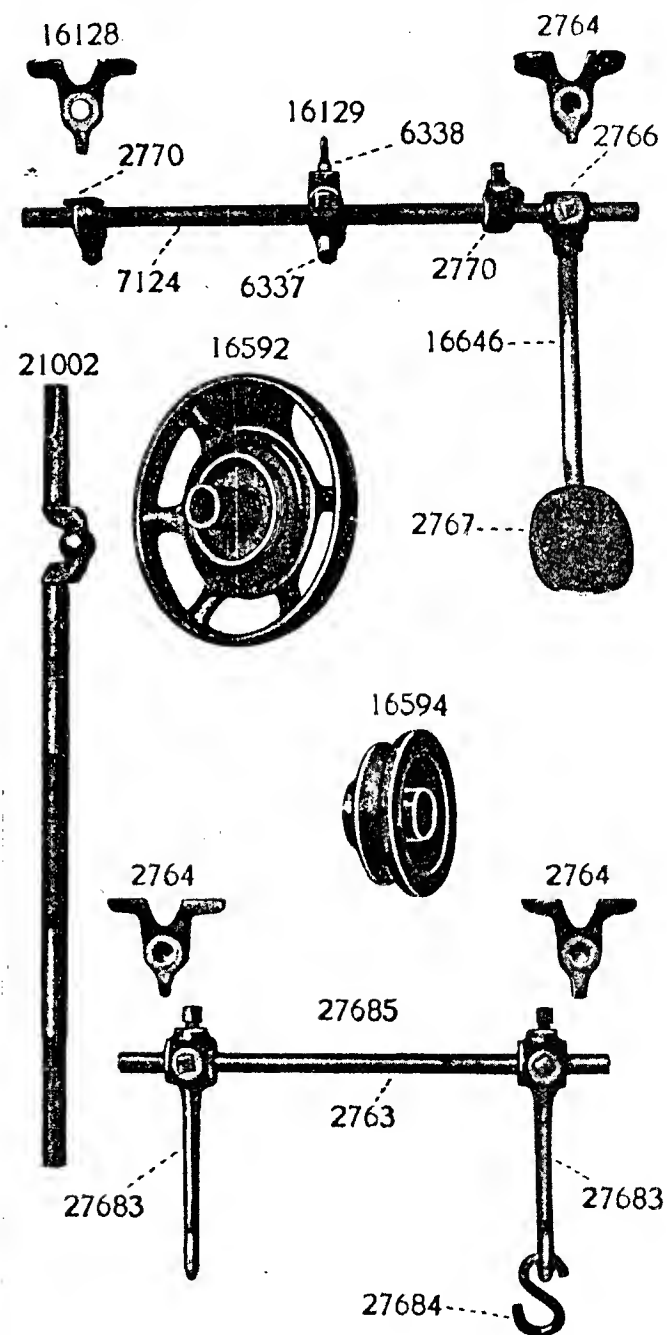 


PLATE 1170—ONE-HALF SIZE

12381 21041 12391

 
12367

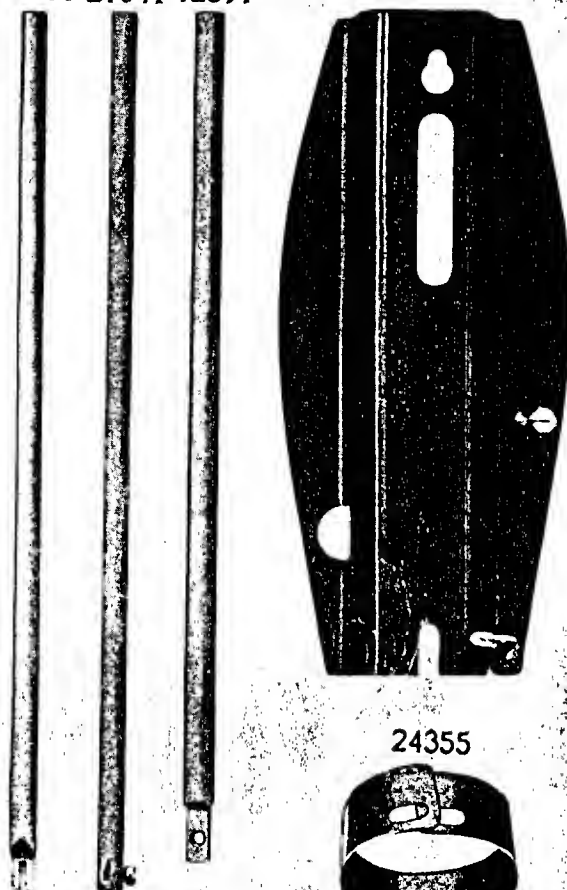

24355



 21023

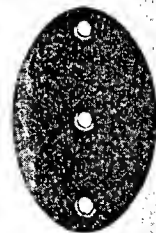

14231



PLATE 1171—FULL SIZE

20711

20712



20761

20754


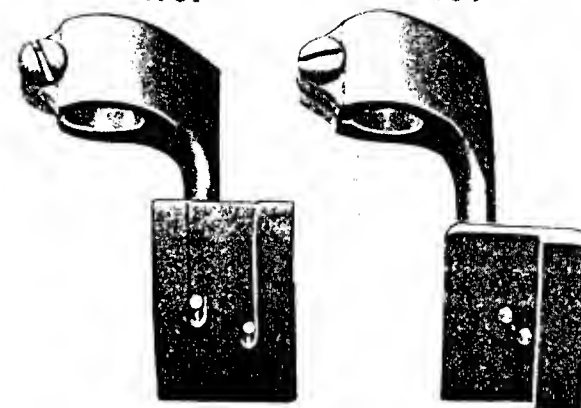 


PLATE 1175—FULL SIZE

 20552

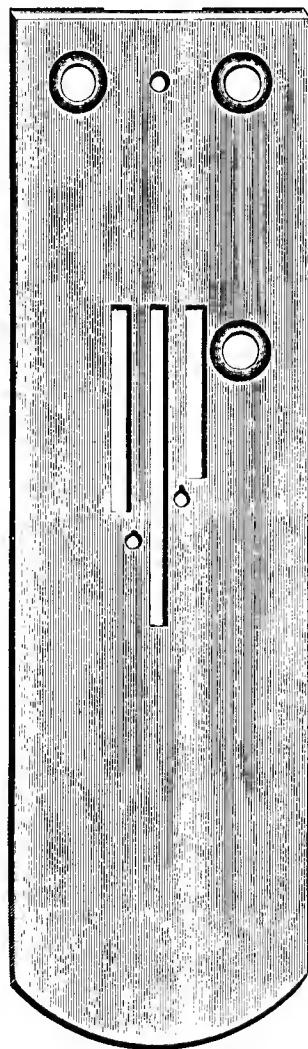


20514



PLATE 1176—FULL SIZE

 20553

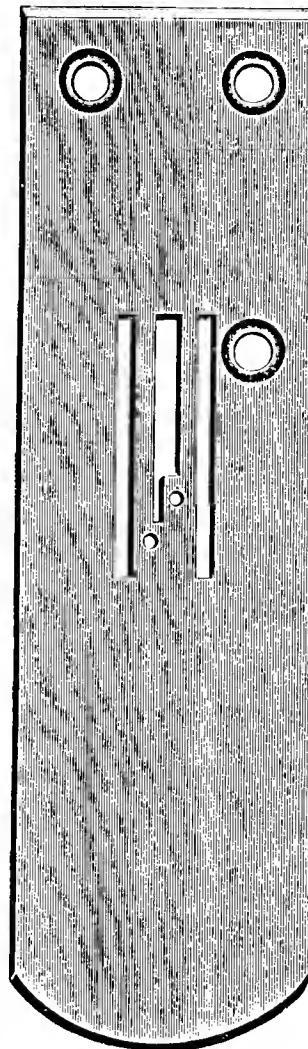

20554

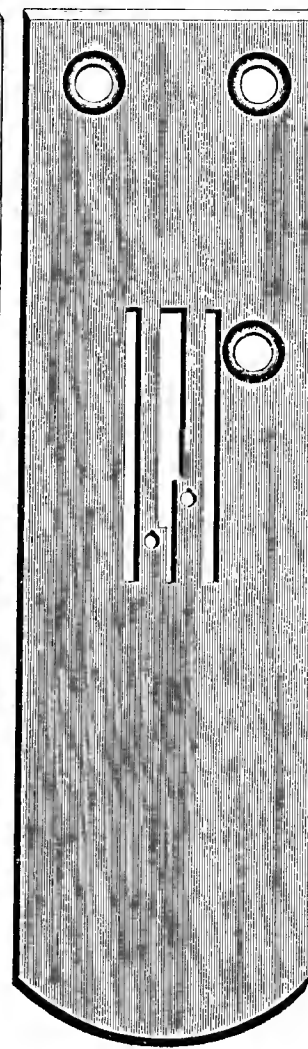 


PLATE 1177—FULL SIZE

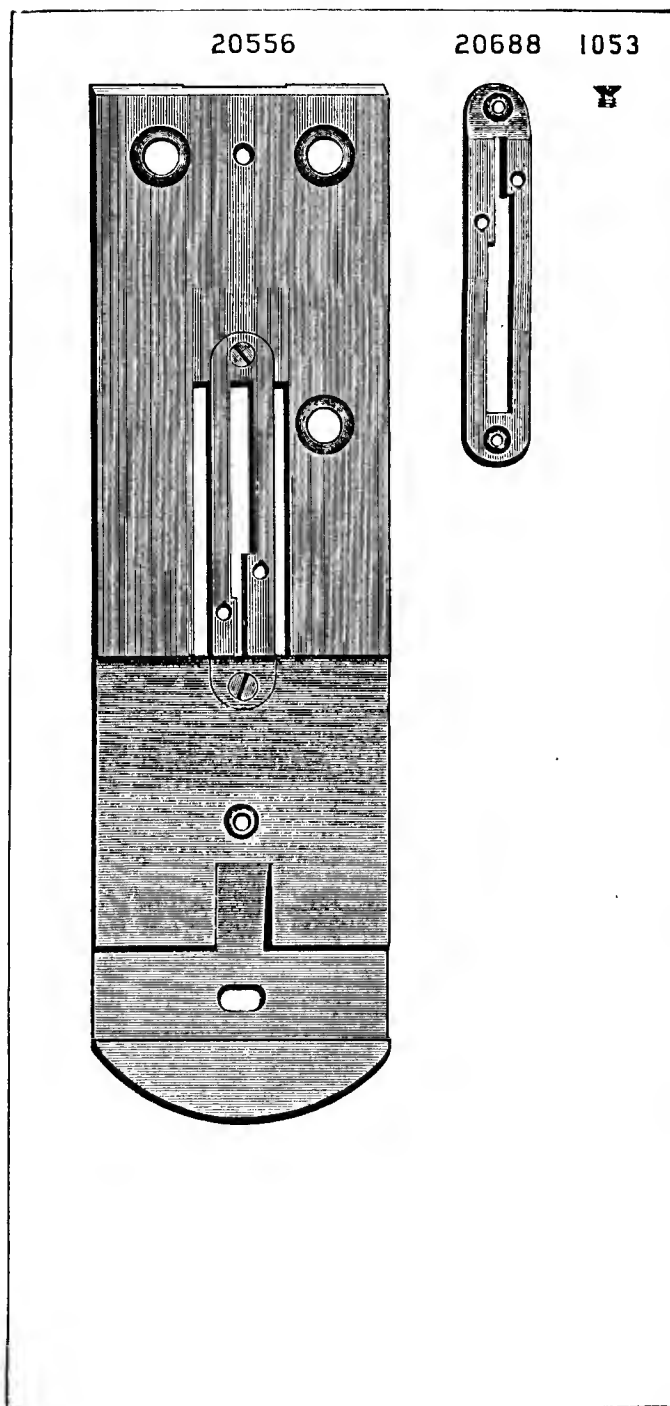 


PLATE 1178—FULL SIZE


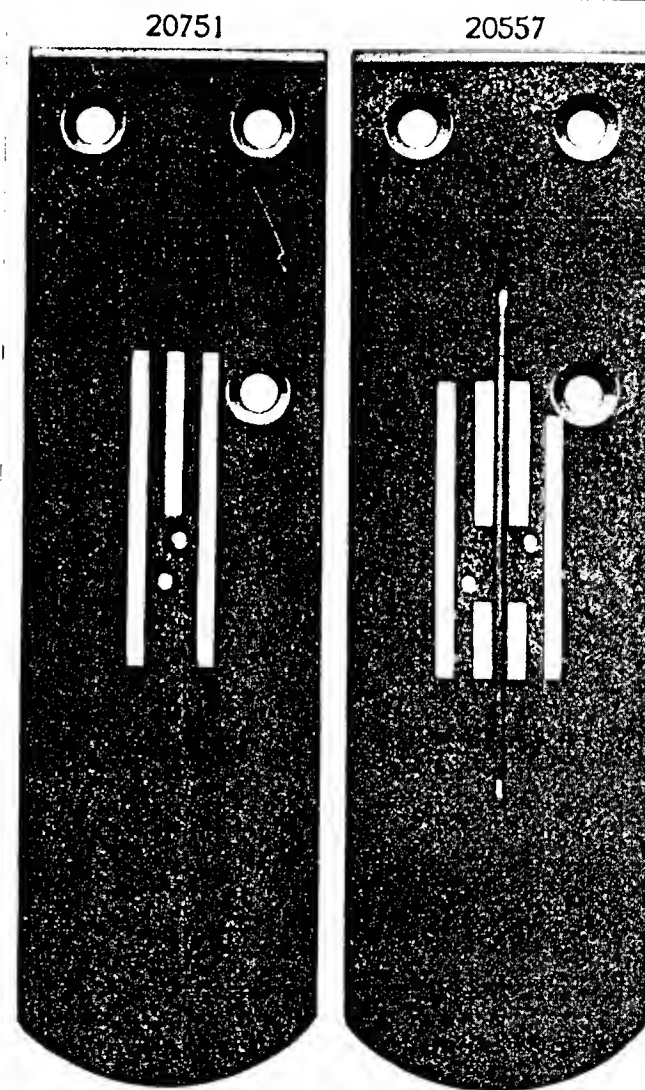 


PLATE 1179—FULL SIZE

 20632

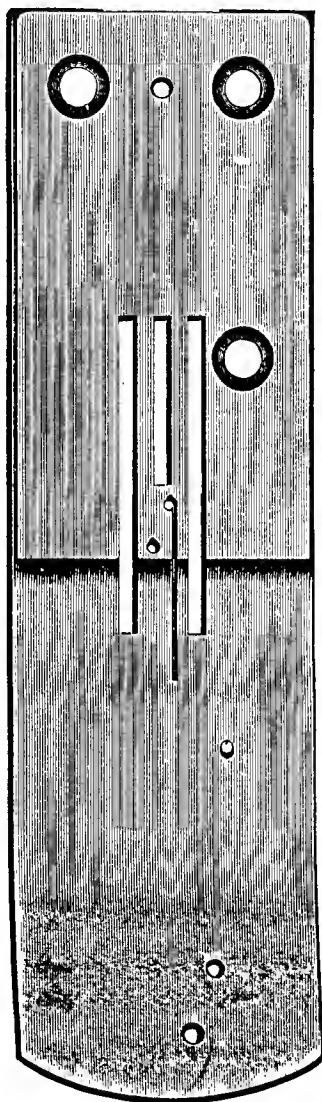


20630



PLATE 1189—FULL SIZE

 20657

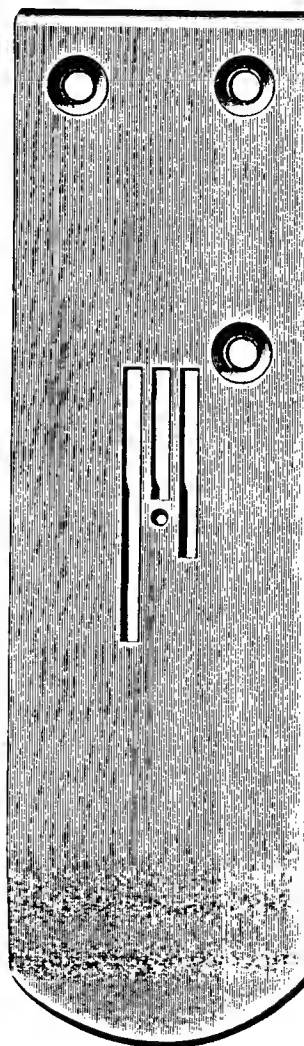


20656



PLATE 1190—FULL SIZE

 20663

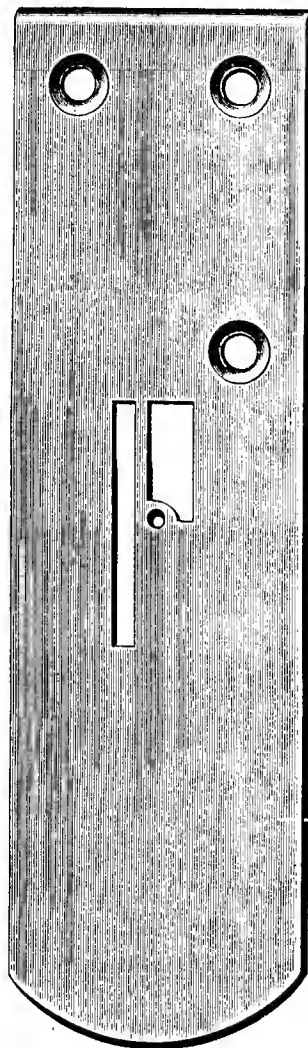


20662



PLATE 1191—FULL SIZE

 20665

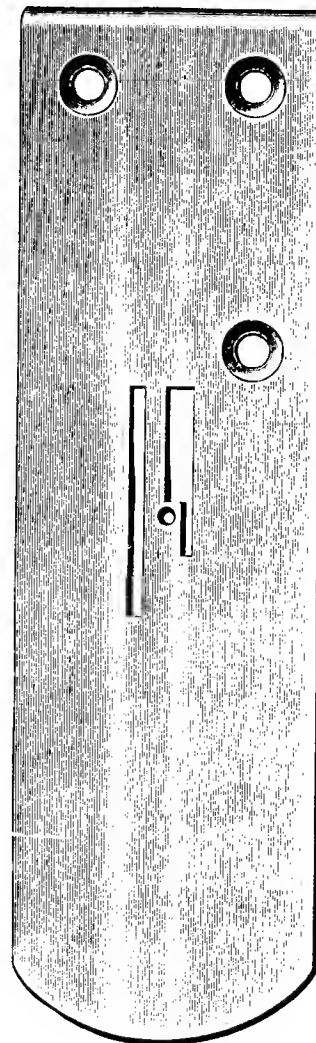


20664



PLATE 1193—FULL SIZE

 20686

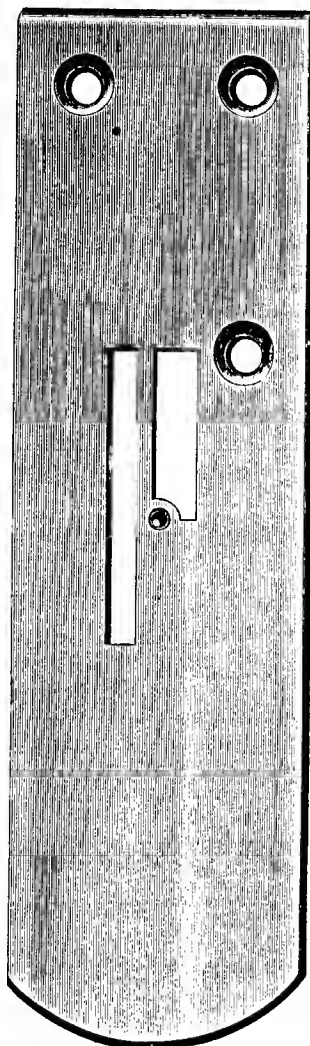

20685



20589



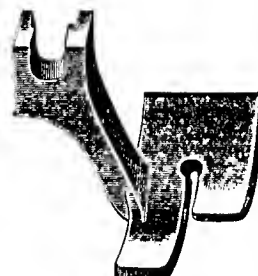 


PLATE 3477—ONE-FOURTH SIZE

 126036

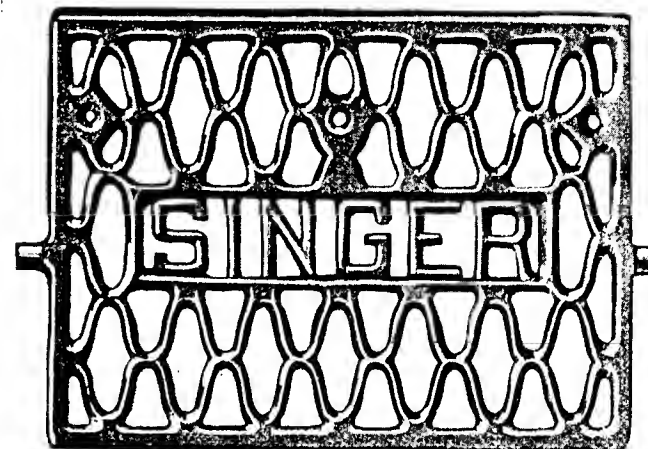

14358

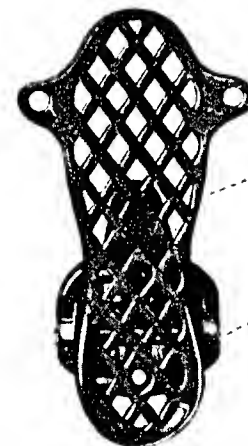 

14209

14357

PLATE 4314—ONE-HALF SIZE

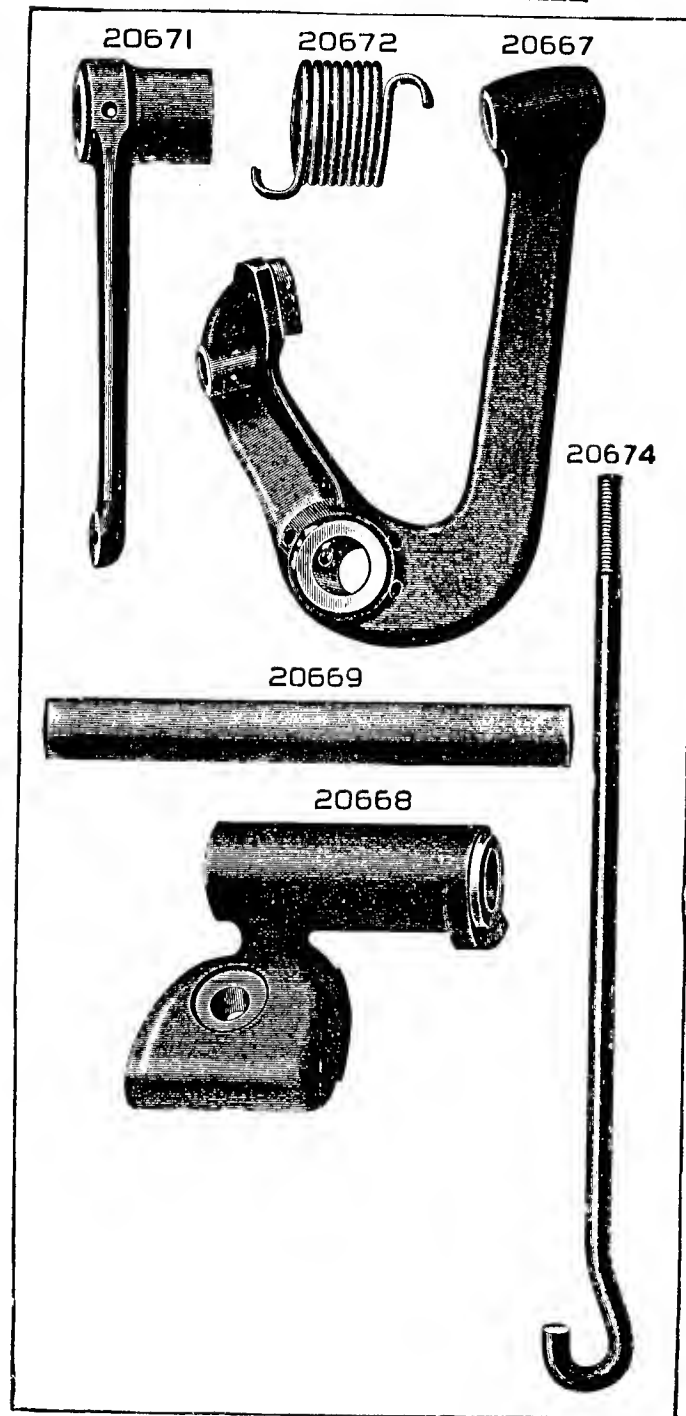 


PLATE 4320—FULL SIZE


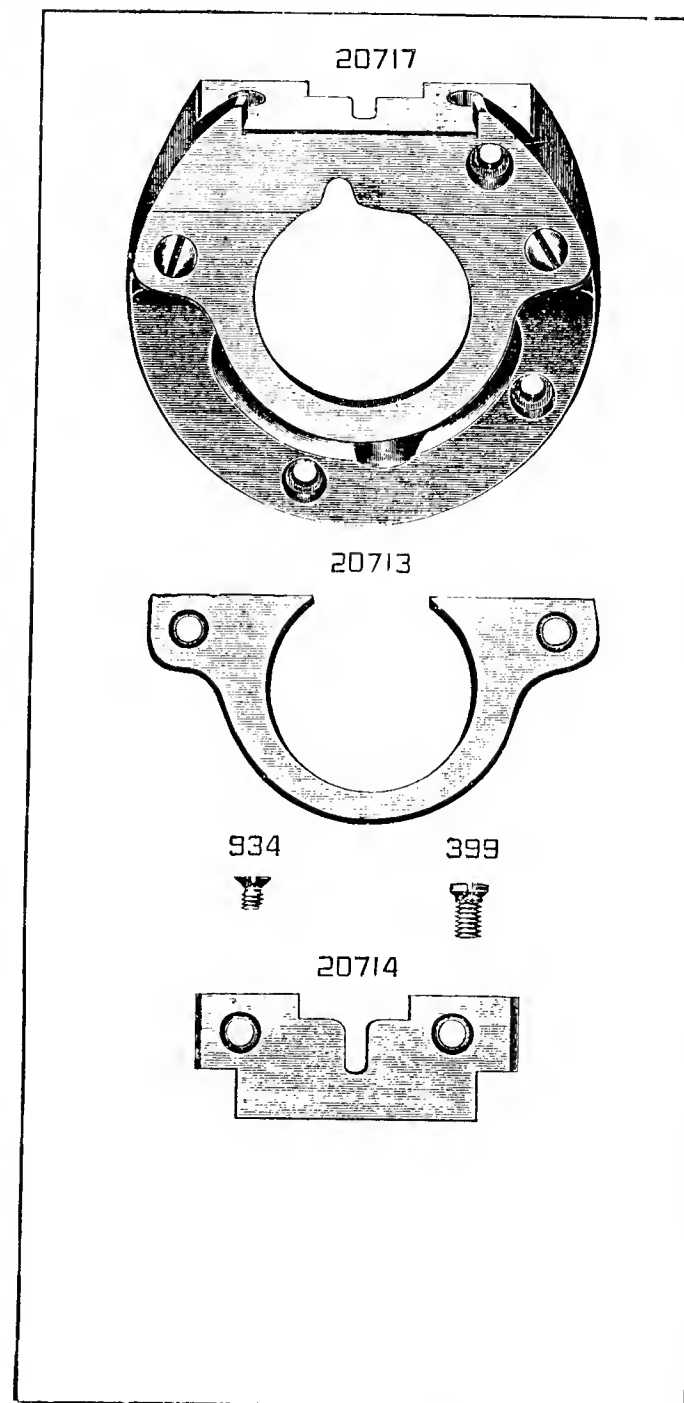 


PLATE 4321—ONE-FOURTH SIZE

 20747




12237 2764

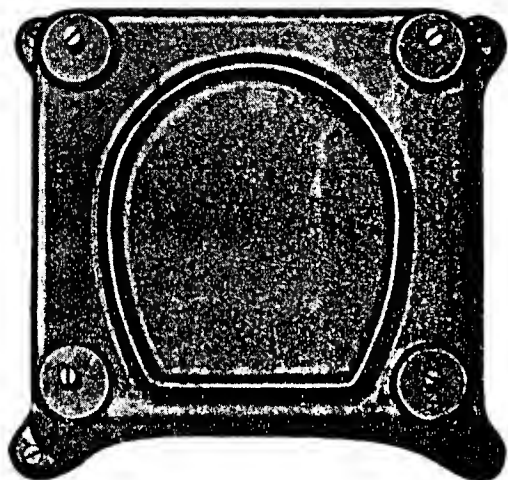

2764



 20673



2763

27683

 


27683



14232


14229

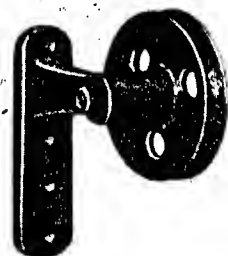


14230

PLATE 5737—FULL SIZE

 
20758

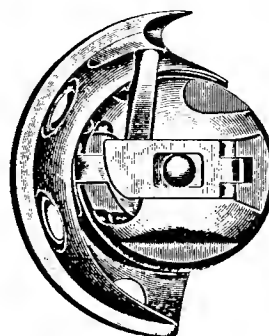

20757

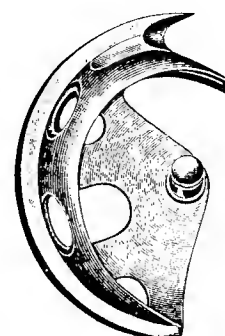 


20756

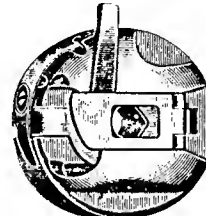 

20755 2523 2975 592



 19131

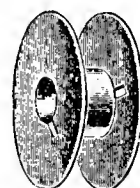

20649



2973



2974 591



20654



PLATE 7233—ONE-SIXTH SIZE

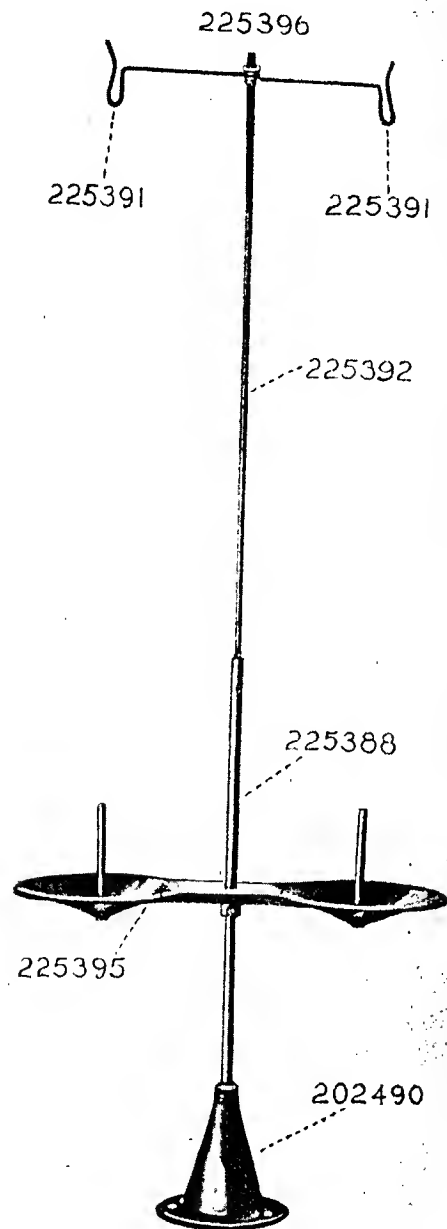 


PLATE 7234—ONE-HALF SIZE

27739



225390


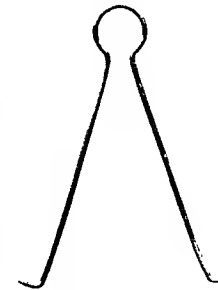 


PLATE 7425—ONE-HALF SIZE

 21040

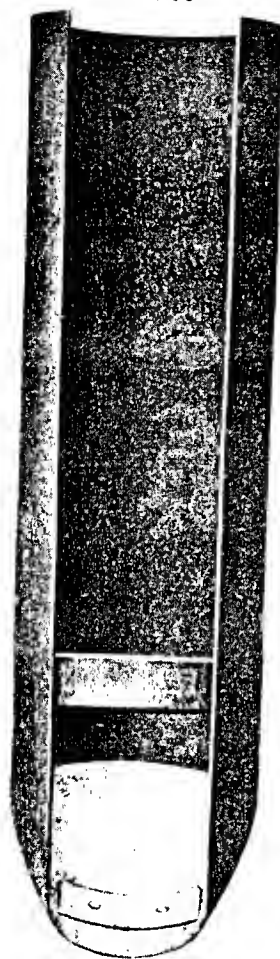

21044

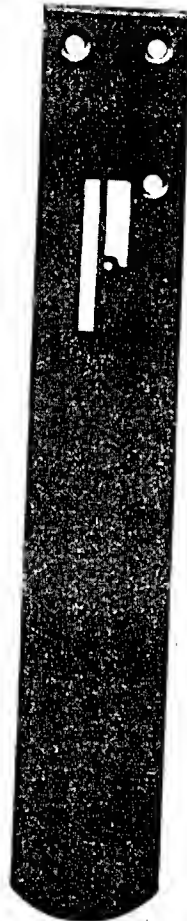 


PLATE 7426—FULL SIZE

19336



20625



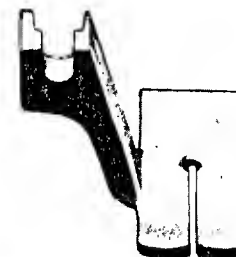 


PLATE 7427—FULL SIZE

 20718

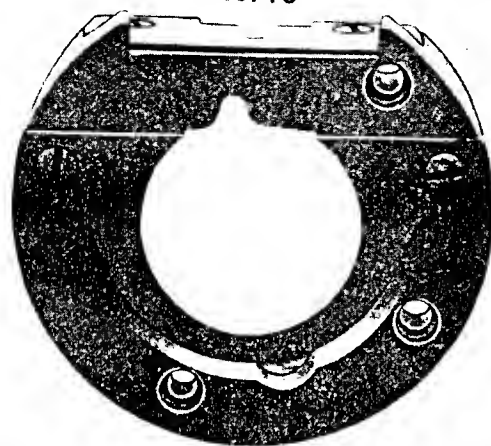

20621

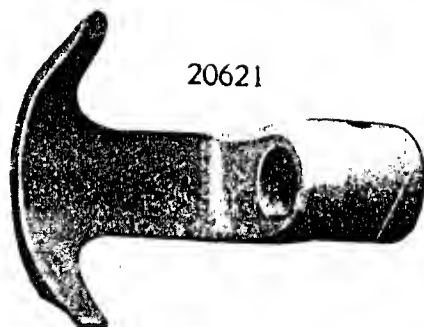 

20750

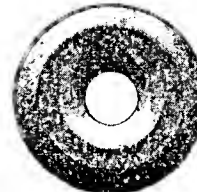 


PLATE 7428—FULL SIZE

 
50327



2102



32572

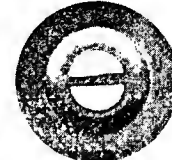

32574



21037 52378

43945



210992



12404



210958



210993



52398



12408



19327



12150



21043



2827



8505



4302



21042



4303



PLATE 7429—FULL SIZE



PLATE 7430—FULL SIZE

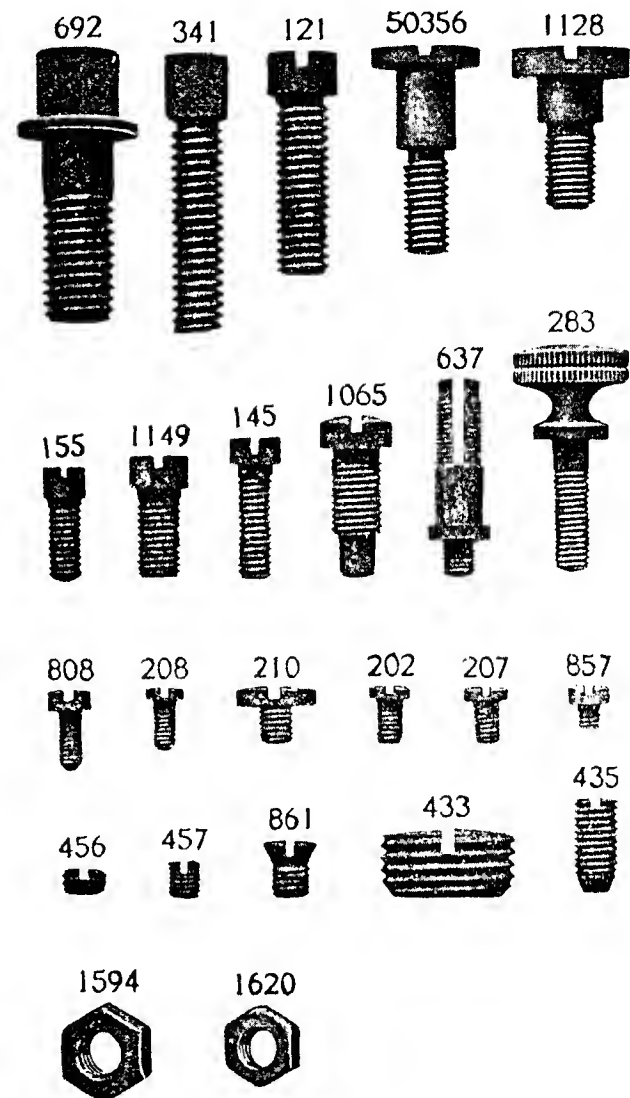 


PLATE 7431—ONE-FOURTH SIZE

27072


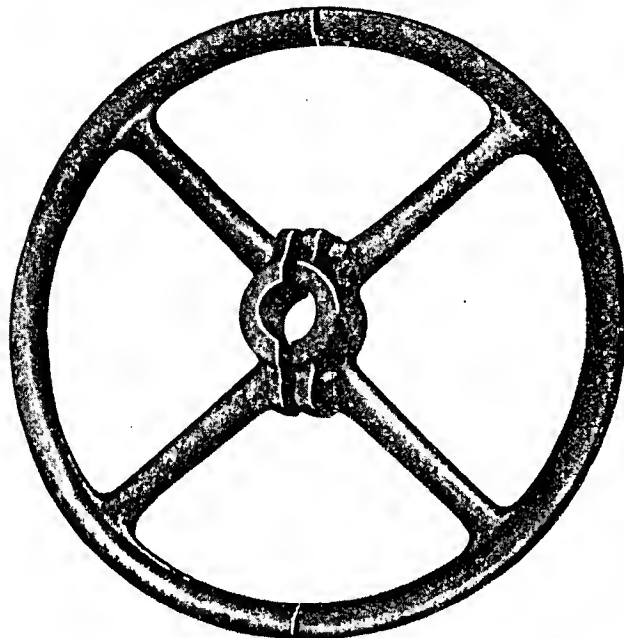 


PLATE 7432—FULL SIZE

 20699



20573

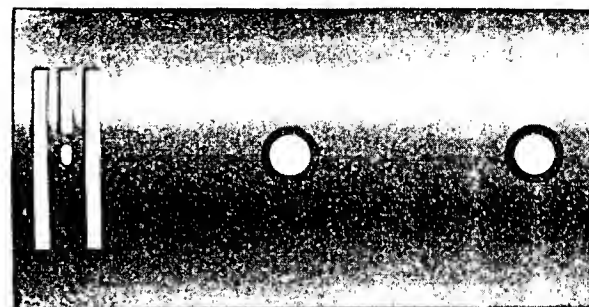

 
20587



20588



20748

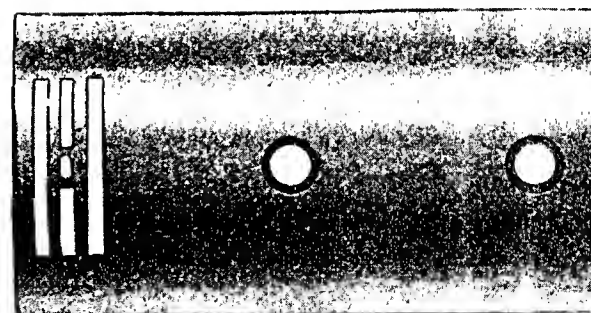


20579



PLATE 7433—FULL SIZE

 20709

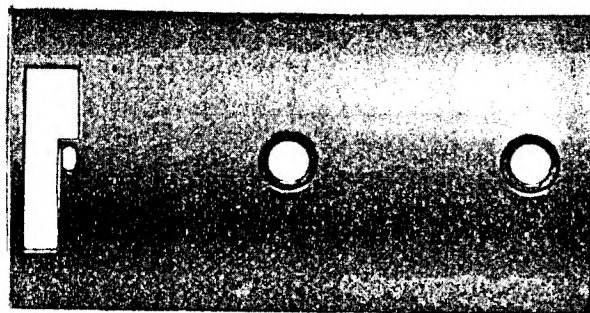

20577


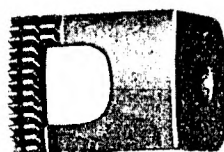 


PLATE 7434—ONE-FOURTH SIZE

 20564

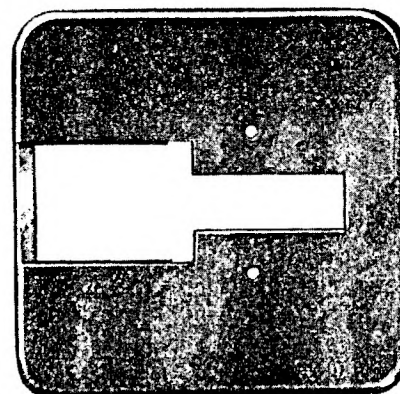

21030 12427


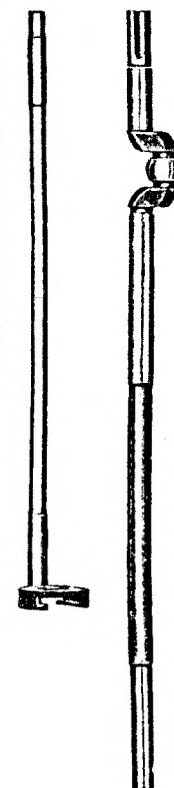 


PLATE 7435—ONE-HALF SIZE

 
21031




20581

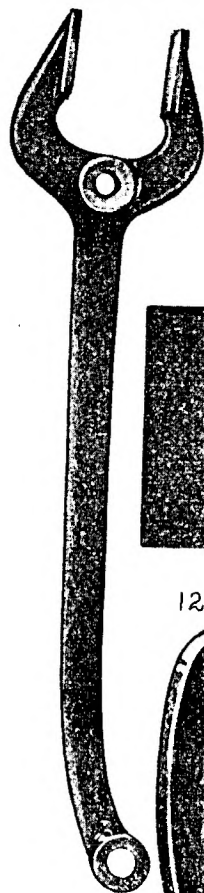

 20659

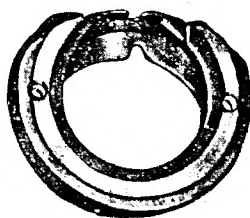


20568

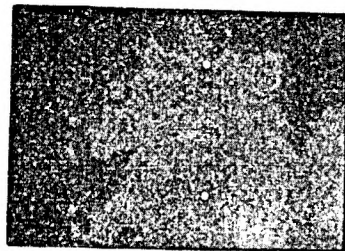 

126205



 46681

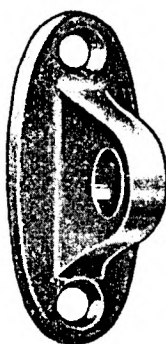

20567



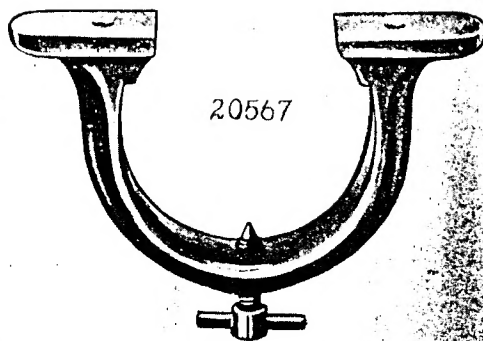 


PLATE 7436—FULL SIZE

 20783

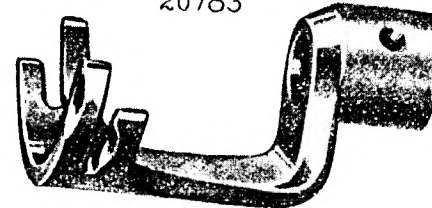

20583

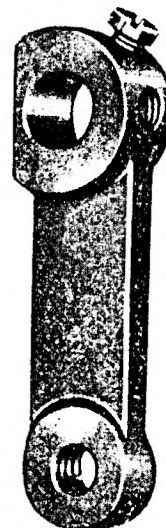 


20697




20700



 52454

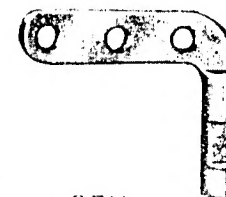

20777

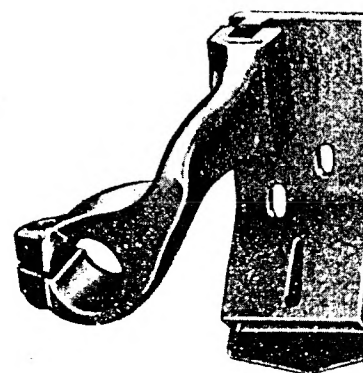 

8511

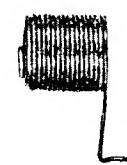 


PLATE 7437—FULL SIZE

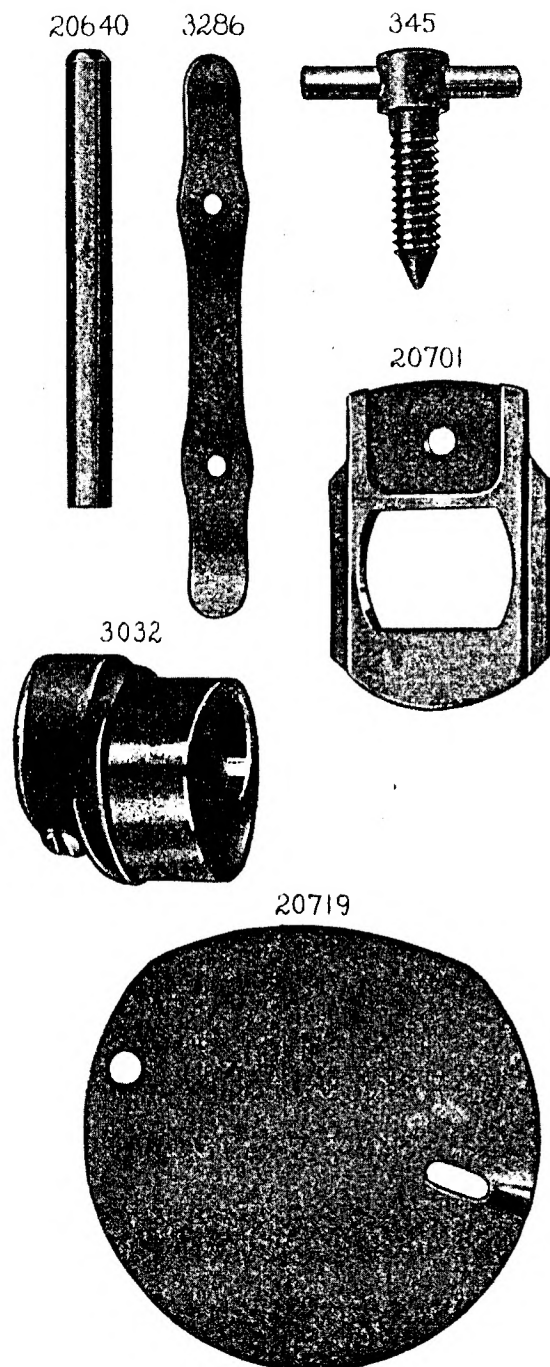 


PLATE 7438—FULL SIZE

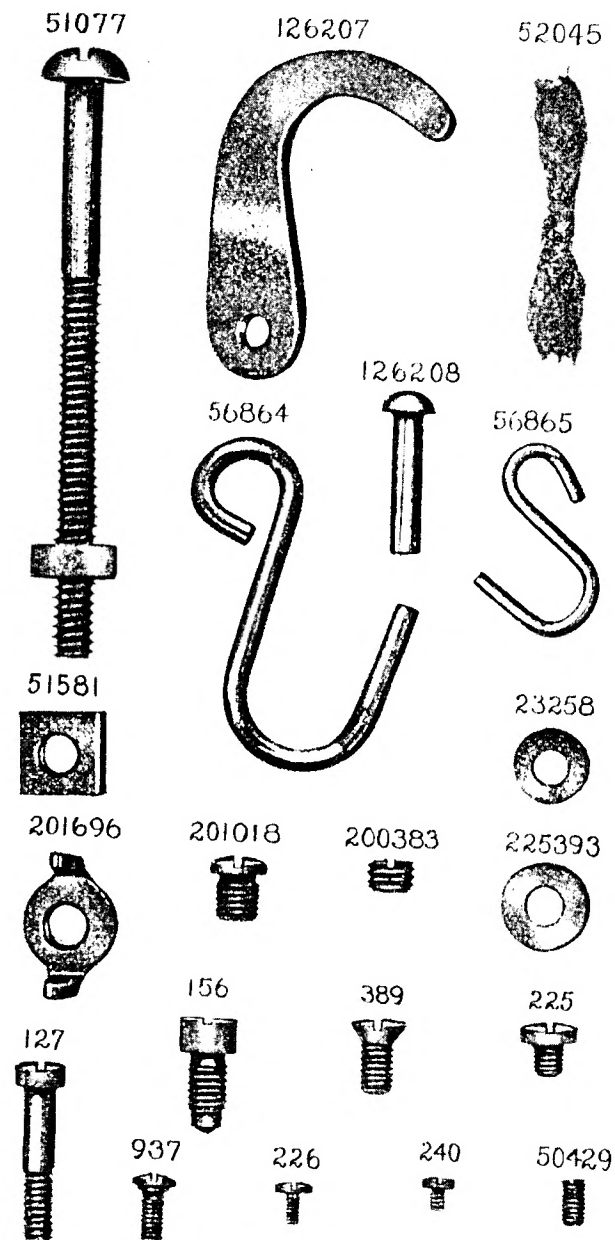 


PLATE 8523—ONE-SIXTH SIZE

